# **INSTRUCTIONS**

# MODEL AVIR-1 PULSE GENERATOR

S.N.:

#### **WARRANTY**

Avtech Electrosystems Ltd. warrants products of its manufacture to be free from defects in material and workmanship under conditions of normal use. If, within one year after delivery to the original owner, and after prepaid return by the original owner, this Avtech product is found to be defective, Avtech shall at its option repair or replace said defective item. This warranty does not apply to units which have been dissembled, modified or subjected to conditions exceeding the applicable specifications or ratings. This warranty is the extent of the obligation assumed by Avtech with respect to this product and no other warranty or guarantee is either expressed or implied.

#### TECHNICAL SUPPORT

Phone: 613-226-5772 or 1-800-265-6681 Fax: 613-226-2802 or 1-800-561-1970


E-mail: info@avtechpulse.com World Wide Web: http://www.avtechpulse.com

# **TABLE OF CONTENTS**

WARRANTY2
TABLE OF CONTENTS3
Manual Reference: /fileserver1/officefiles/instructword/avir/obsolete/AVIR- 1,edition1.doc, created June 4, 20023
Fig. 1: PULSE GENERATOR TEST ARRANGEMENT4
GENERAL OPERATING INSTRUCTIONS5
PERFORMANCE CHECK SHEET6

Manual Reference: /fileserver1/officefiles/instructword/avir/obsolete/AVIR-1,edition1.doc, created June 4, 2002

### Fig. 1: PULSE GENERATOR TEST ARRANGEMENT

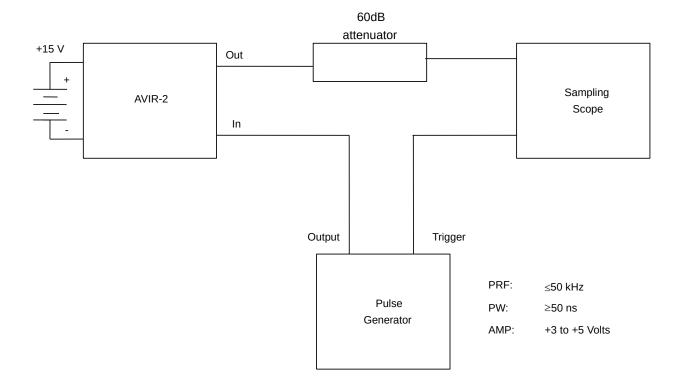

#### **GENERAL OPERATING INSTRUCTIONS**

- 1) The bandwidth capability of components and instruments used to display the pulse generator output signal (attenuators, cables, connectors, etc.) should exceed 500 MHz.
- 2) The module should be bolted to a heat sink capable of dissipating at least 7 Watts.
- 3) The use of 60 dB attenuator will insure a peak input signal to the sampling scope of less than one Volt.
- 4) In general, the source pulse generator trigger delay control should be set in the 0.1 to 1.0 us range. Other settings should be as shown in the above diagram.
- 5) WARNING: Model AVIR may fail if triggered at a PRF greater than 50 kHz.
- The output pulse width is controlled by means of the one turn potentiometer (PW). The pot should initially be set maximum clockwise and the pulse width adjusted using an oscilloscope.
- The output pulse amplitude is controlled by means of the one turn potentiometer (AMP). The pulse width may change by several nanoseconds as the output amplitude is reduced from maximum to minimum. Therefore it is convenient to first set the desired amplitude and then set the desired pulse width. Rotation of the PW pot causes the position of the falling edge of the pulse to change.
- Some properties of the output pulse may change as a function of the amplitude pot setting. For some demanding applications, it may be desirable to use a combination of external attenuators and the amplitude pot to achieve the desired output amplitude.
- 9) For additional assistance:

Tel: (613) 226-5772 Fax: (613) 226-2802

Email: info@avtechpulse.com

### PERFORMANCE CHECK SHEET