



AVTECH ELECTROSYSTEMS LTD.

NANOSECOND WAVEFORM ELECTRONICS
SINCE 1975

P.O. BOX 265
OGDENSBURG, NY
U.S.A. 13669-0265

TEL: 888-670-8729 (USA & Canada) or +1-613-686-6675 (Intl)
FAX: 800-561-1970 (USA & Canada) or +1-613-686-6679 (Intl)

info@avtechpulse.com - <http://www.avtechpulse.com/>

BOX 5120, LCD MERIVALE
OTTAWA, ONTARIO
CANADA K2C 3H4

INSTRUCTIONS

MODEL AVO-1-C

25 TO 100 AMP, 1 kHz, 20 ns

LASER DIODE DRIVER

SERIAL NUMBER: _____

WARRANTY

Avtech Electrosystems Ltd. warrants products of its manufacture to be free from defects in material and workmanship under conditions of normal use. If, within one year after delivery to the original owner, and after prepaid return by the original owner, this Avtech product is found to be defective, Avtech shall at its option repair or replace said defective item. This warranty does not apply to units which have been disassembled, modified or subjected to conditions exceeding the applicable specifications or ratings. This warranty is the extent of the obligation assumed by Avtech with respect to this product and no other warranty or guarantee is either expressed or implied.

TECHNICAL SUPPORT

Phone: 888-670-8729 (USA & Canada) or +1-613-686-6675 (International)

Fax: 800-561-1970 (USA & Canada) or +1-613-686-6679 (International)

E-mail: info@avtechpulse.com

World Wide Web: <http://www.avtechpulse.com>

TABLE OF CONTENTS

WARRANTY.....	2
TECHNICAL SUPPORT.....	2
TABLE OF CONTENTS.....	3
INTRODUCTION.....	5
SPECIFICATIONS.....	6
REGULATORY NOTES.....	7
FCC PART 18.....	7
EC DECLARATION OF CONFORMITY.....	7
DIRECTIVE 2002/95/EC (RoHS).....	8
DIRECTIVE 2002/96/EC (WEEE).....	8
INSTALLATION.....	9
VISUAL CHECK.....	9
POWER RATINGS.....	9
CONNECTION TO THE POWER SUPPLY.....	9
PROTECTION FROM ELECTRIC SHOCK.....	10
ENVIRONMENTAL CONDITIONS.....	11
FUSES.....	12
AC FUSE REPLACEMENT.....	12
DC FUSE REPLACEMENT.....	13
FUSE RATINGS.....	13
FRONT PANEL CONTROLS.....	14
REAR PANEL CONTROLS.....	16
GENERAL INFORMATION.....	17
BASIC TEST ARRANGEMENT.....	17
PULSE WIDTH CONTROL.....	17
TRIGGERING METHODS.....	18
MEASURING CURRENT WAVEFORMS.....	19
PROTECTING YOUR INSTRUMENT.....	21
DO NOT EXCEED 1 kHz.....	21
ONLY INSTALL THE OUTPUT MODULE WHEN THE POWER IS OFF.....	21
USE THE COVER PLATE.....	21
USE LOW-INDUCTANCE LOADS.....	21
MECHANICAL INFORMATION.....	22

TOP COVER REMOVAL.....	22
RACK MOUNTING.....	22
ELECTROMAGNETIC INTERFERENCE.....	22
MAINTENANCE.....	23
REGULAR MAINTENANCE.....	23
CLEANING.....	23
WIRING DIAGRAMS.....	24
WIRING OF AC POWER, STYLE 1.....	24
WIRING OF AC POWER, STYLE 2.....	25
PCB 158N - LOW VOLTAGE POWER SUPPLY, 1/3.....	26
PCB 158N - LOW VOLTAGE POWER SUPPLY, 2/3.....	27
PCB 158N - LOW VOLTAGE POWER SUPPLY, 3/3.....	28
PCB 168B - HIGH VOLTAGE DC POWER SUPPLY.....	29
PCB 126C - OSCILLATOR AND TRIGGER CIRCUIT.....	30
MAIN WIRING.....	31
PERFORMANCE CHECKSHEET.....	32

Manual Reference: /files/server1/officefiles/instructword/avo-1/avo-1-c-wh,edition2.odt.

Last modified February 29, 2024.

Copyright © 2024 Avtech Electrosystems Ltd, All Rights Reserved.

INTRODUCTION

The AVO-1-C is a high performance instrument capable of generating 25 to 100 Amps of pulsed current into low-impedance loads, at repetition rates up to 1 kHz. The pulse width is fixed at $20 \text{ ns} \pm 5 \text{ ns}$ (measured at half-power) on standard units. It is variable from 5 to 25 ns on units with the -WH option.

The AVO-1-C consists of a mainframe unit and an output module. The diode load is connected in series with a low-value current limiting resistor (R_L) between two output solder terminals (OUT and GND). The maximum amplitude is set by the series resistance. On standard units, a resistance of $R_L=1 \text{ } \Omega$ corresponds to a maximum amplitude of 100 Amps, and a resistance of $R_L=6 \text{ } \Omega$ corresponds to a maximum amplitude of 25 Amps, approximately. The output amplitude may be varied from 50% to 100% of the maximum amplitude set by the resistance by varying a one-turn dial on the front-panel.

On units with the -WH option, the half-power pulse width may be varied from 5 ns to 25 ns by varying the capacitance (C_L) between the W and GND terminals on the output module, from 500 pF to 10000 pF approximately. The capacitors should be rated for 400V. Silver mica capacitors are recommended. Amplitude control is slightly different for -WH units. For -WH units, R_L varies from 0.22 to 2.2 Ω . The amplitude is also affected by the value of C_L . A 100 Amp, 5 ns pulse is obtained using $C_L \approx 500 \text{ pF}$ and $R_L \approx 0.22 \text{ } \Omega$. A 100 Amp, 25 ns pulse is obtained using $C_L \approx 10000 \text{ pF}$ and $R_L \approx 2.2 \text{ } \Omega$. Some tweaking of C_L and R_L may be required to obtain the ideal waveshape.

This instrument is intended for use in research, development, test and calibration laboratories by qualified personnel.

SPECIFICATIONS

Model:	AVO-1-C ¹	
Amplitude:	25 - 100 Amps (variable by an external series resistor R ² and one-turn control)	
Pulse width: (at half-power)	20 ± 5 ns (5 to 25 ns option) ³	
PRF:	0 to 1 kHz	
Polarity ⁴ :	Positive or negative or both (specify)	
Propagation delay:	≤ 50 ns (Ext trig in to pulse out)	
Jitter:	± 100 ps (Ext trig in to pulse out)	
Trigger required:	Ext trig mode: +5 Volt, 50 to 500 ns (TTL)	
Sync delay:	Sync out to pulse out: Variable 0 to 200 ns	
Sync output:	+5 Volts, 200 ns, will drive 50 Ohm loads	
Connectors:	Out: Solder terminals Trig: BNC	
Power requirements:	100 - 240 Volts, 50 - 60 Hz	
Dimensions: (H x W x D)	Mainframe:	100 mm x 215 mm x 375 mm (3.9" x 8.5" x 14.8")
	Output module:	28 mm x 36 mm x 58 mm (1.1" x 1.4" x 2.3")
Chassis material:	Mainframe:	anodized aluminum, with blue plastic trim
	Output module:	cast aluminum, blue enamel

- 1) -C suffix indicates stand-alone lab instrument with internal clock and line powering. No suffix indicates miniature module requiring DC power and external trigger. (See page 112 for additional details of the basic instrument formats).
- 2) 1 Ohm < R < 6 Ohm for standard units. 0.22 Ohm < R < 2.2 Ohm for units with the -WH option.
- 3) For the variable pulse width option add suffix -WH. Pulse width is controlled by soldering silver mica capacitors (500 to 10000 pF, 400V) to solder terminals on the output module.
- 4) Indicate desired polarity by suffixing model number with -P or -N (i.e. positive or negative).

REGULATORY NOTES

FCC PART 18

This device complies with part 18 of the FCC rules for non-consumer industrial, scientific and medical (ISM) equipment.

This instrument is enclosed in a rugged metal chassis and uses a filtered power entry module. The main output signal is provided on a shielded connector that is intended to be used with shielded coaxial cabling and a shielded load. Under these conditions, the interference potential of this instrument is low.

If interference is observed, check that appropriate well-shielded cabling is used on the output connectors. Contact Avtech (info@avtechpulse.com) for advice if you are unsure of the most appropriate cabling. Also, check that your load is adequately shielded. It may be necessary to enclose the load in a metal enclosure.

If any of the connectors on the instrument are unused, they should be covered with shielded metal "dust caps" to reduce the interference potential.

This instrument does not normally require regular maintenance to minimize interference potential. However, if loose hardware or connectors are noted, they should be tightened. Contact Avtech (info@avtechpulse.com) if you require assistance.

EC DECLARATION OF CONFORMITY



We Avtech Electrosystems Ltd.
 P.O. Box 5120, LCD Merivale
 Ottawa, Ontario
 Canada K2C 3H4

declare that this pulse generator meets the intent of Directive 89/336/EEC for Electromagnetic Compatibility. Compliance pertains to the following specifications as listed in the official Journal of the European Communities:

EN 50081-1 Emission

EN 50082-1 Immunity

and that this pulse generator meets the intent of the Low Voltage Directive 72/23/EEC as amended by 93/68/EEC. Compliance pertains to the following specifications as listed in the official Journal of the European Communities:

EN 61010-1:2001 Safety requirements for electrical equipment for measurement, control, and laboratory use

DIRECTIVE 2002/95/EC (RoHS)


This instrument is exempt from Directive 2002/95/EC of the European Parliament and of the Council of 27 January 2003 on the Restriction of the use of certain Hazardous Substances (RoHS) in electrical and electronic equipment. Specifically, Avtech instruments are considered "Monitoring and control instruments" (Category 9) as defined in Annex 1A of Directive 2002/96/EC. The Directive 2002/95/EC only applies to Directive 2002/96/EC categories 1-7 and 10, as stated in the "Article 2 - Scope" section of Directive 2002/95/EC.

DIRECTIVE 2002/96/EC (WEEE)

European customers who have purchased this equipment directly from Avtech will have completed a "WEEE Responsibility Agreement" form, accepting responsibility for WEEE compliance (as mandated in Directive 2002/96/EC of the European Union and local laws) on behalf of the customer, as provided for under Article 9 of Directive 2002/96/EC.

Customers who have purchased Avtech equipment through local representatives should consult with the representative to determine who has responsibility for WEEE compliance. Normally, such responsibilities will lie with the representative, unless other arrangements (under Article 9) have been made.

Requirements for WEEE compliance may include registration of products with local governments, reporting of recycling activities to local governments, and financing of recycling activities.

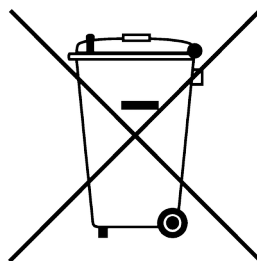

INSTALLATION

VISUAL CHECK

After unpacking the instrument mainframe and the transformer module, examine to ensure that they have not been damaged in shipment. Visually inspect all connectors, knobs, and handles. Confirm that a power cord and an instrumentation manual (this manual), are with the instrument. If the instrument has been damaged, file a claim immediately with the company that transported the instrument.

POWER RATINGS


This instrument is intended to operate from 100 - 240 V, 50 - 60 Hz.

The maximum power consumption is 57 Watts. Please see the “FUSES” section for information about the appropriate AC and DC fuses.

This instrument is an “Installation Category II” instrument, intended for operation from a normal single-phase supply.

CONNECTION TO THE POWER SUPPLY


An IEC-320 three-pronged recessed male socket is provided on the back panel for AC power connection to the instrument. One end of the detachable power cord that is supplied with the instrument plugs into this socket. The other end of the detachable power cord plugs into the local mains supply. Use only the cable supplied with the instrument. The mains supply must be earthed, and the cord used to connect the instrument to the mains supply must provide an earth connection. (The supplied cord does this.)

 Warning: Failure to use a grounded outlet may result in injury or death due to electric shock. This product uses a power cord with a ground connection. It must be connected to a properly grounded outlet. The instrument chassis is connected to the ground wire in the power cord.

The table below describes the power cord that is normally supplied with this instrument, depending on the destination region:

Destination Region	Description	Option	Manufacturer	Part Number
United Kingdom, Hong Kong, Singapore, Malaysia	BS 1363, 230V, 50 Hz	-AC00	Qualtek ¹	370001-E01
Australia, New Zealand	AS 3112:2000, 230-240V, 50 Hz	-AC01	Qualtek ¹	374003-A01
Continental Europe, Korea, Indonesia, Russia	European CEE 7/7 "Schuko" 230V, 50 Hz	-AC02	Qualtek ¹	364002-D01
North America, Taiwan	NEMA 5-15, 120V, 60 Hz	-AC03	Qualtek ¹	312007-01
Switzerland	SEV 1011, 230V, 50 Hz	-AC06	Qualtek ¹	378001-E01
South Africa, India	SABS 164-1, 220-250V, 50 Hz	-AC17	Volex ²	2131H 10 C3
Japan	JIS 8303, 100V, 50-60 Hz	-AC18	Qualtek ¹	397002-01
Israel	SI 32, 220V, 50 Hz	-AC19	Qualtek ¹	398001-01
China	GB 1002-1, 220V, 50 Hz	-AC22	Volex ²	2137H 10 C3

PROTECTION FROM ELECTRIC SHOCK

 Operators of this instrument must be protected from electric shock at all times. The owner must ensure that operators are prevented access and/or are insulated from every connection point. In some cases, connections must be exposed to potential human contact. Operators must be trained to protect themselves from the risk of electric shock. This instrument is intended for use by qualified personnel who recognize shock hazards and are familiar with safety precautions required to avoid possibly injury. In particular, operators should:

1. Keep exposed high-voltage wiring to an absolute minimum.
2. Wherever possible, use shielded connectors and cabling.
3. Connect and disconnect loads and cables only when the instrument is turned off.
4. Keep in mind that all cables, connectors, oscilloscope probes, and loads must have an appropriate voltage rating.
5. Do not attempt any repairs on the instrument, beyond the fuse replacement procedures described in this manual. Contact Avtech technical support (see page 2 for contact information) if the instrument requires servicing. Service is to be performed solely by qualified service personnel.


ENVIRONMENTAL CONDITIONS

This instrument is intended for use under the following conditions:

1. indoor use;
2. altitude up to 2 000 m;
3. temperature 5 °C to 40 °C;
4. maximum relative humidity 80 % for temperatures up to 31 °C decreasing linearly to 50 % relative humidity at 40 °C;
5. Mains supply voltage fluctuations up to ± 10 % of the nominal voltage;
6. no pollution or only dry, non-conductive pollution.

FUSES

This instrument contains four fuses. All are accessible from the rear-panel. Two protect the AC prime power input, and two protect the internal DC power supplies. The locations of the fuses on the rear panel are shown in the figure below:

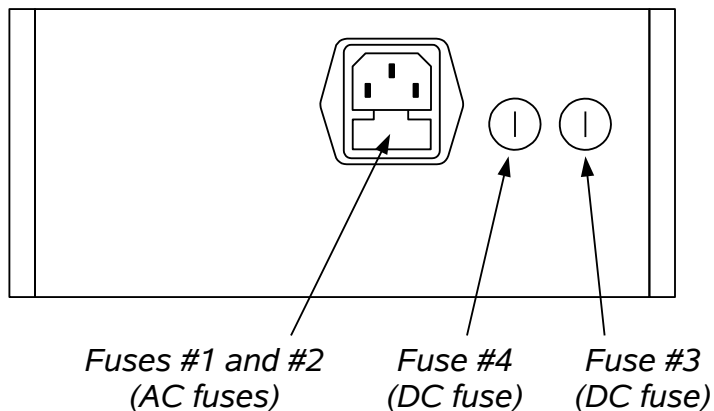

AC FUSE REPLACEMENT

To physically access the AC fuses, the power cord must be detached from the rear panel of the instrument. The fuse drawer may then be extracted using a small flat-head screwdriver, as shown below:



DC FUSE REPLACEMENT

The DC fuses may be replaced by inserting the tip of a flat-head screwdriver into the fuse holder slot, and rotating the slot counter-clockwise. The fuse and its carrier will then pop out.

FUSE RATINGS


The following table lists the required fuses:

Fuses	Nominal Mains Voltage	Rating	Case Size	Recommended Replacement Part	
				Littelfuse Part Number	Digi-Key Stock Number
#1, #2 (AC)	100-240V	0.5A, 250V, Time-Delay	5×20 mm	0218.500HXP	F2416-ND
#3 (DC)	N/A	0.5A, 250V, Time-Delay	5×20 mm	0218.500HXP	F2416-ND
#4 (DC)	N/A	0.5A, 250V, Time-Delay	5×20 mm	0218.500HXP	F2416-ND

The recommended fuse manufacturer is Littelfuse (<http://www.littelfuse.com>).

Replacement fuses may be easily obtained from Digi-Key (<http://www.digikey.com>) and other distributors.

FRONT PANEL CONTROLS

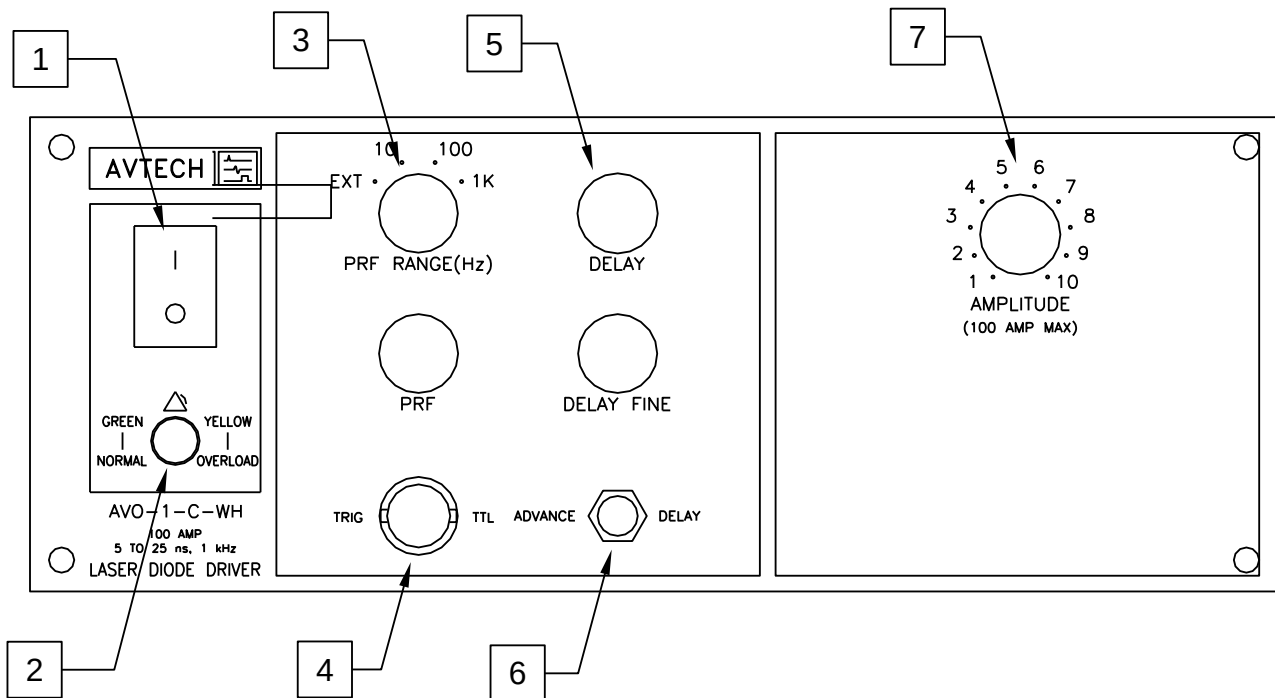

- 1) POWER Switch. This is the main power switch. When turning the instrument on, there may be a delay of several seconds before the instrument appears to respond.
- 2) OVERLOAD Indicator. When the instrument is powered, this indicator is normally green, indicating normal operation. If this indicator is yellow, an internal automatic overload protection circuit has been tripped. If the unit is overloaded (by operating at an exceedingly high duty cycle or by operating into a very low impedance), the protective circuit will disable the output of the instrument and turn the indicator light yellow. The light will stay yellow (i.e. output disabled) for about 5 seconds after which the instrument will attempt to re-enable the output (i.e. light green) for about 1 second. If the overload condition persists, the output will be disabled again (i.e. light yellow) for another 5 seconds. If the overload condition has been removed, the instrument will resume normal operation.

This overload indicator may flash yellow briefly at start-up. This is not a cause for concern.

- 3) PRF Range Switch. This switch sets the pulse repetition frequency (PRF) range of the internal oscillator. The marked value of each position is the upper limit of the 10:1 range, approximately. The vernier dial directly below the switch varies the PRF within the set range.

If this switched is set to the “EXT” position, the instrument is triggered by a signal applied to the TRIG connector, rather than by the internal oscillator.

- 4) TRIG Connector. When the PRF Range Switch is set to one of the four internal oscillator ranges, this connector is an output, which supplies a 2V, 200 ns wide pulse for each trigger event. This output may be used to trigger oscilloscopes or other equipment.

When the PRF Range Switch is set to “EXT”, the instrument is triggered by a TTL pulse applied to this connector. The pulse must be at least 50 ns wide. The input impedance of this input is 1 k Ω .


Depending on the length of cable attached to this input, and the source driving it, it may be desirable to add a coaxial 50 Ohm terminator to this input to provide a proper transmission line termination. The Pasternack (www.pasternack.com) PE6008-50 BNC feed-thru 50 Ohm terminator is suggested for this purpose. For systems using SMA connectors, the PE6026 SMA feed-thru 50 Ohm terminator is suggested.

- 5) Delay Controls. When the PRF Range Switch is set to one of the four internal oscillator ranges, the main output is advanced or delayed relative to the TRIG output pulse (item 3). The delay is variable up to 500 ns, approximately, using the DELAY and DELAY FINE dials.
- 6) Advance/Delay Switch. When the PRF Range Switch is set to one of the four internal oscillator ranges, this switch determines whether the TRIG output precedes the main output (ADVANCE mode), or whether the TRIG output occur after the main output (DELAY mode).
- 7) Amplitude Control. This dial controls the pulse amplitude, over a 2:1 range approximately.

The maximum amplitude is set by the series resistance. On standard units, a resistance of $R_L=1 \Omega$ corresponds to a maximum amplitude of 100 Amps, and a resistance of $R_L=6 \Omega$ corresponds to a maximum amplitude of 25 Amps, approximately. The output amplitude may be varied from 50% to 100% of the maximum amplitude set by the resistance by varying this dial on the front-panel.

Amplitude control is slightly different for units for the -WH option. For -WH units, R_L varies from 0.22 to 2.2 Ω . The amplitude is also affected by the value of C_L . A 100 Amp, 5 ns pulse is obtained using $C_L \approx 500$ pF and $R_L \approx 0.22 \Omega$. A 100 Amp, 25 ns pulse is obtained using $C_L \approx 10000$ pF and $R_L \approx 2.2 \Omega$. The output amplitude may be varied from 50% to 100% of the maximum amplitude set by the resistance by varying this dial on the front-panel.

REAR PANEL CONTROLS

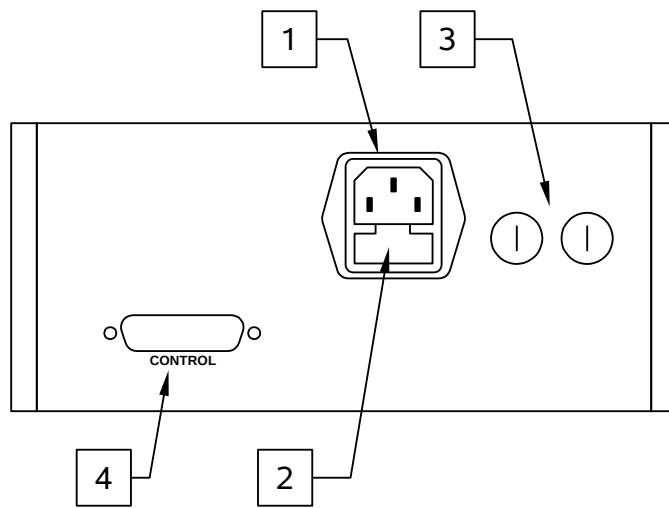


1. AC POWER INPUT. An IEC-320 C14 three-pronged recessed male socket is provided on the back panel for AC power connection to the instrument. One end of the detachable power cord that is supplied with the instrument plugs into this socket.
2. AC FUSE DRAWER. The two fuses that protect the AC input are located in this drawer. Please see the “FUSES” section of this manual for more information.
3. DC FUSES. These two fuses protect the internal DC power supplies. Please see the “FUSES” sections of this manual for more information.
4. CONTROL CONNECTOR. The 5-foot-long 25-pin cable to the output module is connected to the mainframe at this point. The cable must always be connected before power is turned on.

GENERAL INFORMATION


BASIC TEST ARRANGEMENT

The AVO-1-C output module must be connected to the mainframe, using the supplied 5-foot-long 25-pin cable. (If this cable is lost, any 5-foot-long 25-pin “straight-through” cable will do.) Always connect this cable when the instrument is turned off.

The basic test arrangement is shown below:

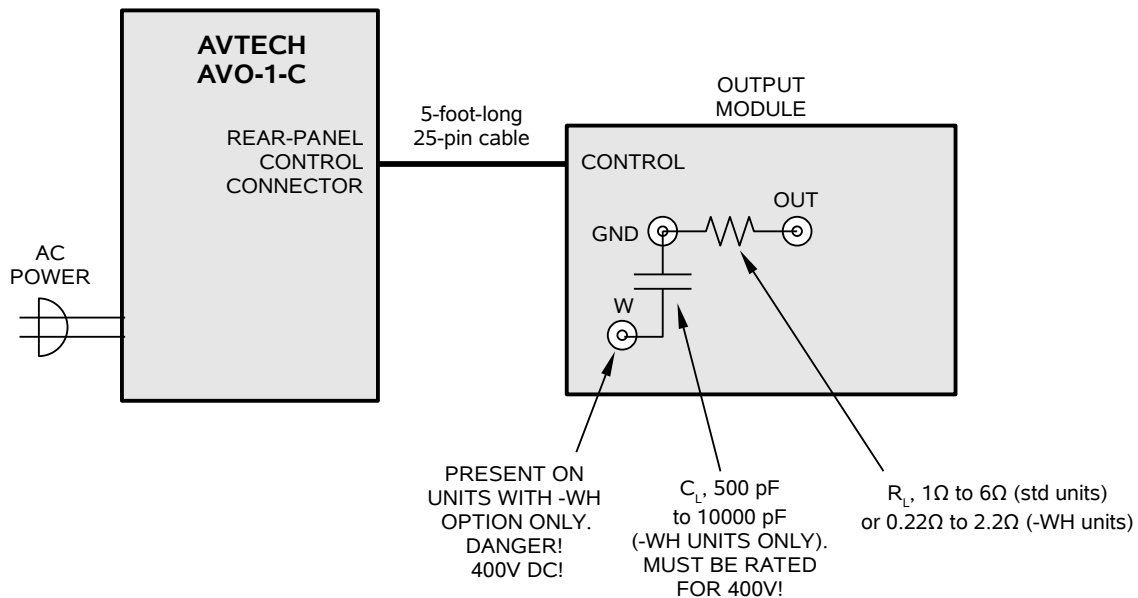

To access the OUT, GND, and W (for -WH units) terminals, the aluminum cover plate must be removed, by unscrewing it from the bottom of the output module. The unit must be turned off and unplugged when the cover plate is removed.

 Caution: Voltages as high as 400V may be present on the OUT and W terminals. Avoid touching these terminals. Do not operate the instrument without the output module cover plate installed. Only changed R_L and C_L when the unit is turned off.

A diode may be installed in series with R_L .

PULSE WIDTH CONTROL

On standard units, the output pulse width is not adjustable. On units with the -WH option, the pulse width may be varied from 5 ns to 25 ns by adjusting C_L from 500 pF to 10000 pF. The capacitors should be rated for 400V. Silver mica capacitors are

recommended. Varying C_L also affects the pulse amplitude. The pulse width, maximum amplitude, C_L and R_L are roughly related as follows:


Desired output:	5 ns, 100 Amps	25 ns, 100 Amps
C_L :	500 pF	10000 pF
R_L :	0.22 Ω	2.2 Ω

TRIGGERING METHODS


This instrument can be triggered by its own internal clock or by an external TTL trigger signal. When triggered internally, two output channels respond to the trigger: OUT and SYNC.

- OUT. This is the main output.
- TRIG. The TRIG pulse is a fixed-width TTL-level reference pulse used to trigger oscilloscopes or other measurement systems.


When the ADVANCE/DELAY switch is set to “ADVANCE”, the TRIG output precedes the main output. These pulses are illustrated below:

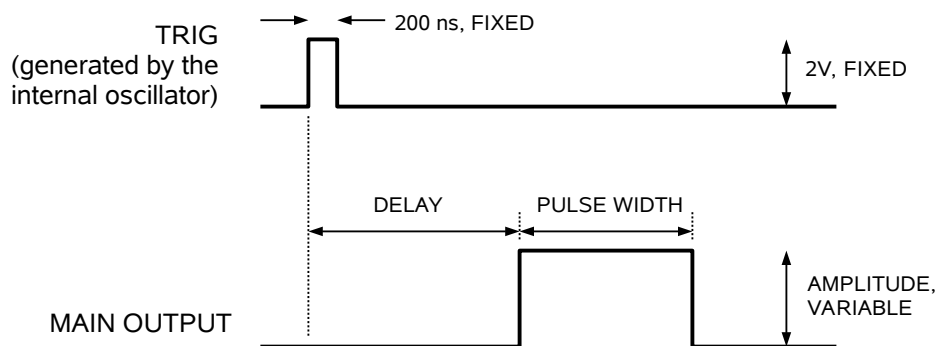

When the ADVANCE/DELAY switch is set to “DELAY”, the TRIG output occurs after the main output. This is illustrated below:

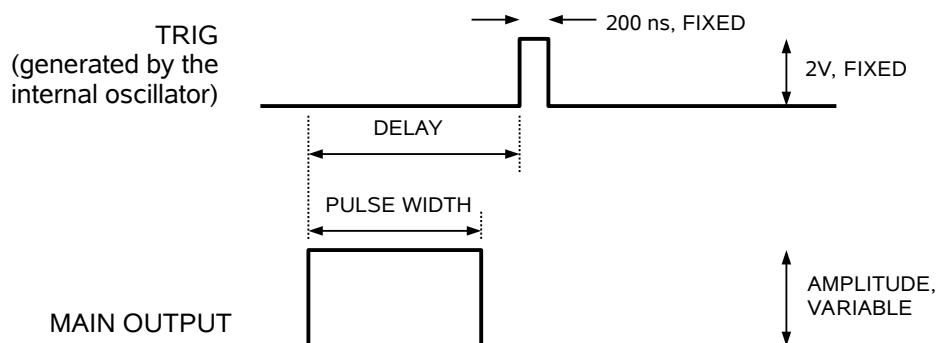


When triggered externally, the TRIG connector acts as an input. The delay controls do not function in this mode. This illustrated below:

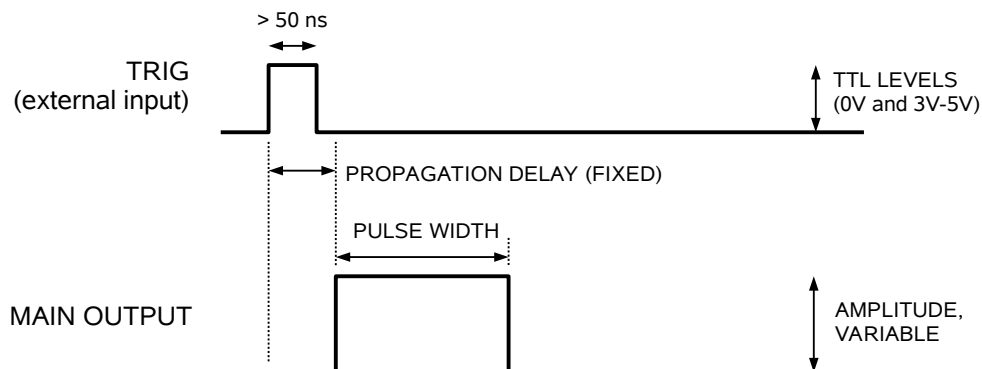

MEASURING CURRENT WAVEFORMS


Two methods are recommended for observing the output current waveforms.

The first method is to use a 50Ω coaxial cable connected to an oscilloscope with 50Ω input impedance. The 50Ω input impedance is significantly larger than the typical load impedance (0.22 to 2.2Ω , or 1 to 6Ω), so it will not introduce significant distortions. This method is illustrated below:

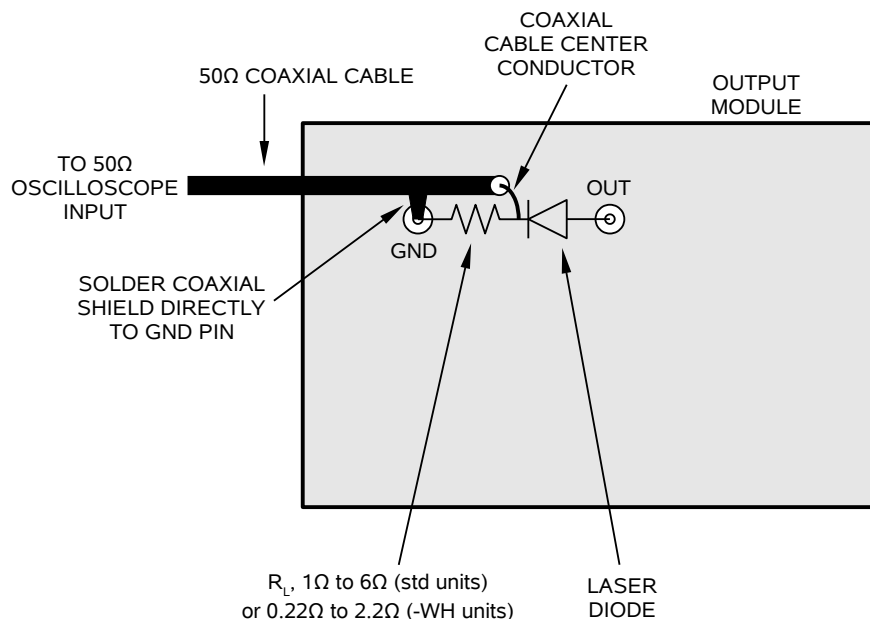

The second method is to use an ultra-miniature current probe, such as the Integrated Sensor Technologies Model 711S (<http://www.isensortech.com/>). This probe can be

conveniently slid onto the OUT terminal, leaving ample room for the devices under test to be connected. This method is illustrated below:

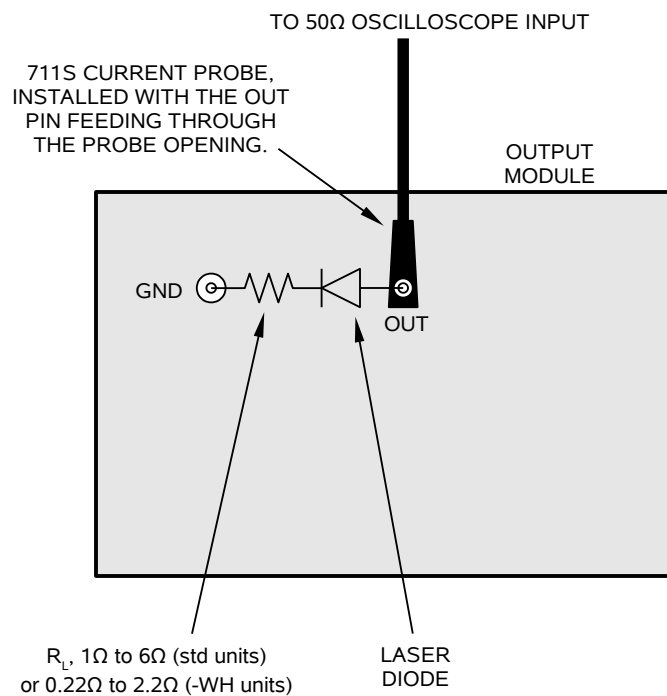

PROTECTING YOUR INSTRUMENT

DO NOT EXCEED 1 kHz


The output stage may be damaged if triggered by an external signal at a pulse repetition frequency greater than 1 kHz.

ONLY INSTALL THE OUTPUT MODULE WHEN THE POWER IS OFF

Always connect the cable between the two CONTROL connectors when the instrument is turned off.

USE THE COVER PLATE

To access the OUT, GND, and W (for -WH units) terminals, the aluminum cover plate must be removed, by unscrewing it from the bottom of the output module. The unit must be turned off and unplugged when the cover plate is removed.

 Caution: Voltages as high as 400V may be present on the OUT and W terminals. Avoid touching these terminals. Do not operate the instrument without the output module cover plate installed. Only changed R_L and C_L when the unit is turned off.


USE LOW-INDUCTANCE LOADS

Lenz's Law predicts that for an inductive voltage spike will be generated when the current through an inductance changes. Specifically, $V_{SPIKE} = L \times dI_{LOAD}/dt$, where L is the inductance, I_{LOAD} is the load current change, and t is time. For this reason, it is important to keep any parasitic inductance in the load low. This means keeping wiring short (i.e., a few millimeters), and using low inductance components. In particular, wire-wound resistors should be avoided.


MECHANICAL INFORMATION

TOP COVER REMOVAL

If necessary, the interior of the instrument may be accessed by removing the four Phillips screws on the top panel. With the four screws removed, the top cover may be slid back (and off).

 Always disconnect the power cord and allow the instrument to sit unpowered for 10 minutes before opening the instrument. This will allow any internal stored charge to discharge.

There are no user-adjustable internal circuits. For repairs other than fuse replacement, please contact Avtech (info@avtechpulse.com) to arrange for the instrument to be returned to the factory for repair. Service is to be performed solely by qualified service personnel.

 Caution: High voltages are present inside the instrument during normal operation. Do not operate the instrument with the cover removed.

RACK MOUNTING

A rack mounting kit is available. The -R5 rack mount kit may be installed after first removing the one Phillips screw on the side panel adjacent to the front handle.

ELECTROMAGNETIC INTERFERENCE

To prevent electromagnetic interference with other equipment, all used outputs should be connected to shielded loads using shielded coaxial cables. Unused outputs should be terminated with shielded coaxial terminators or with shielded coaxial dust caps, to prevent unintentional electromagnetic radiation. All cords and cables should be less than 3m in length.

MAINTENANCE

REGULAR MAINTENANCE

This instrument does not require any regular maintenance.


On occasion, one or more of the four rear-panel fuses may require replacement. All fuses can be accessed from the rear panel. See the “FUSES” section for details.

CLEANING


If desired, the interior of the instrument may be cleaned using compressed air to dislodge any accumulated dust. (See the “TOP COVER REMOVAL” section for instructions on accessing the interior.) No other cleaning is recommended.

WIRING DIAGRAMS


WIRING OF AC POWER, STYLE 1

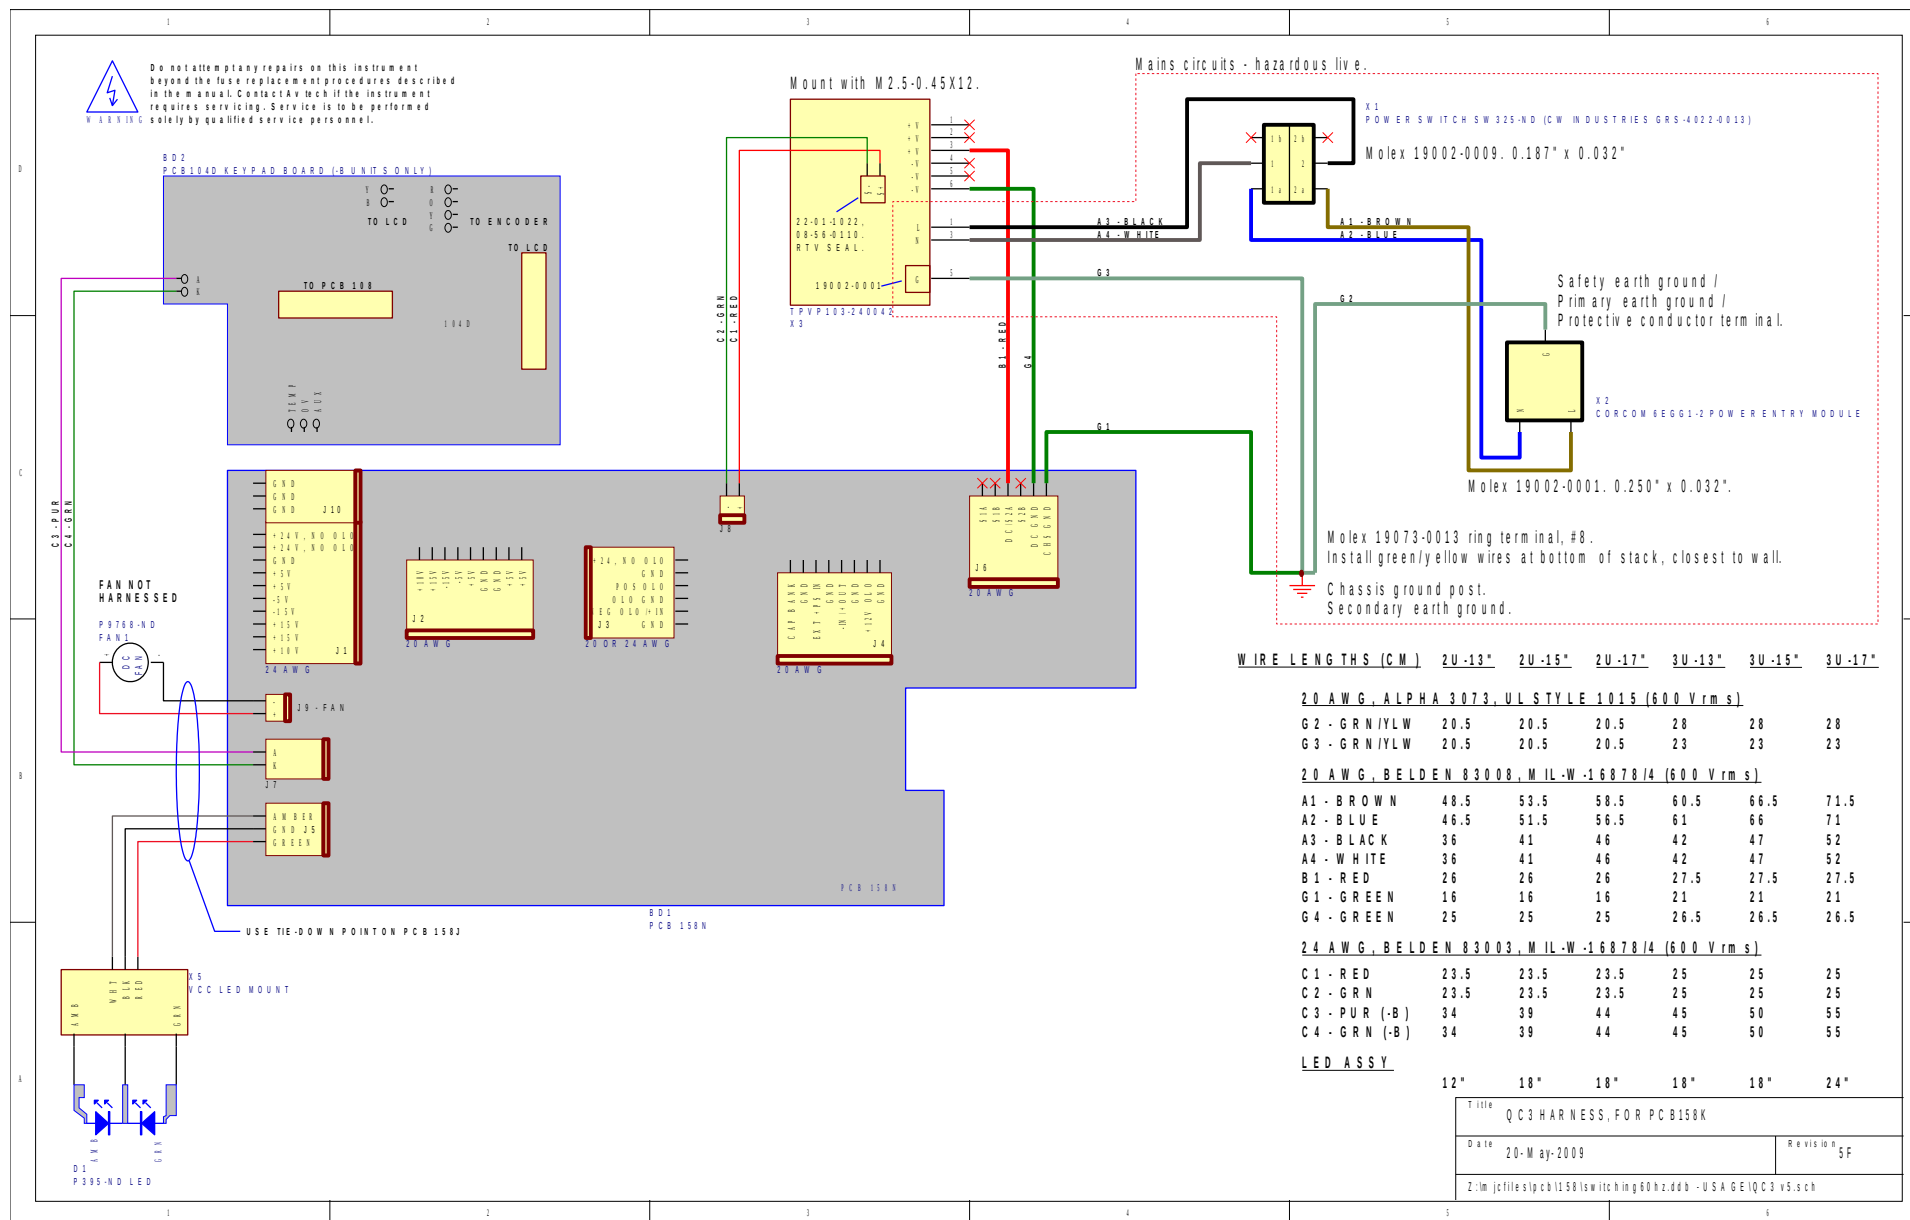

WIRING OF AC POWER, STYLE 2

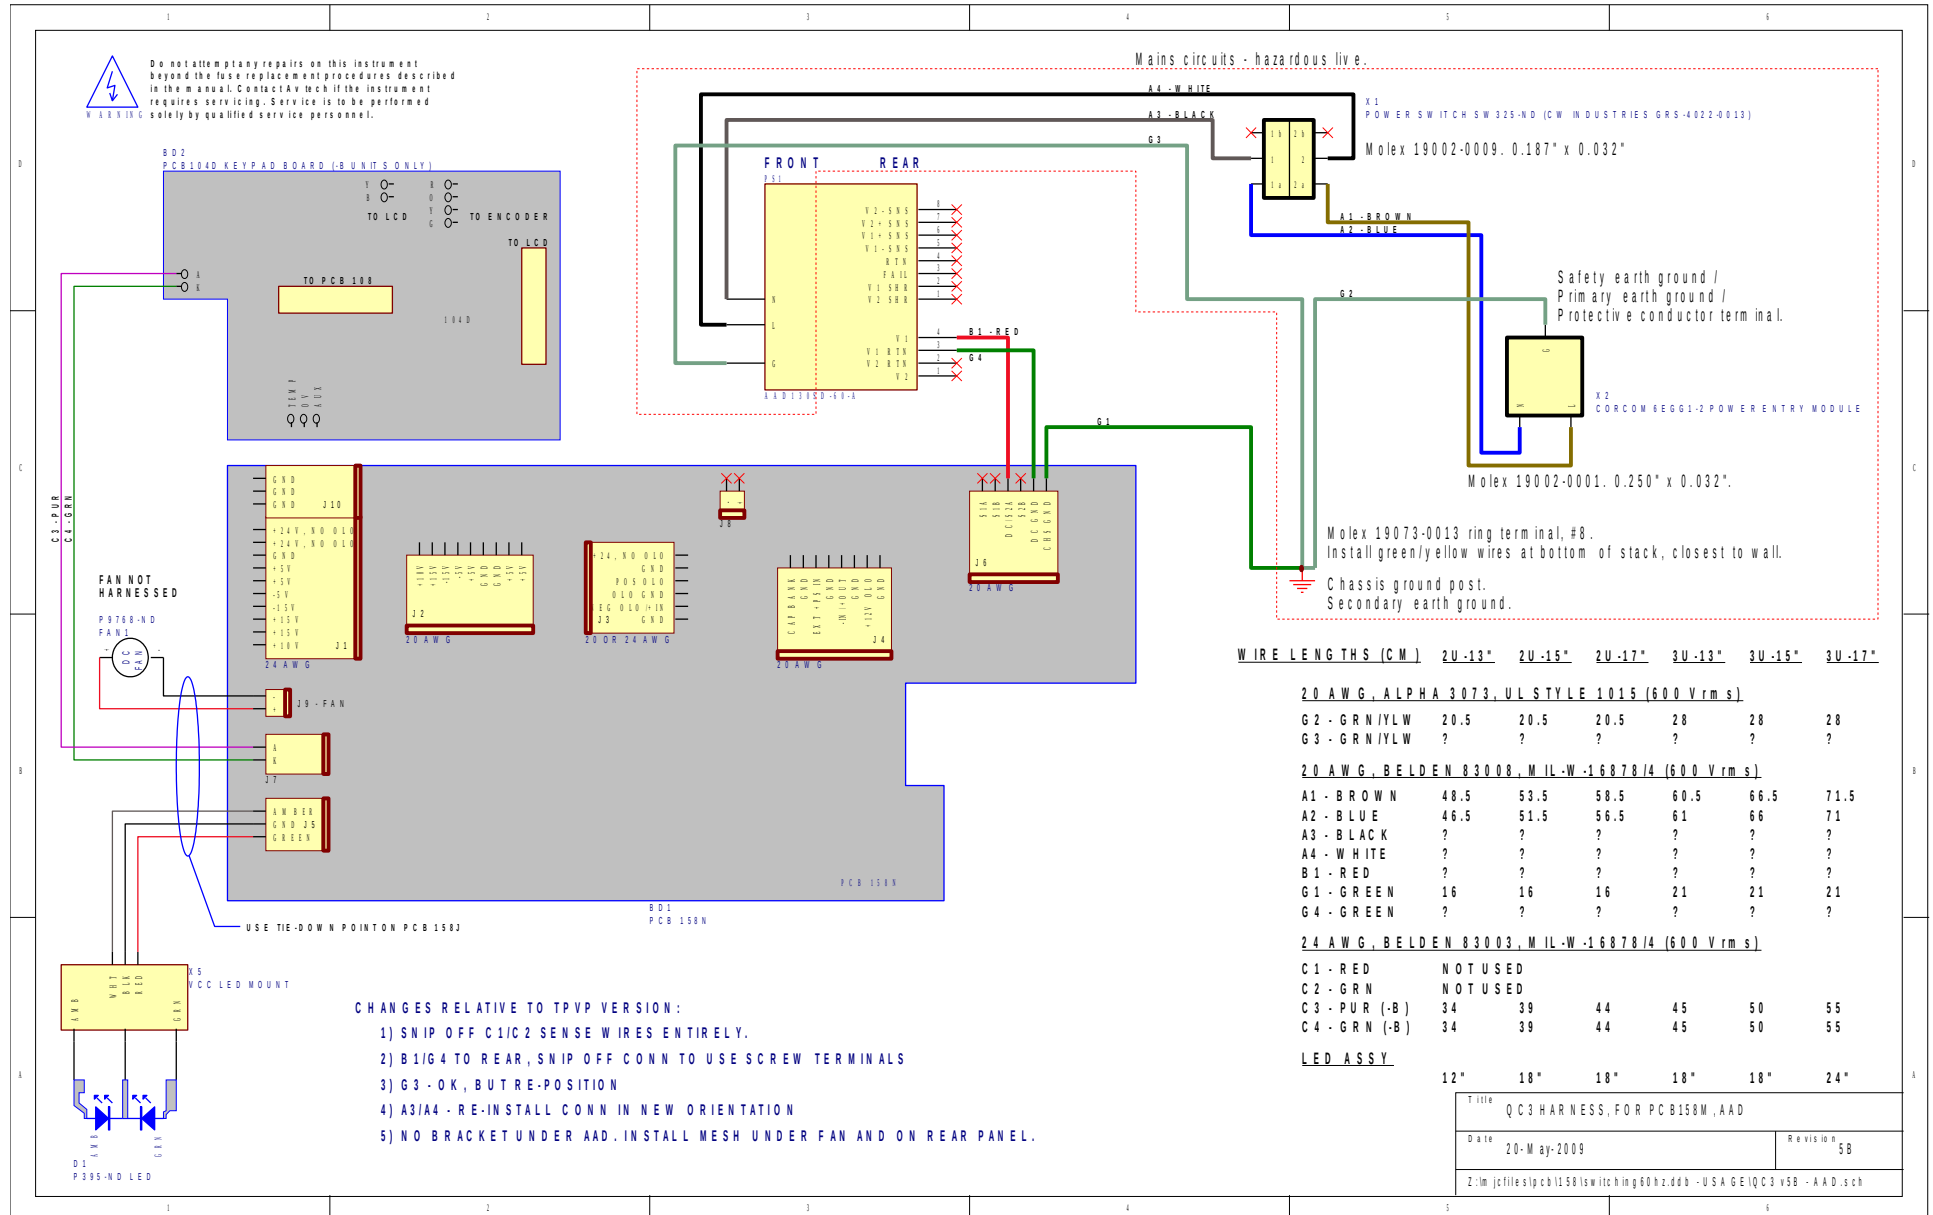


PCB 158N - LOW VOLTAGE POWER SUPPLY, 1/3

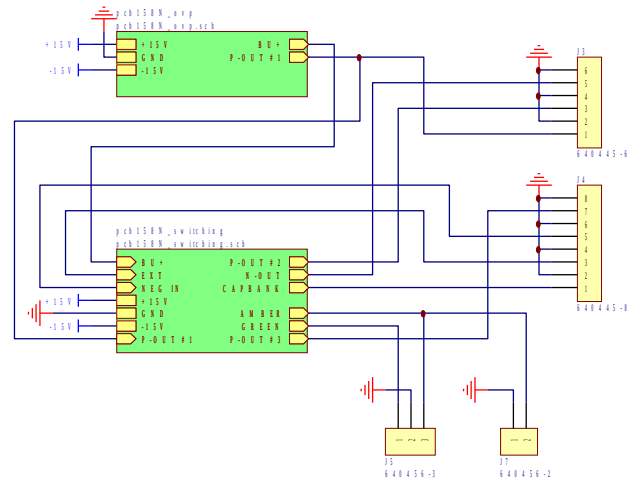


Title		LOW VOLTAGE DC/DC POWER SUPPLY
Date	12-Dec-2008	Revision
Z:\m\jcf\files\pcb158\switching\60hz.ddb - 158N\pcb158N.sch		

PCB 168B - HIGH VOLTAGE DC POWER SUPPLY

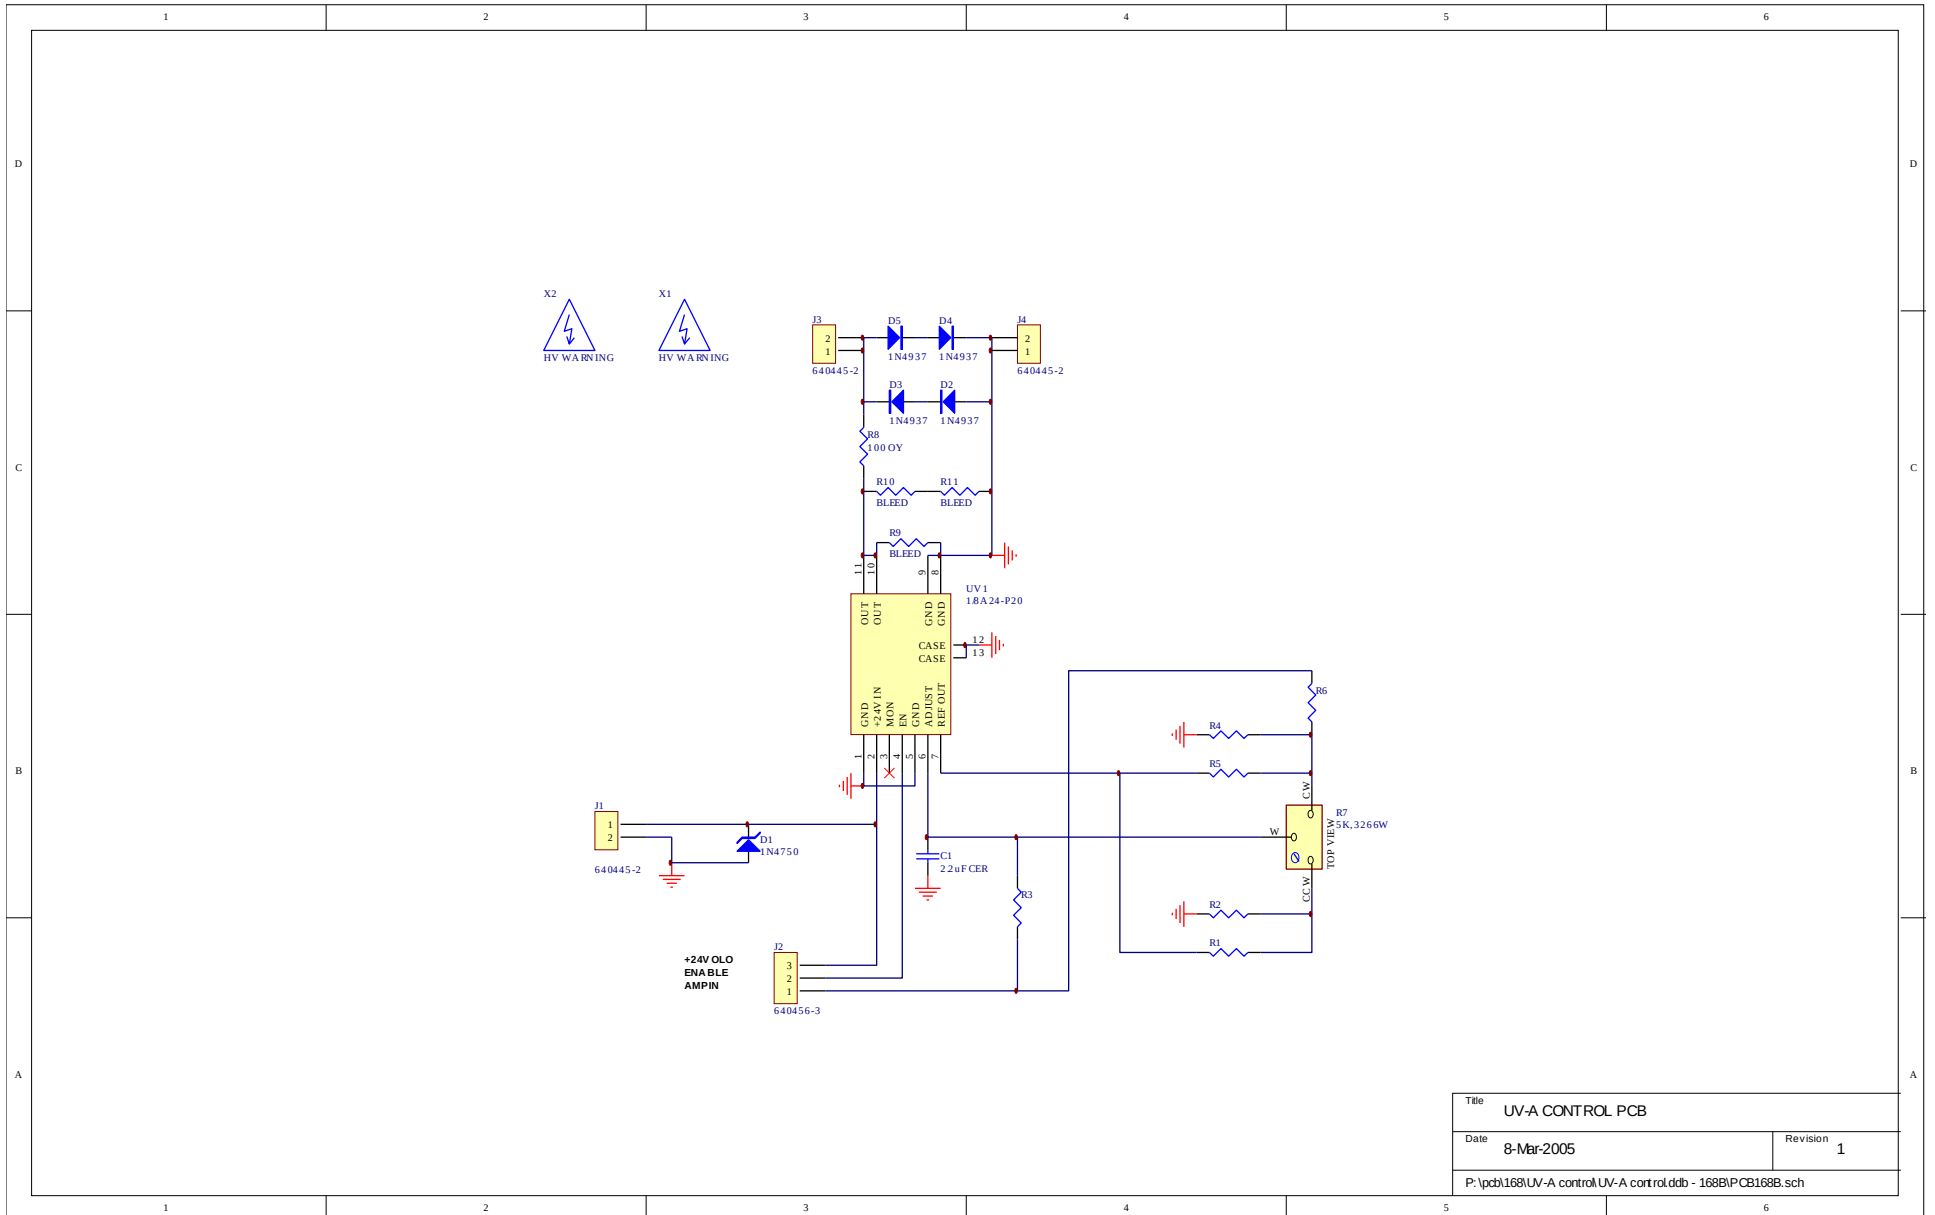

Title UV-A CONTROL PCB	
Date 8-Mar-2005	Revision 1
P:\pcb\168\UV-A control\UV-A control.dtb - 168B\PCB168B.sch	

PCB 126C - OSCILLATOR AND TRIGGER CIRCUIT

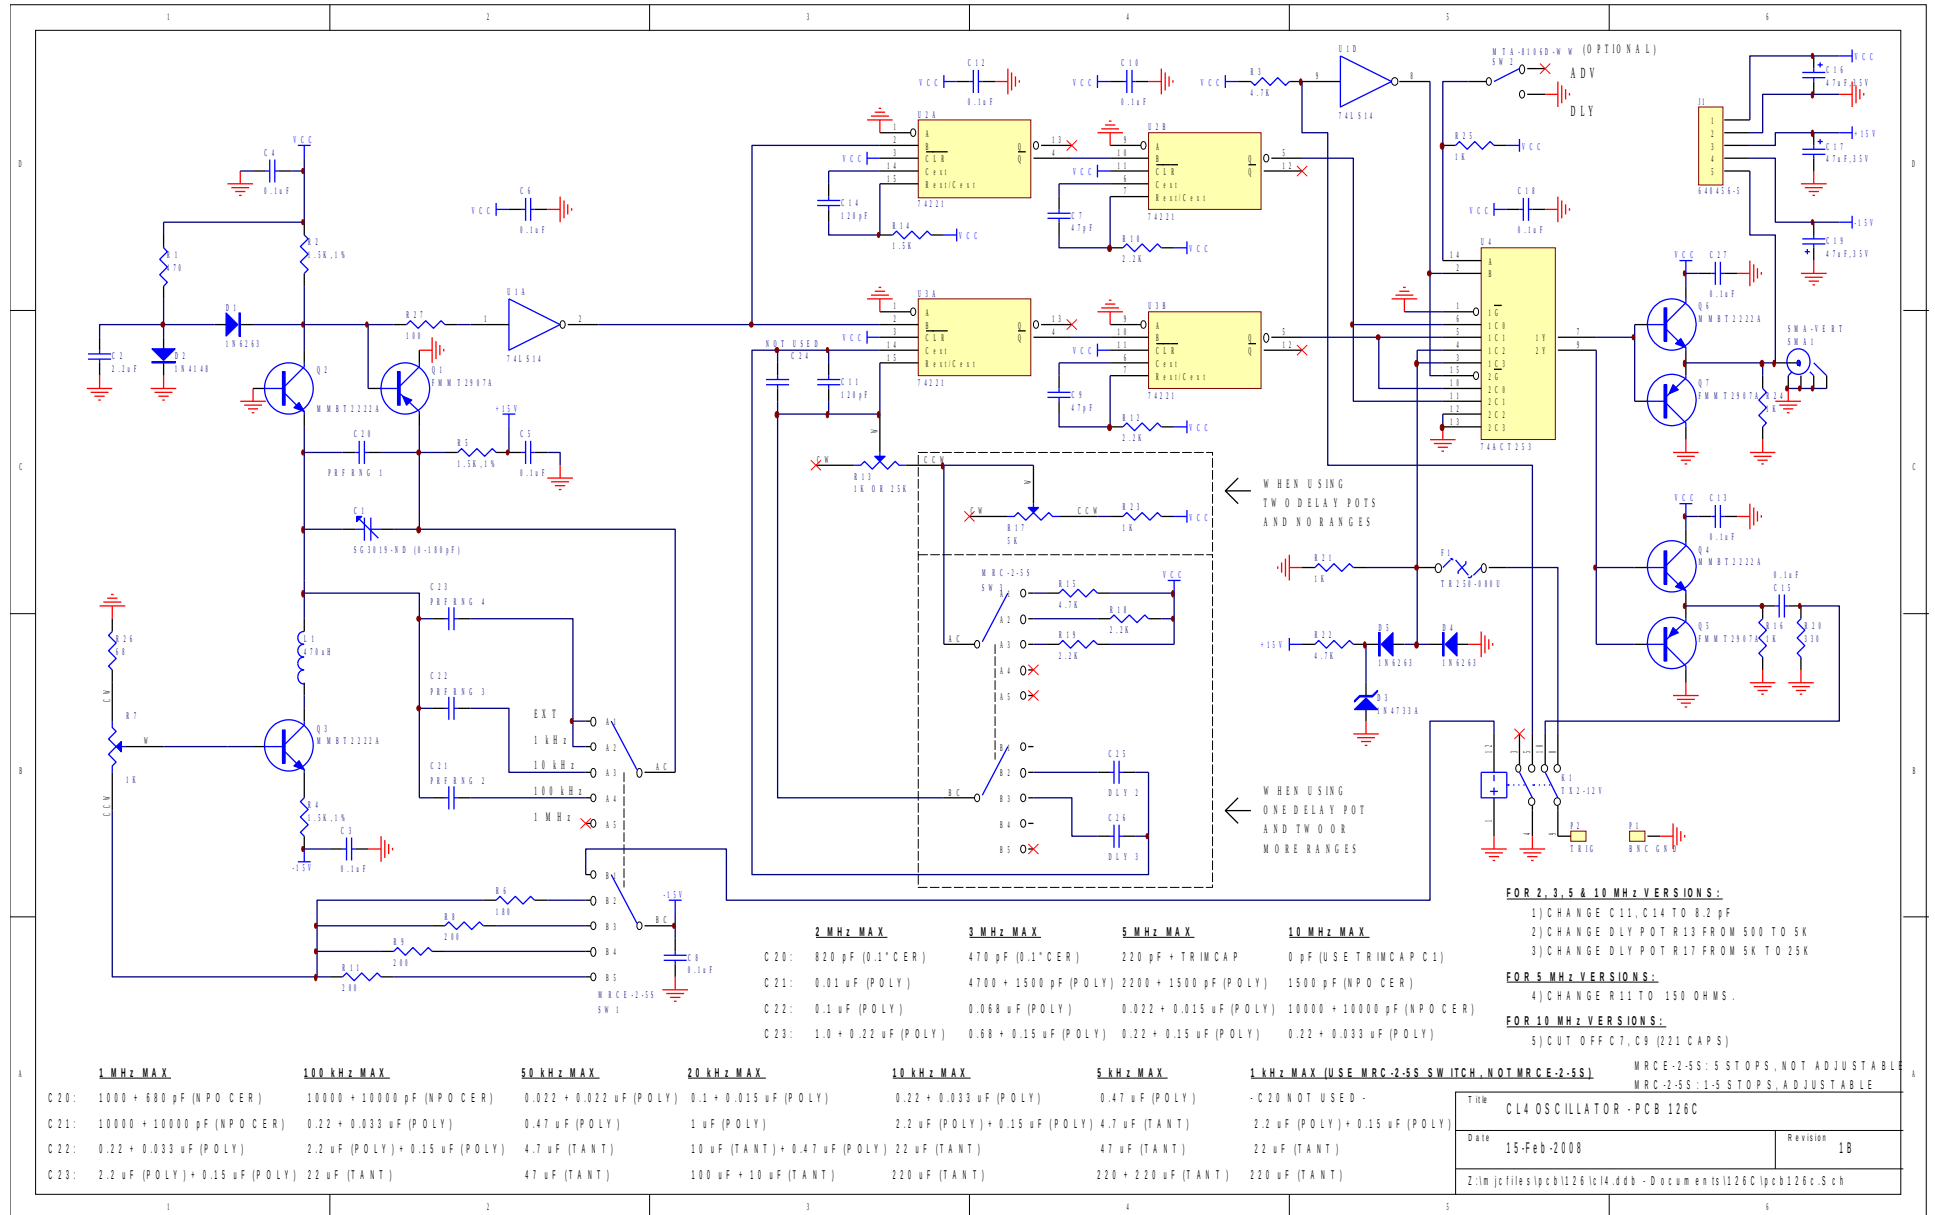

PERFORMANCE CHECKSHEET