INSTRUCTIONS

MODEL AVR-E1-GD1 PULSE GENERATOR

S.N.:

<u>WARRANTY</u>

Avtech Electrosystems Ltd. warrants products of its manufacture to be free from defects in material and workmanship under conditions of normal use. If, within one year after delivery to the original owner, and after prepaid return by the original owner, this Avtech product is found to be defective, Avtech shall at its option repair or replace said defective item. This warranty does not apply to units which have been dissembled, modified or subjected to conditions exceeding the applicable specifications or ratings. This warranty is the extent of the obligation assumed by Avtech with respect to this product and no other warranty or guarantee is either expressed or implied.

TECHNICAL SUPPORT

Phone: 613-226-5772 or 1-800-265-6681 Fax: 613-226-2802 or 1-800-561-1970

E-mail: info@avtechpulse.com World Wide Web: http://www.avtechpulse.com

TABLE OF CONTENTS

WARRANTY2
TABLE OF CONTENTS4
FIG. 1: PULSE GENERATOR TEST ARRANGEMENT5
GENERAL OPERATING INSTRUCTIONS6
PERFORMANCE CHECK SHEET7

FIG. 1: PULSE GENERATOR TEST ARRANGEMENT

- 1) The bandwidth capability of components and instruments used to display the pulse generator output signal (attenuators, cables, connectors, etc.) should exceed 2 GHz.
- 2) The use of 40 dB attenuator at the scope vertical input channel will insure a peak input signal to the scope of less than one Volt (necessary only if sampling scope used). If a high impedance real time scope is used, the pulse generator should be terminated using a shunt 50 Ohm resistor. Note that for proper and reliable operation, this unit requires a 50 Ohm termination at all times.
- 3) The output pulse width is controlled by means of the front panel one turn PW control.
- 4) The output pulse amplitude is controlled by means of the front panel one turn AMP control.
- 5) Note that at amplitudes below 10 Volts, the overshoot on the rising edge may be excessively high and for that reason it is recommended that attenuators be used for such applications.
- 6) The module should be bolted to a heat sink capable of dissipating about 10 Watts.
- 7) For additional assistance:

Tel: (613) 226-5772 Fax: (613) 226-2802

PERFORMANCE CHECK SHEET