AVTECH ELECTROSYSTEMS LTD.

NANOSECOND WAVEFORM ELECTRONICS ENGINEERING - MANUFACTURING

P.O. BOX 265 OGDENSBURG NEW YORK 13669 (315) 472-5270

BOX 5120 STN. "F"
OTTAWA, ONTARIO
CANADA K2C 3H4
(613) 226.5772
TELEX 053.4591

INSTRUCTIONS


MODEL AV-120-OS PULSE GENERATOR-DRIVER

S.N.:

WARRANTY

Avtech Electrosystems Ltd. warrants products of its manufacture to be free from defects in material and workmanship under conditions of normal use. If, within one year after delivery to the original owner, and after prepaid return by the original owner, this Avtech product is found to be defective, Avtech shall at its option repair or replace said defective item. This warranty does not apply to units which have been dissembled, modified or subjected to conditions exceeding the applicable specifications or ratings. This warranty is the extent of the obligation or liability assumed by Avtech with respect to this product and no other warranty or guarantee is either expressed or implied.

MODEL AV-120 PULSE GENERATOR TEST ARRANGEMENT

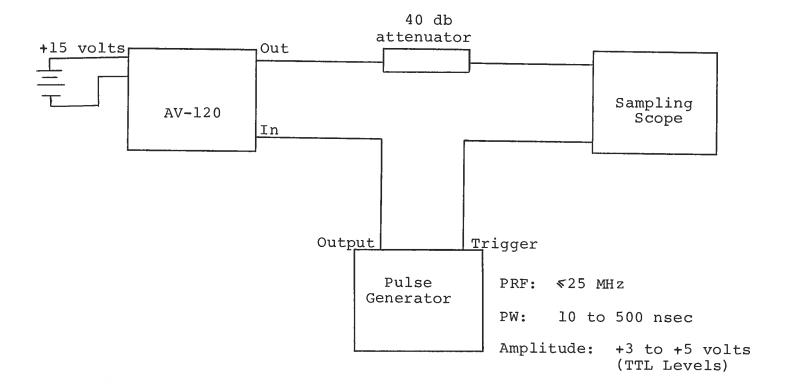

Notes:

- The bandwidth capability of components and instruments used to display the pulse generator output signal (attenuators, cables, connectors, etc.) should exceed one GHz.
- 2) The use of a 40 db attenuator will insure a peak input signal to the sampling scope of less than one volt.
- 3) In general, the source pulse generator trigger delay control should be set in the 0.1 to 1.0 usec range. Other settings should be as shown in the above diagram.
- 4) <u>WARNING</u>: Model AV-120 may fail if triggered at a PRF greater than 25 MHz or if the duty cycle exceeds 50% or if the PW exceeds 500 nsec.
- 5) The output amplitude is controlled by means of the one turn potentiometer (AMP).
- 6) The output pulse width is approximately equal to the input pulse width.
- 7) When triggering the AV-120 from a high speed lab pulse generator it may be necessary to shunt the input to the AV-120 by a 50 ohm resistor to eliminate reflection which may interfere with the operation of the lab pulse generator.
- 8) The 3 inputs of Model AV-120 operate as an OR gate.
- 7) To DC offset the output, connect a DC power supply set to the desired offset values to the rear panel OS terminals (±50 volts).

Saved in Word as of October 8197

File: C:\INSTRUCT\AV-\1000S.DOC

Note: Not adjusted

- greater than 25 this or if the duty could exceeds 50% or