## AVTECH ELECTROSYSTEMS LTD.

NANOSECOND WAVEFORM ELECTRONICS ENGINEERING - MANUFACTURING

P.O. BOX 265 OGDENSBURG NEW YORK 13669 (315) 472.5270

BOX 5120 STN. "F"

OTTAWA, ONTARIO
CANADA K2C 3H4

(613) 226.5772
TELEX 053.4591

### INSTRUCTIONS


MODEL AVI-NRL1-PS PULSE GENERATOR

S.N.:

### WARRANTY

Avtech Electrosystems Ltd. warrants products of manufacture to be free from defects in material workmanship under conditions of normal use. If, within one year after delivery to the original owner, and after prepaid return by the original owner, this Avtech product is found to be defective, Avtech shall at its option repair or replace This warranty does not apply to units said defective item. which have been dissembled, modified or subjected to conditions exceeding the applicable specifications or ratings. This warranty is the extent of the obligation or liability assumed by Avtech with respect to this product and no other warranty or guarantee is either expressed or implied.


# MODEL AVI-NRL1-PS PULSE GENERATOR TEST ARRANGEMENT

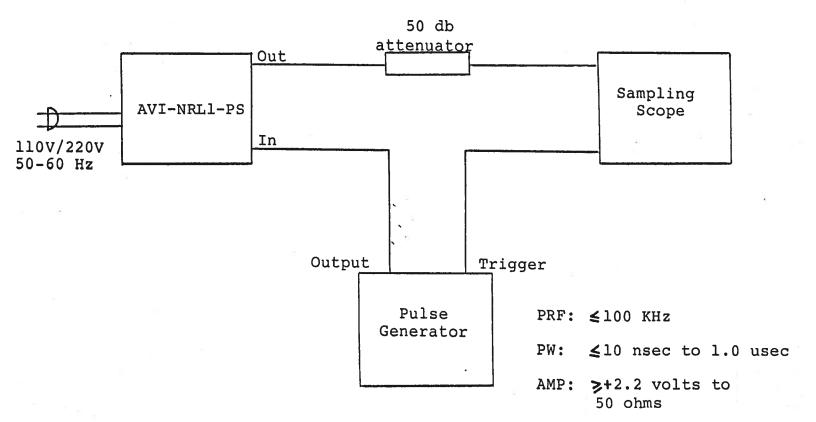

#### Notes:

- The bandwidth capability of components and instruments used to display the pulse generator output signal (attenuators, cables, connectors, etc.) should exceed several gigahertz.
- 2) The use of a 50 db attenuator will insure a peak input signal to the sampling scope of less than one volt.
- 3) In general, the source pulse generator trigger delay control should be set in the 0.1 to 1.0 usec range. Other settings should be as shown in the above diagram.
- 4) The Model AVI pulse generator can withstand an infinite VSWR on the output port.
- 5) <u>WARNING</u>: Model AVI may fail if triggered at a PRF greater than 100 KHz.

## SYSTEM BLOCK DIAGRAM AND REPAIR PROCEDURE

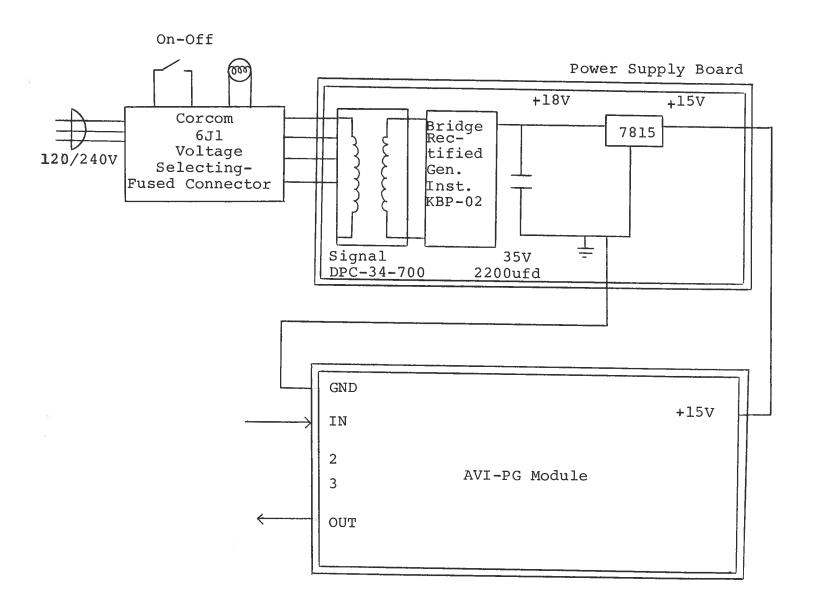

### SYSTEM DESCRIPTION AND REPAIR PROCEDURE

The AVI-PS consists of a pulse generator module (AVI-PG) and a power supply board which supplies +15 volts (600 mA max) to the pulse generator module. In the event that the AVI-PS unit malfuctions, remove the instrument cover by removing the 4 Phillips screws on the back panel of the unit. The top cover may then be slid off. Measure the voltage at the +15 V pin of the PG module. If this voltage is substantially less than +15 volts, unsolder the line connecting the PS and PG modules and connect 50 ohm 10 W load to the PS output. The voltage across this load should be about 15 V DC. If this voltage is substantially less than 15 volts the PS module is defective and should be repaired or replaced. If the voltage across the resistor is near 15 volts, then the PG module should be replaced or repaired. The sealed PG module must be returned to Avtech for repair (or replacement).

Bir 19 - 9 Alfan Da des 201 Bir Space Citien

The Nove of the state of the st