

AVTECH ELECTROSYSTEMS LTD.

NANOSECOND WAVEFORM ELECTRONICS SINCE 1975

□ P.O. BOX 265 OGDENSBURG, NY U.S.A. 13669-0265 TEL: (315) 472-5270 FAX: (613) 226-2802

TEL: 1-800-265-6681 FAX: 1-800-561-1970 U.S.A. & CANADA

e-mail: info@avtechpulse.com

BOX 5120 STN. F OTTAWA, ONTARIO CANADA K2C 3H4 TEL: (613) 226-5772 FAX: (613) 226-2802


INSTRUCTIONS

MODEL AVR-A-1-S1-P-EA-EW PULSE GENERATOR

S.N.:


WARRANTY

warrants Electrosystems Ltd. products of its manufacture to be free from defects in material and workmanship under conditions of normal use. If, within one year after delivery to the original owner, and after prepaid return by the original owner, this Avtech product is found to be defective, Avtech shall at its option repair or replace This warranty does not apply to units said defective item. which have been dissembled, modified or subjected to conditions exceeding the applicable specifications or ratings. This warranty is the extent of the obligation or liability assumed by Avtech with respect to this product and no other warranty or guarantee is either expressed or implied.

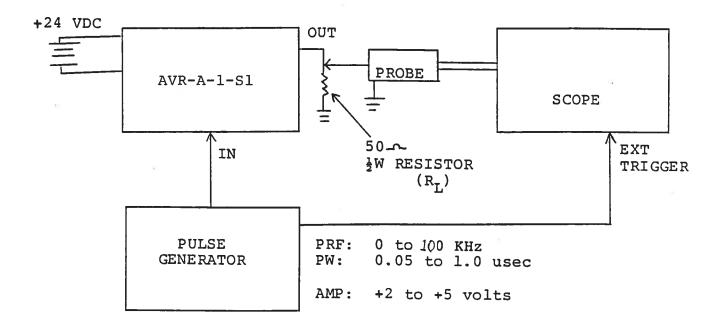

GENERAL OPERATING INSTRUCTIONS

- 1) The equipment should be connected in the general fashion shown above. Since the AVR unit provides an output pulse rise time as low as 10 ns a fast oscilloscope (at least 50 MHz and preferably 200 MHz) should be used to display the waveform. Also, if a load of other than 50 Ohm is employed, the length of coaxial cable between the AVR unit and the load should not exceed about 5 feet or the output waveform may be degraded by the resulting reflections.
- The module should be bolted to a heat sink capable of dissipating at least 15 Watts.
- 3) The magnitude of the output pulse is controlled by the application of 0 to +10 VDC to the "AMP" solder terminal $(R_{IN} \ge 10K)$.
- 4) The output pulse width is controlled by the application of 0 to +10 VDC to the "PW" solder terminal $(R_{IN} \ge 10K)$.
- 5) Under simultaneous conditions of wide pulse width, high PRF and high load current, the bias voltage applied to the output power stage decreases and as a result the attainable output peak voltage decreases to less than 200 Volts, and in severe cases, the output stage of the unit may be damaged. <u>CAUTION</u>: Under no circumstance must the duty cycle exceed 0.5%. Failures due to high duty cycle operation are not covered by the warranty. The maximum allowable PW as a function of PRF for a 50 Ohm load is shown in Fig. 1.
- 6) In the event of severe overloading, the output switching elements (Avtech Part No. SL9H and SL23) may fail. The SL9H and SL23 units are readily replaced by removing the four screws which affix the small cover plate to the bottom of the AVR chassis. The SL units may then be extracted from their sockets using needle nose pliers. When replacing the SL9H unit take care to ensure that the short lead is placed adjacent to the single black round dot on the AVR chassis and the short lead of the SL23 unit should be adjacent to the double round dot on the chassis.

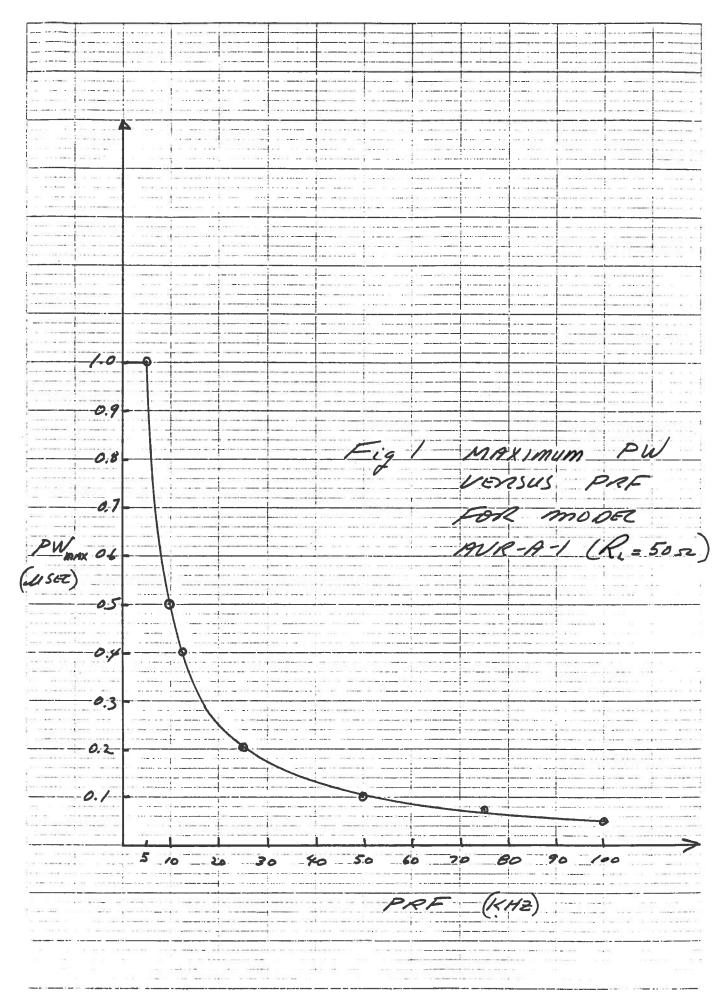

March 19/96

Dusk: AVR-A-I, AVR-A-I-PS
Torre: A1S1EAEW.INS