## AVTECH ELECTROSYSTEMS LTD.

NANOSECOND WAVEFORM ELECTRONICS ENGINEERING - MANUFACTURING

P.O. BOX 265 OGDENSBURG NEW YORK 13669 (315) 472-5270

BOX 5120 STN. "F" OTTAWA, ONTARIO CANADA K2C 3H4 (613) 226-5772 TELEX 053-4591

INSTRUCTIONS


MODEL AVRL-ITT5B-OS PULSE GENERATOR

S.N.:

#### WARRANTY

Avtech Electrosystems Ltd. warrants products of its free from defects in material manufacture to be and workmanship under conditions of normal use. If, within one year after delivery to the original owner, and after prepaid return by the original owner, this Avtech product is found to be defective, Avtech shall at its option repair or replace said defective item. This warranty does not apply to units which have been dissembled, modified or subjected to conditions exceeding the applicable specifications or ratings. This warranty is the extent of the obligation or liability assumed by Avtech with respect to this product and no other warranty or guarantee is either expressed or implied.

## TEST ARRANGEMENT

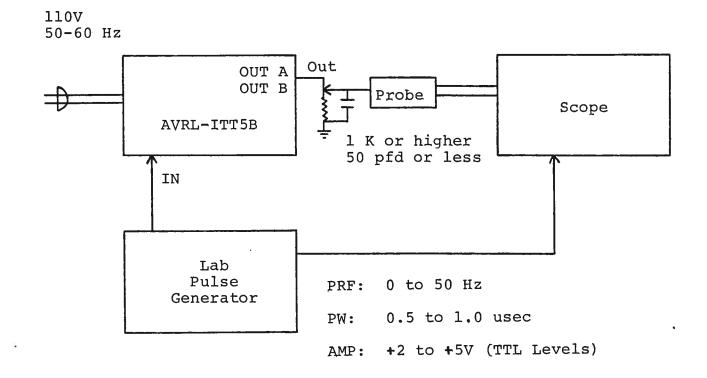


200

#### Notes:

- The equipment should be connected in the general fashion shown above. A scope with a bandwidth of at least 50 MHz should be used to view the outputs.
- 2) Both output amplitudes are fixed at -250 V. Care should be taken to insure that the scope and the load resistor can withstand this high voltage (and high output power for wide output pulse widths).
- 3) The output pulse width for output A is variable from 20 nsec to 100 nsec. The output pulse width for output B is variable from 100 nsec to 5 msec.
- 4) The output PRF is equal to the input PRF applied to the IN port. Note that both A and B outputs may fail if above PRF specifications and duty cycle are exceeded or if the load capacitance specification is exceeded.
- 5) To DC offset A or B connect the desired potential (0 to +50 volts) to the rear panel OS terminals.
- 6) Outputs A and B are designed to operate directly into a high impedance load (1 K or higher). <u>WARNING</u>: Unit may fail if operated into a 50 ohm load.
- 7) The output switching elements (SL9H) will probably fail if the output of the unit is accidentally short-circuited or if the unit is operated at high output pulse width - high PRF combinations. The switching elements are easily replaced following the instructions given in the REPAIR Section.
- 8) <u>CAUTION</u>: The instrument will be damaged if the load capacitance exceeds 50 pfd or if the load resistance is less than 1 K. Note that coaxial cables connected to the pulse generator output ports typically contribute 15 pfd per foot of length and so this capacitance must be included in the total.

## FRONT PANEL CONTROLS

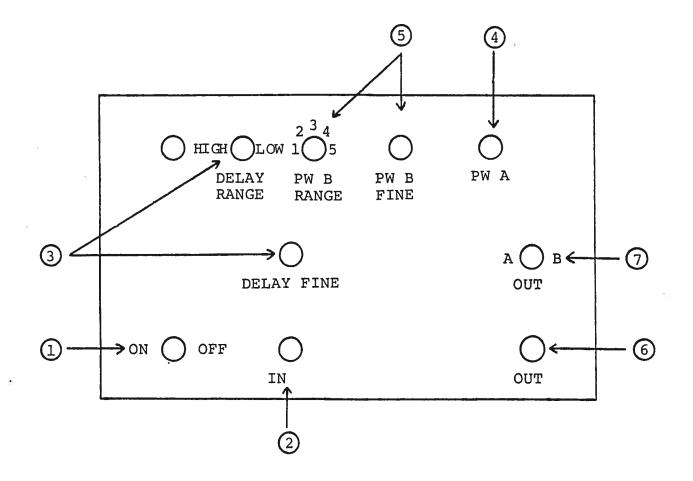

12

- (1) <u>ON-OFF Switch</u>. Applies prime power to all stages.
- (2) <u>IN</u>. Input trigger for A and B outputs applied here (TTL levels, 0.5 to 1.0 usec).
- (3) <u>DELAY RANGE, DELAY FINE</u>. Varies propagation delay from IN to OUT as follows:

A OUT

B OUT


LOW: 30 nsec to 100 nsec 100 nsec to 200 nsec HIGH: 100 nsec to 2 usec 200 nsec to 2 usec

- (4) <u>PW A</u>. One turn control used to vary output PW (A) from 20 to 100 nsec.
- (5) <u>FW B</u>. One turn control and 5 position range switch used to vary pulse width of output B from 100 nsec to 5 msec as follows:

RANGE 1:100nsec to1.7usecRANGE 2:1usec to13usecRANGE 3:6.5usec to125usecRANGE 4:86usec to1.2msecRANGE 5:0.6msec to6msec

- (6) <u>OUT Connector</u>. BNC connectors used to connect output of A and output of B to high impedance load.
- (7) <u>A-B OUTPUT Switch</u>. With switch in the A position, pulse generator A is connected to the output connector (8) and the B pulse generator is disabled. With switch in the B position, pulse generator B is connected to the output connector (8) and the A pulse generator is disabled.

# BACK PANEL CONTROLS

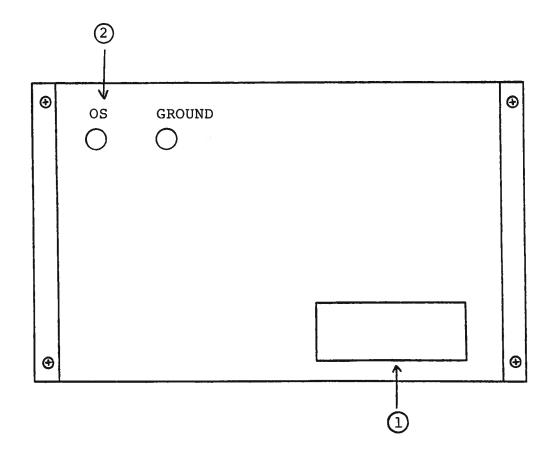

.

×


- (1) <u>FUSED CONNECTOR, VOLTAGE SELECTOR</u>. The detachable power cord is connected at this point. In addition, the removable cord is adjusted to select the desired input operating voltage. The unit also contains the main power fuse.
- (2) <u>DC\_DEFSET Input</u>. To DC offset the output pulse, connect a DC power supply set to the desired offset value to these terminals. The maximum allowable DC offset voltage is +50 volts.

#### REPAIR PROCEDURE

- 1) WARNING: Before attempting any repairs, note that potentials as high as 260 volts are employed in the chassis structure.
- 2) The pulse generator is constructed from the following subsystems or modules:
  - a) Metal chassis
  - b) A pulse generator module (AVRL-ITT5B-PGA)
  - c) B pulse generator module (AVRL-ITT5B-PGB)
  - d) Delay module (AVRL-ITT58-D-PW)
  - e) +24V power supply board
  - f) B pulse generator power supply (AVRL-ITT5B-PSB)

The modules are interconnected as shown in the following diagram.

- 3) If no output is provided by the A or B outputs then it is most likely that the SL9H switching elements in the output stages have been damaged and should be replaced using the following procedure:
  - i) Turn off prime power and remove cover plate on bottom of instrument (four 2-56 screws).
  - By means of a screwdriver, briefly ground the tabs of the two SL9H transistors to discharge the bypass capacitors.
  - iii) Extract the old SL9H transistors from their socket by means of needle-nosed pliers.
  - iv) Install replacement SL9H transistors and install cover plate.

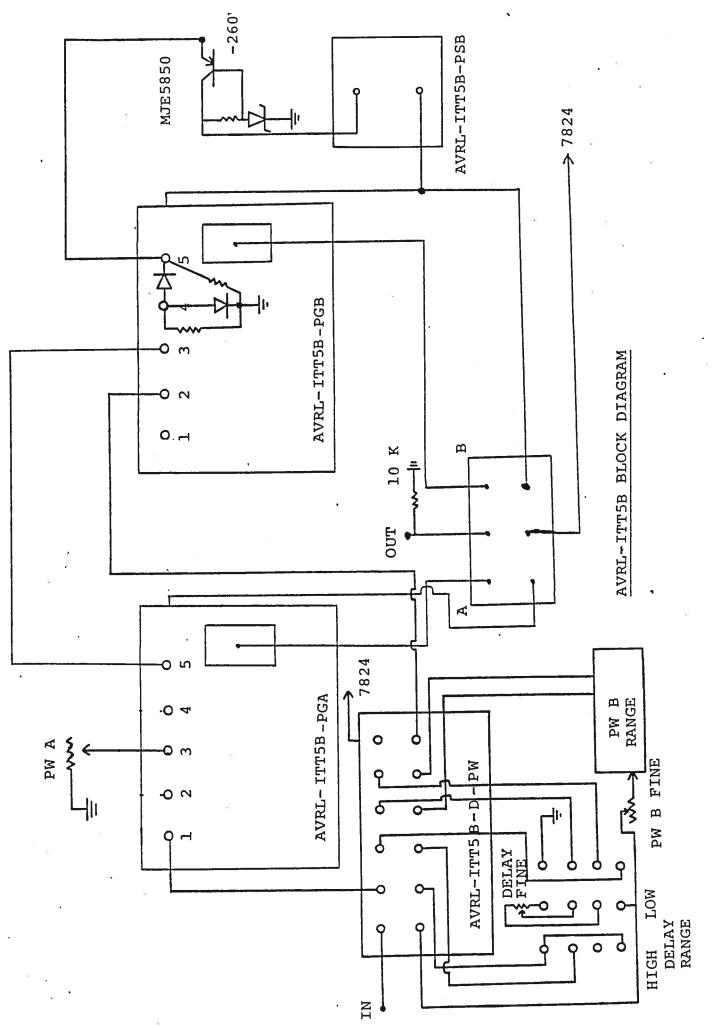

os


1. .

#### +24 VOLT POWER SUPPLY

The AVRL-ITT5B consists of the four standard modules and a power supply board which supplies +24 volts (600 mA max) to the modules. In the event that the unit malfunctions, remove the instrument top cover, thereby exposing the modules. Measure the voltage at the +24 V pin of the PS module. If this voltage is substantially less than +24 volts, unsolder the line connecting the power supply board output and connect a 50 ohm 10 W load to the power supply output. The voltage across this load should be about +24 V DC. If this voltage is substantially less than 24 volts the power supply board is defective and should be repaired or replaced. If the voltage is near +24V then see instructions in preceding section.

## POWER SUPPLY BOARD

.

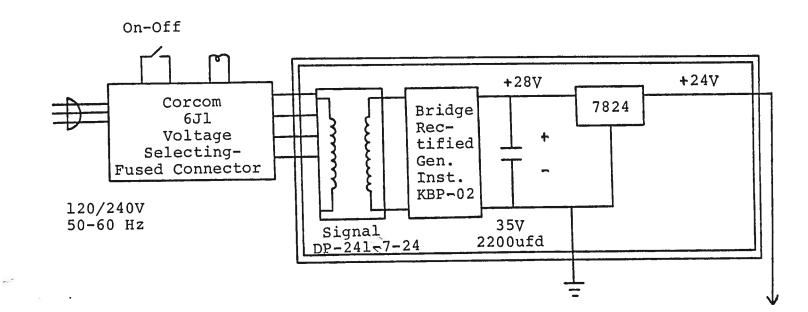

12

. •

2110

### AVTECH ELECTROSYSTEMS LTD.

NANOSECOND WAVEFORM ELECTRONICS ENGINEERING - MANUFACTURING

P.O. BOX 265 OGDENSBURG NEW YORK 13669 (315) 472-5270 BOX 5120 STN. "F" X OTTAWA, ONTARIO CANADA K2C 3H4 (613) 226-5772 TELEX 053-4591

June 15, 1987.

we want to be the

.3

Charles Taner Purchasing Dept. ITT Inc. Electro-Optical Products Div. P.O. Box 3700 Fort Wayne, IN 46801

Dear Mr. Taner:

With reference to a recent telephone conversation with Tom Lynch, this will confirm that Avtech can supply a special purpose pulse generator meeting the following specifications:

A Output

Model designation:

AVRL-ITT5B

Output amplitude:

250V to  $R_L \ge 1K$ . 250V to  $R_L \ge 1K$ .

Note: A or B output selectable by two position switch. Specify desired output polarities.

control.

B Output

Pulse width:20.0 nsec to 100 nsecVariable from 100 nsecvia front panel ten<br/>turn control.to 5 msec via frontfive position range<br/>switch and a tan turn

Rise time:  $\leq 5.0$  nsec.  $\leq 5$  nsec.

Fall time:  $\leq 5.0$  nsec.  $\leq 5$  nsec.

PRF: 30 Hz. 30 Hz.

Note that both A and B require external 0.5 usec TTL input trigger signal. Output PRF equals input PRF.

Delay:	30 nsec to 2 usec via one turn controls.100 nsec to 2 usec via one turn controls.
Connectors (input & output):	BNC.
Prime power:	110/220V switchable, 50-60 Hz.
Package size and format:	4" x 12" x 16". Anodized, extruded aluminum chassis.
Price:	each US, FOB Destination.
Delivery:	60-90 days ARO.
Terms:	Net 30 days.
Shipping:	Transportation via Emery Air Freight included in above price.

I thank you for this opportunity to quote on your requirements and I hope you will contact me again if you require any modifications or clarifications.

Yours truly,

Walter J. Chudobiak Chief Engineer

WJC:pr cc Tom Lynch

# S.chroff 02.16.88

50.027.021