


AVO-2-C-BEO3-R5-P-OP1-M
Instruction Manual Addendum

For serial numbers 8879 - 9430

POWER SUPPLY AND FUSE REPLACEMENT

This instrument has three fuses (plus one or two spares). One, which protects the AC input, is located in the rear-panel power entry module, as described in the “Rear Panel Controls” section of this manual. If the power appears to have failed, check the AC fuse first.

The other two fuses (plus spares) are located on the internal DC power supply, as shown below:

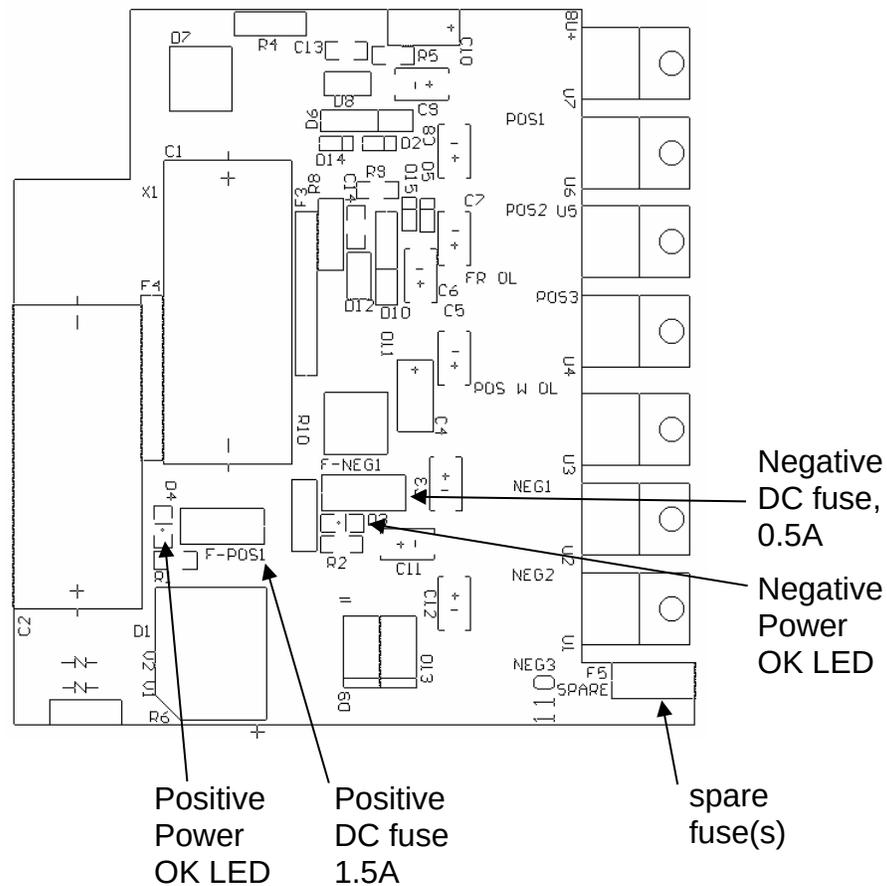

The positive fuse and the one of the spare fuses on this circuit board are 1.5A slow-blow fuses, Littelfuse part number R45201.5. (This fuse can be ordered from Digikey, www.digikey.com. The Digikey part number is F1344CT-ND).

Instruments with serial numbers between 8879 and 9430 (inclusive) were originally shipped with 1A fuses, instead of 1.5A fuses. The 1A fuses should be replaced with the 1.5A fuses supplied with this addendum.

The negative fuse is a 0.5A slow-blow fuse (Littlefuse R452.500, Digikey part number F1341CT-ND). If a second spare fuse is present, it should also be 0.5A.

If you suspect that the DC fuses are blown, follow this procedure:

1. Remove the top cover, by removing the four Phillips screws on the top cover and then sliding the cover back and off.
2. Locate the two "Power OK" LEDs on the power supply circuit board, as illustrated above.
3. Turn on the instrument.
4. Observe the "Power OK" LEDs. If the fuses are not blown, the two LEDs will be lit (bright red). If one of the LEDs is not lit, the fuse next to it has blown.
5. Turn off the instrument.
6. If a fuse is blown, use needle-nose pliers to remove the blown fuse from its surface-mount holder.
7. Replace the fuse.