



AVX-M3S Panel Mounting


END VIEW

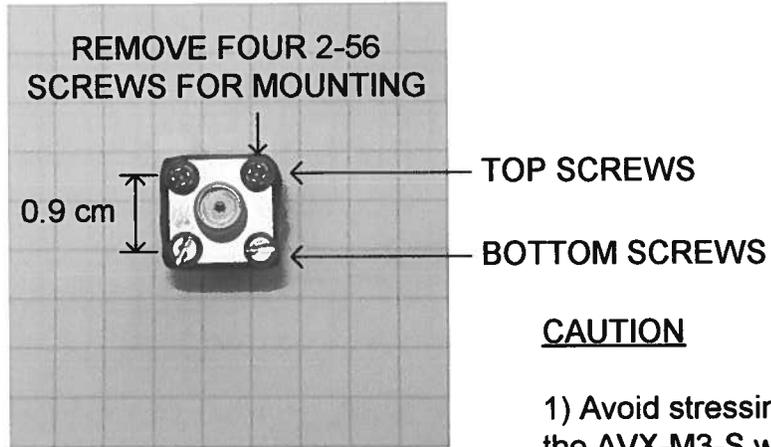

TOP VIEW

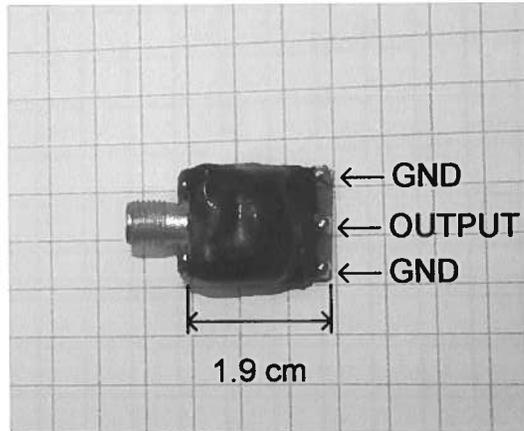

SIDE VIEW

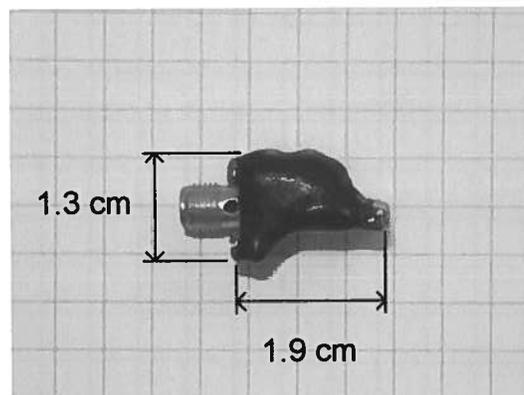

CAUTION

1) Avoid stressing or flexing the AVX-M3-S while removing or installing the bottom 2-56 screws (use gentle finger action only).

2) When re-installing 2-56 screws in the top and bottom positions, ensure that the new top screws do not penetrate more than 3 mm into the original top position holes, and that the new bottom screws do not penetrate more than 4.2 mm into the original bottom holes.

3) For additional assistance:

Tel: (613) 226-5772

Fax: (613) 226-2802

Email: info@avtechpulse.com