

# AVTECH ELECTROSYSTEMS LTD.


NANOSECOND WAVEFORM ELECTRONICS  
ENGINEERING - MANUFACTURING

□ P.O. BOX 265  
OGDENSBURG  
NEW YORK  
13669  
(315) 472-5270

BOX 5120, STN. "F"  
OTTAWA, ONTARIO  
CANADA K2C 3H4  
TEL: (613) 226-5772  
FAX: (613) 226-2802  
TELEX: 053-4591

## -R2 RACK MOUNT KIT INSTALLATION INSTRUCTIONS

- 1) Remove the three vertical cover plates on the front panel by removing the 9 Phillips screws.
- 2) Remove the two horizontal cover plates on the front panel by removing the 4 Phillips screws.
- 3) Install the Avtech pulse generator in the E insert opening and slide the pulse generator in as far as possible.
- 4) Re-install the cover plates by installing the Phillips screws.

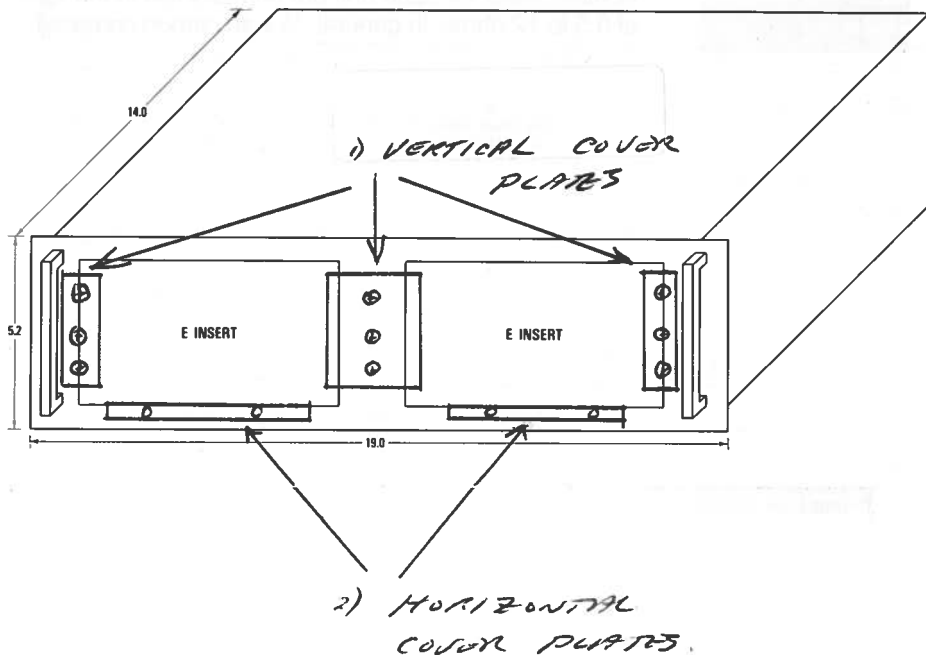

06.02.89