AVTECH ELECTROSYSTEMS LTD.

NANOSECOND WAVEFORM ELECTRONICS

□ P.O. BOX 265 OGDENSBURG, NY U.S.A. 13669-0265 TEL: (315) 472-5270 FAX: (613) 226-2802


AVTECH

BOX 5120 STN. F OTTAWA, ONTARIO CANADA K2C 3H4 TEL: (613) 226-5772 FAX: (613) 226-2802

FR RACK MOUNT KIT INSTALLATION INSTRUCTIONS

- 1) Remove the three small cover plates on the front panel by removing the 8 Phillips screws (see Fig. 1).
- 2) Remove the 4 3/4" 6-32 Phillips screws from the front panel of the instrument (see Fig. 2).
- 3) Install the Avtech pulse generator in the E insert opening and slide the pulse generator in as far as possible.
- 4) Re-install the 3 small cover plates to the rack panel by installing the 8 Phillips screws.
- 5) Re-install the 4 3/4" 6-32 Phillips screws which affix the instrument to the front panel cover plate.

Fig. 1 Cover plates



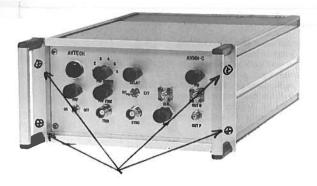


Fig. 2 Remove four 3/4" 6-32 Phillips screws

- R3

300