



AVTECH ELECTROSYSTEMS LTD.

NANOSECOND WAVEFORM ELECTRONICS
SINCE 1975

□ P.O. BOX 265
OGDENSBURG, NY
U.S.A. 13669-0265
TEL: (315) 472-5270
FAX: (613) 226-2802

TEL: 1-800-265-6681
FAX: 1-800-561-1970

e-mail: info@avtechpulse.com
<http://www.avtechpulse.com>

□ P.O. BOX 5120 STN. F
OTTAWA, ONTARIO
CANADA K2C 3H4
TEL: (613) 226-5772
FAX: (613) 226-2802

INSTRUCTIONS

MODEL AVP-AV-1-C-M-OT-UO1 PULSE GENERATOR

S.N.:

WARRANTY

Avtech Electrosystems Ltd. warrants products of its manufacture to be free from defects in material and workmanship under conditions of normal use. If, within one year after delivery to the original owner, and after prepaid return by the original owner, this Avtech product is found to be defective, Avtech shall at its option repair or replace said defective item. This warranty does not apply to units which have been disassembled, modified or subjected to conditions exceeding the applicable specifications or ratings. This warranty is the extent of the obligation assumed by Avtech with respect to this product and no other warranty or guarantee is either expressed or implied.

TECHNICAL SUPPORT

Phone: 613-226-5772 or 1-800-265-6681

Fax: 613-226-2802 or 1-800-561-1970


E-mail: info@avtechpulse.com

World Wide Web: <http://www.avtechpulse.com>

TABLE OF CONTENTS

WARRANTY.....	2
TABLE OF CONTENTS	3
FIG. 1: PULSE GENERATOR TEST ARRANGEMENT.....	4
GENERAL OPERATING INSTRUCTIONS	5
Fig. 2: FRONT PANEL CONTROLS	7
FRONT PANEL CONTROLS	8
Fig. 3: BACK PANEL CONTROLS.....	9
BACK PANEL CONTROLS.....	10
Fig. 4: SYSTEM BLOCK DIAGRAM.....	11
SYSTEM DESCRIPTION AND REPAIR PROCEDURE	12
PERFORMANCE CHECK SHEET	13

FIG. 1: PULSE GENERATOR TEST ARRANGEMENT

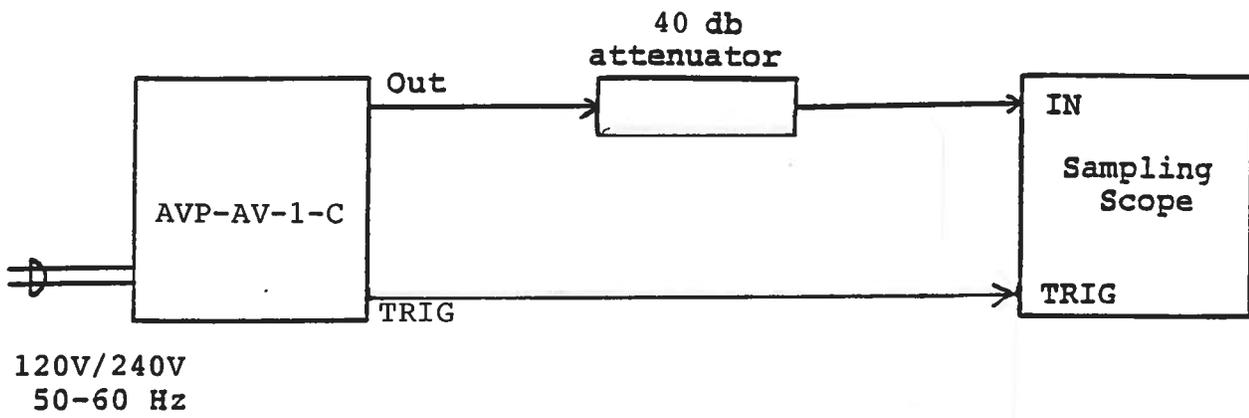


GENERAL OPERATING INSTRUCTIONS

- 1) The bandwidth capability of components and instruments used to display the pulse generator output signal (attenuators, cables, connectors, etc.) should exceed ten gigahertz.
- 2) The use of 40 dB attenuator at the sampling scope vertical input channel will insure a peak input signal to the sampling scope of less than one Volt.
- 3) The TRIG output channel provides a 0.2 Volt 10 ns pulse.
- 4) To obtain a stable output display the PRF control on the front panel should be set mid-range while the PRF range switch may be in either range. The front panel TRIG toggle switch should be in the INT position. The front panel DELAY controls and the scope triggering controls are then adjusted to obtain a stable output. The scope may then be used to set the desired PRF by rotating the PRF control.
- 5) The output pulse widths are controlled by means of the front panel one turn PW controls. The controls should initially be set maximum clockwise and the pulse width adjusted using an oscilloscope.
- 6) The output pulse amplitudes are controlled by means of the front panel one turn AMP controls. The pulse width may change by several nanoseconds as the output amplitude is reduced from maximum to minimum. Therefore it is convenient to first set the desired amplitude and then set the desired pulse width. Rotation of the PW pot causes the position of the falling edge of the pulse to change.
- 7) Iterative adjustments of the pulse width, amplitude and delay controls are necessary (particularly at short pulses and delays).
- 8) The relative delay between the A and B pulse may be varied from 0 to +5 ns using the one turn delay B control. Pulse A or Pulse B may be turned on or off using the corresponding front panel On-Off switches.
- 9) For units with the OT or EO options, the output DC offset is variable from +5 to -5 volts by means of the front panel one turn OFFSET control. The offset control may be turned off by means of the rear panel ON-OFF OFFSET switch.

- 10) An external clock may be used to control the output PRF of the AVP unit by setting the front panel TRIG toggle switch in the EXT position and applying a 50 ns (or wider) TTL level pulse to the TRIG BNC connector input.
- 11) The monitor output (-M) provides a 20 dB attenuated coincident replica of the main output.
- 12) The unit can be converted from 120 to 240V 50-60 Hz operation by adjusting the voltage selector card in the rear panel fused voltage selector-cable connector assembly.
- 13) For additional assistance:

Tel: (613) 226-5772
Fax: (613) 226-2802

Fig. 2: FRONT PANEL CONTROLS

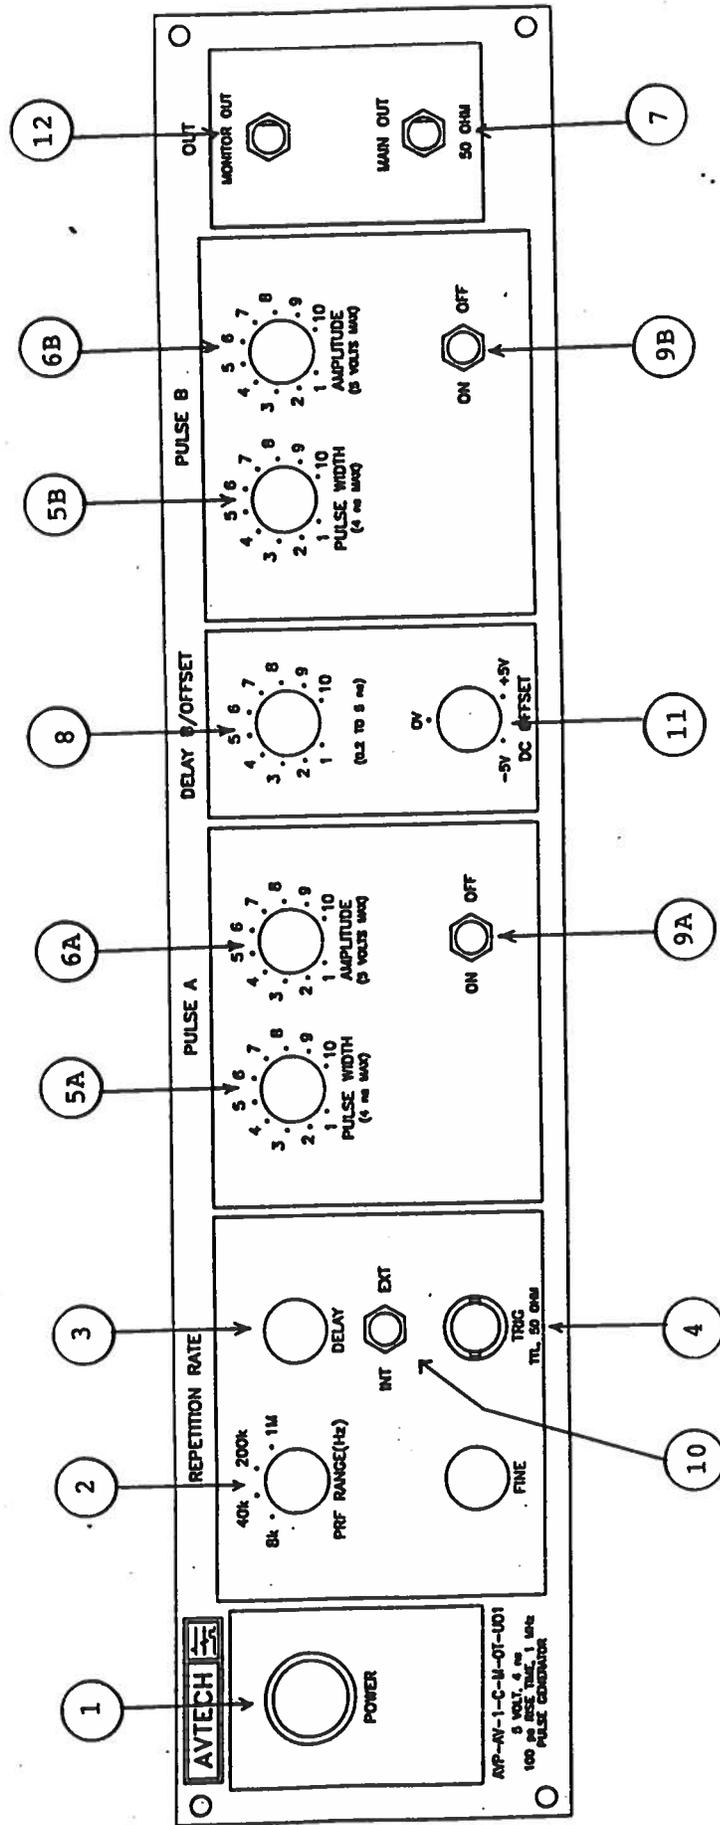


FRONT PANEL CONTROLS

- (1) ON-OFF Switch. Applies basic prime power to all stages.
- (2) PRF Control. The PRF RANGE and PRF controls determine output PRF as follows:

	PRF MIN	PRF MAX
Range 1	1.6 kHz	8 kHz
Range 2	8 kHz	40 kHz
Range 3	40 kHz	200 kHz
Range 4	200 kHz	1 MHz

- (3) DELAY Controls. Controls the relative delay between the reference output pulse provided at the TRIG output (4) and the main output (7). This delay is variable over the range of 0 to at least 200 ns.
- (4) TRIG Output. This output precedes the main output (7) and is used to trigger the sampling scope time base. The output is a 0.2 Volt 10 ns (approx.) pulse capable of driving a fifty Ohm load.
- (5) PW Control. A one turn control which varies the output pulse width from 0 to 4 ns.
- (6) AMP Control. A one turn control which varies the output pulse amplitude from 0 to 5 V to a fifty ohm load.
- (7) OUT. SMA connector provides output to 50 ohms.
- (8) Delay-B. One turn control varies the delay of Pulse B relative to A from -0 to +5 ns.
- (9) On-Off. Two position switches to turn Pulse A (or B) On (or Off).
- (10) EXT-INT Control. With this toggle switch in the INT position, the PRF of the AVP unit is controlled via an internal clock which in turn is controlled by the PRF controls. With the toggle switch in the EXT position, the AVP unit requires a 50 ns (or wider) TTL level pulse applied at the TRIG input in order to trigger the output stages. In addition, in this mode, the scope time base must be triggered by the external trigger source.

Fig. 3: BACK PANEL CONTROLS

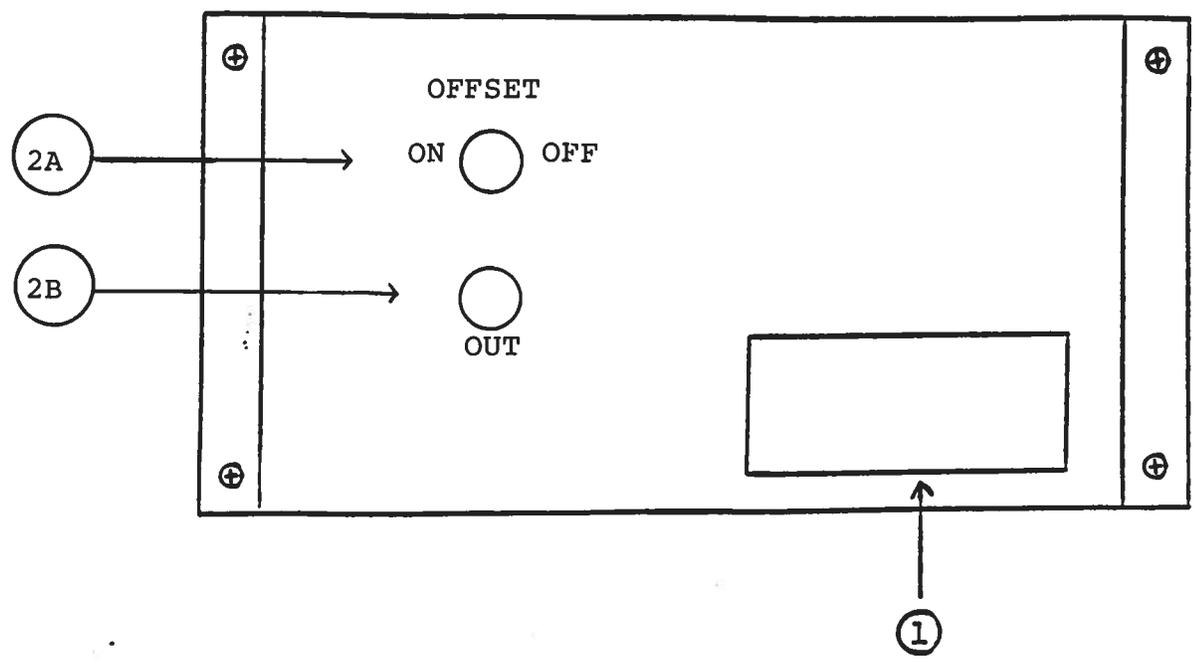


BACK PANEL CONTROLS

- (1) FUSED CONNECTOR, VOLTAGE SELECTOR. The detachable power cord is connected at this point. In addition, the removable cord is adjusted to select the desired input operating voltage. The unit also contains the main power fuse (0.5A SB).
- (2A) Two position switch which turns output DC offset ON or OFF. (EO or OT options).
- (2B) DC output offset potential appears at this terminal.

Fig. 4

SYSTEM BLOCK DIAGRAM

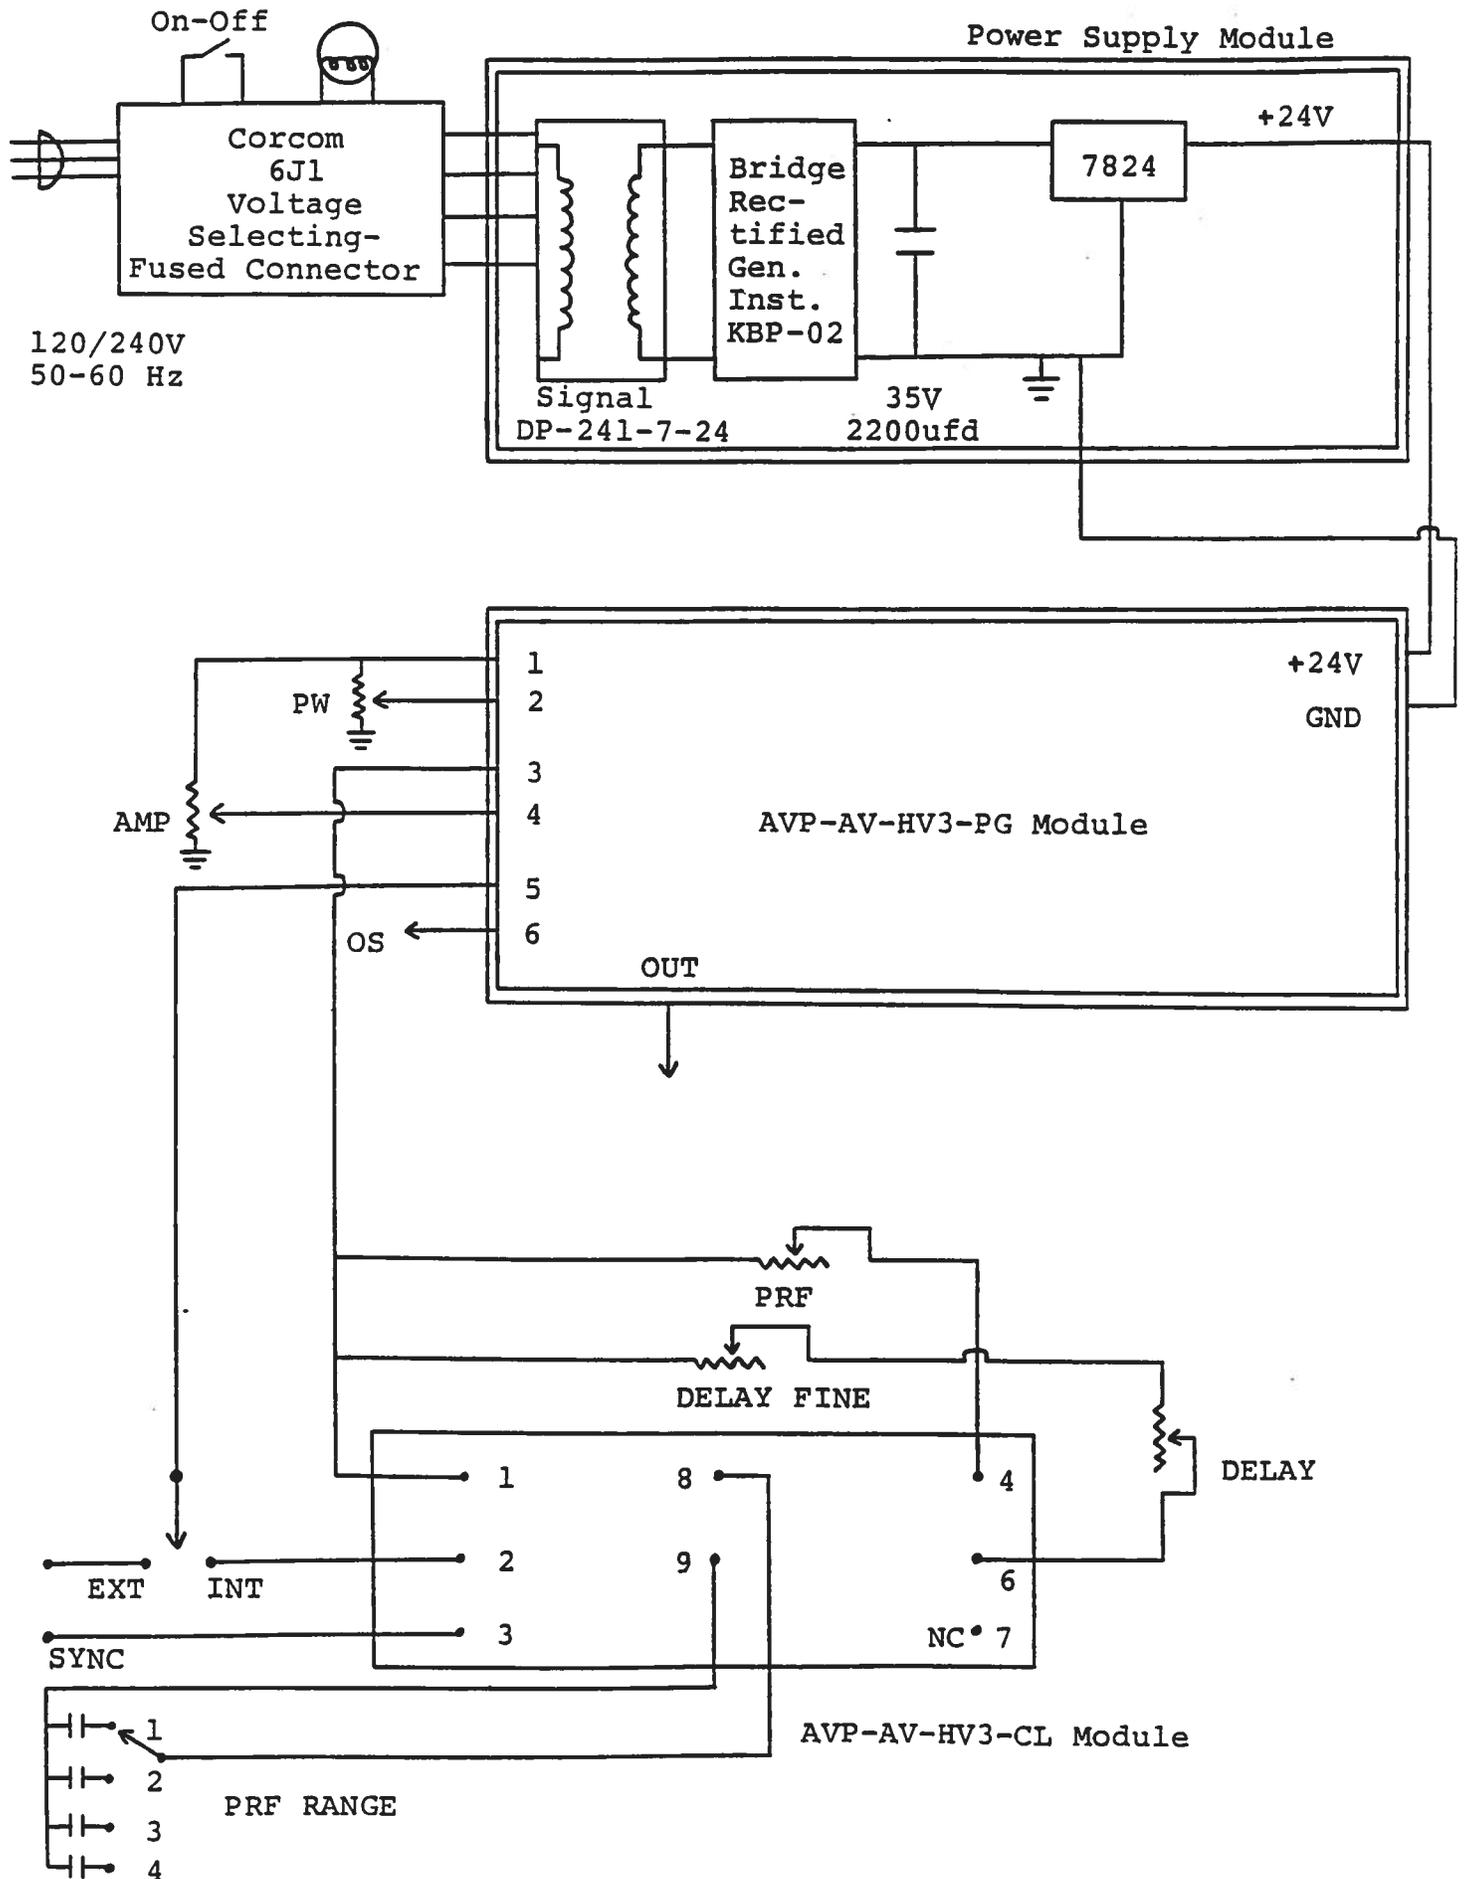

SYSTEM DESCRIPTION AND REPAIR PROCEDURE

The AVP-AV-HV3-C consists of a pulse generator module (AVP-AV-HV3-PG), a clock module (AVP-AV-HV3-CL) and a power supply board which supplies +15 Volts (600 mA max) to the pulse generator module. In the event that the unit malfunctions, remove the instrument cover by removing the four Phillips screws on the back of the unit. The top cover may then be slid off. Measure the voltage at the +15V pin of the PG module. If this voltage is substantially less than +15 Volts, unsolder the line connecting the power supply and PG modules and connect 50 Ohm 10 W load to the PS output. The voltage across this load should be about +15 V DC. If this voltage is substantially less than 15 Volts the PS module is defective and should be repaired or replaced. If the voltage across the resistor is near 15 Volts, then the PG module should be replaced or repaired. The sealed PG module must be returned to Avtech for repair (or replacement). The clock module provides a 0.1 us TTL level trigger pulse at pin 2 to trigger the PG module and a 0.1 us TTL level sync pulse at pin 3 to trigger the sampling scope display device. The output at pin 3 precedes the output at pin 2 by almost 0 to 100 ns depending on the DELAY control setting. The clock module is powered by +5.8 V supplied by the PG module (from pin 5 to pin 1). With the INT-EXT switch in the EXT position, the clock module is disconnected from the PG module. The clock module is functioning properly if:

- a) 0.1 us TTL level outputs are observed at pins 2 and 3.
- b) The PRF of the outputs can be varied over the range of 1 kHz to 1 MHz using the PRF and PRF RANGE controls.
- c) The relative delay between the pin 2 and 3 outputs can be varied by at least 500 ns by the DELAY controls.

The sealed clock module must be returned to Avtech for repair or replacement if the above conditions are not observed.

Q9276
sent



AVTECH ELECTROSYSTEMS LTD.

NANOSECOND WAVEFORM ELECTRONICS
SINCE 1975

P.O. BOX 265
OGDENSBURG, NY
U.S.A. 13669-0265
TEL: (315) 472-5270
FAX: (613) 226-2802

TEL: 1-800-265-6681
FAX: 1-800-561-1970

e-mail: info@avtechpulse.com
<http://www.avtechpulse.com>

P.O. BOX 5120 STN. F
OTTAWA, ONTARIO
CANADA K2C 3H4
TEL: (613) 226-5772
FAX: (613) 226-2802

Fax No:	<u>4395</u>	Sender's Fax:	<u>613-226-2802</u>
File:	<u>Q:\office\QUOTES\Q9276.doc</u>	Receiver's Fax:	<u>541-346-4315</u>
To:	<u>University of Oregon</u> <u>Eugene, Oregon</u>	Receiver's Phone:	<u>541-346-4759</u>
Attn:	<u>Bryan Boggs</u>	Date:	<u>April 5, 1999</u>
Subject:	<u>Price and delivery quotation</u>	Number of pages:	<u>2</u>

1) Following our telephone conversation of March 8, 1999, I am pleased to provide the following revised quotation (modified to include the internally generated DC offset option):

Quote Number:	9276
Model designation:	AVP-AV-1-C-M-OT-UO1
Pulse mode:	Single or double. Please see enclosed waveforms from a crude prototype unit.
Pulse separation: (in double pulse mode)	200 ps to 5 ns. One turn control.
Output amplitude:	0 to +5 Volts Two independent one turn controls.
Output pulse width:	0.25 to 4.0 ns Two independent one turn controls.
Rise time:	≤ 100 ps
Fall time:	≤ 120 ps
PRF:	0 to 1 Mhz
Monitor:	Includes an SMA output monitor port which provides an attenuated coincident replica of the output waveforms.
DC offset:	0 to ± 5 VDC. Controlled by a front panel one-turn control.
Chassis size:	3.9" x 17" x 14.8"

Other: See standard AVP-AV-1-C, pages 24 and 25 Cat. No. 10.
Price: \$4471.00 US FOB destination. This price includes our standard 5% academic discount.
Delivery: 60 days.

2) Thank you for your interest in our products. Please call me (1-800-265-6681) if you require any additional information.

Regards,



Dr. Walter Chudobiak
Chief Engineer

WC:cb