

AVTECH ELECTROSYSTEMS LTD.

NANOSECOND WAVEFORM ELECTRONICS SINCE 1975

P.O. BOX 265 OGDENSBURG, NY U.S.A. 13669-0265 TEL: 888-670-8729 (USA & Canada) or +1-613-686-6675 (Intl) FAX: 800-561-1970 (USA & Canada) or +1-613-686-6679 (Intl)


BOX 5120, LCD MERIVALE OTTAWA, ONTARIO CANADA K2C 3H4

info@avtechpulse.com - http://www.avtechpulse.com/

INSTALLATION INSTRUCTIONS FOR THE REPLACEMENT LEFT-SIDE HANDLE ON MODEL AVOZ-B4-B-P-AC22, S/N 12510


Note: some photos may not be exactly the same as your unit.

- 1. Disconnect the power cord from the rear panel.
- 2. Remove the 4 screws that secure the top cover. Slide the cover off.
- 3. Unscrew the 3 screws that secure the left-side vinyl-coated panels. The screw locations are shown in the photo below. Remove the vinyl-coated panels.

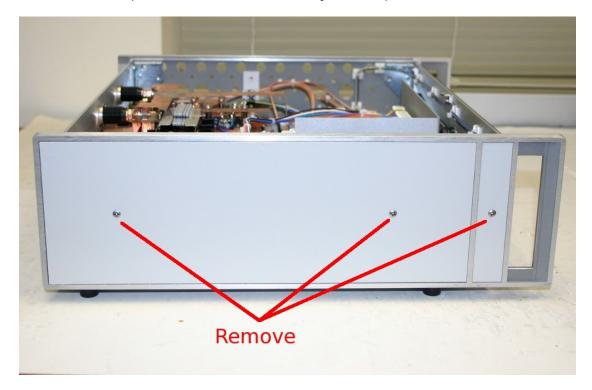


4. Refer to the photo below. Unscrew the grounding screw (saving all hardware). Snip any visible tie wraps that attach cables to the panel.

Unscrew the 3 screws that attach the power supply bracket to the side panel, as well as the one screw that attaches the power supply to the rear panel. The power supply may shift position temporarily, but that is OK.

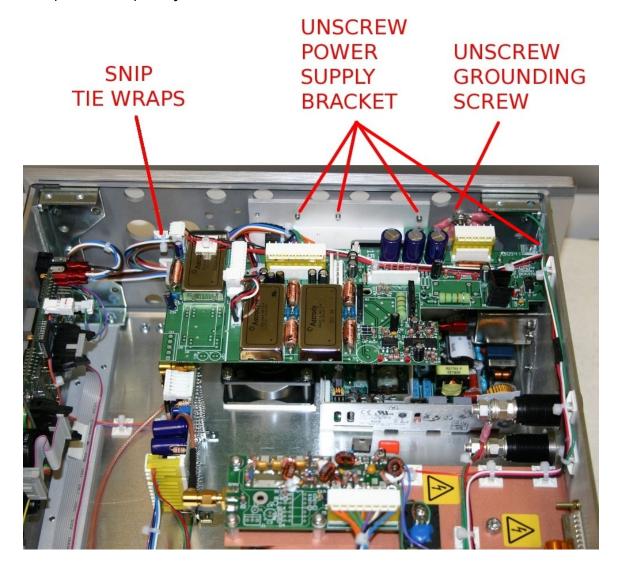

5. Remove the 6 screws shown below:

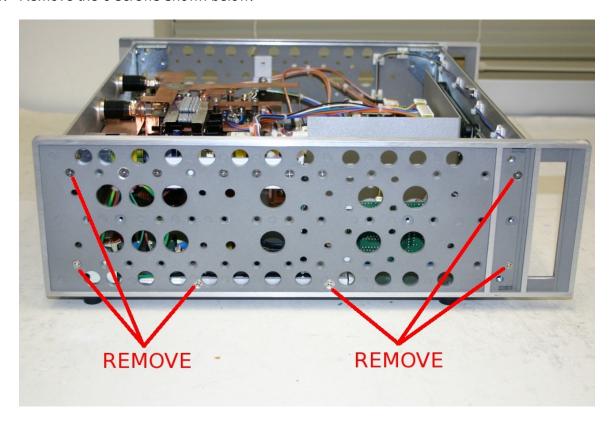

- 6. Pull the panel off of the instrument.
- 7. Position the replacement panel in its place, and re-install the 6 screws that hold the panel to the chassis.
- 8. Re-install the 1 grounding screw, and the 4 screws that hold the power supply brackets in place.
- 9. Re-install the 2 vinyl-coated panels.
- 10. Re-install the top cover.
- 11. Re-connect the power cord. Turn on the instrument and test it. It should be operational. If it is not, the instrument will need to be returned to the factory for examination and repair.

If anything is unclear, or further assistance is needed, please contact:

Dr. Michael J. Chudobiak info@avtechpulse.com +1-613-686-6675