AVTECH ELECTROSYSTEMS LTD.

NANOSECOND WAVEFORM ELECTRONICS ENGINEERING - MANUFACTURING

P.O. BOX 265 OGDENSBURG NEW YORK 13669 (315) 472-5270 BOX 5120 STN. "F" OTTAWA, ONTARIO CANADA K2C 3H4 (613) 226-5772 TELEX 053-4591


INSTRUCTIONS

MODEL AVP-AV-1S-C-OT PULSE GENERATOR

S.N.:

WARRANTY

Avtech Electrosystems Ltd. warrants products of its manufacture to be free from defects in material and workmanship under conditions of normal use. If, within one year after delivery to the original owner, and after prepaid return by the original owner, this Avtech product is found to be defective, Avtech shall at its option repair or replace said defective item. This warranty does not apply to units which have been dissembled, modified or subjected to conditions the applicable specifications or exceeding ratings. This warranty is the extent of the obligation or liability assumed by Avtech with respect to this product and no other warranty or guarantee is either expressed or implied.

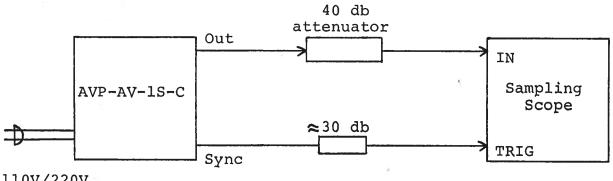


110V/220V 50-60 Hz

Notes:

- The bandwidth capability of components and instruments used to display the pulse generator output signal (attenuators, cables, connectors, etc.) should exceed ten gigahertz.
- 2) The use of 40 db attenuator at the sampling scope vertical input channel will insure a peak input signal to the sampling scope of less than one volt.
- 3) The sync output channel provides TTL level signals. To avoid overdriving the TRIG input channel of some sampling scopes, a 30 db attenuator should be placed at the input to the sampling scope trigger channel.
- 4) To obtain a stable output display the PRF control on the front panel should be set mid-range while the PRF range switch may be in either range. The front panel TRIG toggle switch should be in the INT position. The front panel DELAY controls and the scope triggering controls are then adjusted to obtain a stable output. The scope may then be used to set the desired PRF by rotating the PRF control and by means of the PRF range switch.
- 5) The output pulse width is controlled by means of the front panel one turn PW control. The control should initially be set maximum clockwise and the pulse width adjusted using an oscilloscope.
- 6) The output pulse amplitude is controlled by means of the front panel one turn AMP control. The pulse width may change by several nanoseconds as the output amplitude is reduced from maximum to minimum. Therefore it is convenient to first set the desired amplitude and then set the desired pulse width. Rotation of the PW pot causes the position of the falling edge of the pulse to change.
- 7) Some properties of the output pulse may change as a function of the amplitude pot setting. For some demanding applications, it may be desirable to use a combination of external attenuators and the amplitude pot to achieve the desired output amplitude.
- 8) The output DC offset level is varied from -5 to +5V (to 50 ohm) by the front panel OFFSET one turn control. The DC offset may be turned off using the rear panel OS ON-OFF toggle switch.
- 9) An external clock may be used to control the output PRF of the AVP unit by setting the front panel TRIG toggle switch in the EXT position and applying a 0.2 usec (approx) TTL level pulse to the TRIG BNC connector

input. For operation in this mode, the scope time base must also be triggered by the external clock rather than from the SYNC output.


- 10) The monitor output (-M) provides a 20 db attenuated coincident replica of the main output. (option).
- 11) To voltage control the output pulse width, remove the jumper wire between banana plugs A and B on the back panel and apply 0 to +10V to connector $B(R_{IN} \ge 10K)$. (option).
- 12) To voltage control the output amplitude, remove the jumper wire between banana plugs A and B on the back panel and apply 0 to +10V to connector B ($R_{IN} \ge 10K$). (option).
- 13) For units with the dual output polarity option (-PN) a positive output pulse is obtained at the OUT SMA connector. To obtain a negative output pulse, connect the AVX-2-T module to the OUT SMA connector. A negative output pulse is then obtained at the output of the AVX-2-T module. To offset the negative pulse, connect the rear panel OFFSET OUT terminal to the DC terminal of the AVX-2-T module and set the rear panel OS ON-OFF switch to the ON position.

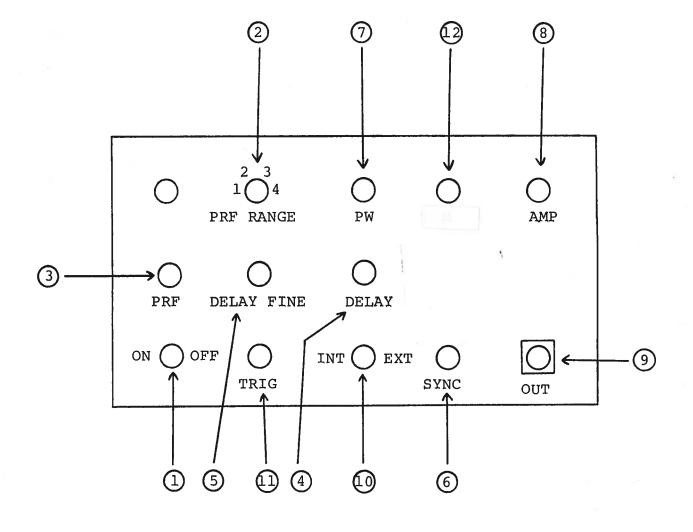

- (1) <u>ON-OFF Switch</u>. Applies basic prime power to all stages.
- (2) <u>PRF Control</u>. The PRF RANGE and PRF controls determine
 (3) output PRF as follows:

		PRF	MIN	PRF	MAX
Range	1	100	Hz	1	KHz
Range	2	1	KHz	10	KHz
Range	3	10	KHz	100	KHz
Range	4	100	KHz	1	MHz


- (4) <u>DELAY Controls</u>. Controls the relative delay between the
 (5) reference output pulse provided at the SYNC output (6) and the main output (9). This delay is variable over the range of 0 to at least 500 nsec.
- (6) <u>SYNC Output</u>. This output precedes the main output (9) and is used to trigger the sampling scope time base. The output is a TTL level 100 nsec (approx) pulse capable of driving a fifty ohm load.
- (7) <u>PW Control</u>. A one turn control which varies the output pulse width from 0 to 4 nsec.
- (8) <u>AMP Control</u>. A one turn control which varies the output pulse amplitude.
- (9) OUT. SMA connector provides output to 50 ohm load.
- (10) <u>EXT-INT Control</u>. With this toggle switch in the INT position, the PRF of the AVP unit is controlled via an internal clock which in turn is controlled by the PRF controls. With the toggle switch in the EXT position, the AVP unit requires a 0.2 usec TTL level pulse applied at the TRIG input in order to trigger the output stages. In addition, in this mode, the scope time base must be triggered by the external trigger source.
- (11) <u>TRIG Input</u>. The external trigger signal is applied at this input when the EXT-INT toggle switch is in the EXT position.
- (12) <u>OFFSET Control</u>. The output DC offset is varied from -5 to +5V (to 50 ohms) by this one turn control. OFFSET may be turned OFF using the back panel OS ON-OFF toggle switch.

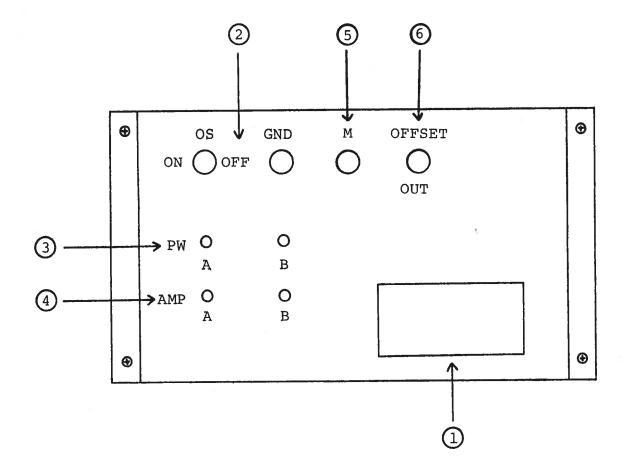


- (1) <u>FUSED CONNECTOR, VOLTAGE SELECTOR</u>. The detachable power cord is connected at this point. In addition, the removable cord is adjusted to select the desired input operating voltage. The unit also contains the main power fuse.
- (2) To turn DC output offset OFF put toggle switch in OFF position.
- (3) To voltage control the output pulse width, remove the jumper wire between banana plugs A and B and apply 0 to +10V to connector B ($R_{IN} > 10K$). (option).
- (4) To voltage control the output amplitude, remove the jumper wire between banana plugs A and B and apply O to +10V to connector B ($R_{IN} \ge 10K$). (option).
- (5) <u>MONITOR OUT M</u>. Provides an attenuated (x10) coincident replica of the main positive output pulse to fifty ohms. (option).

S. 141

(6) <u>OS OUT</u>. Output of internally generated offset. To offset negative output pulse, connect to DC terminal of AVX-T-2 module.

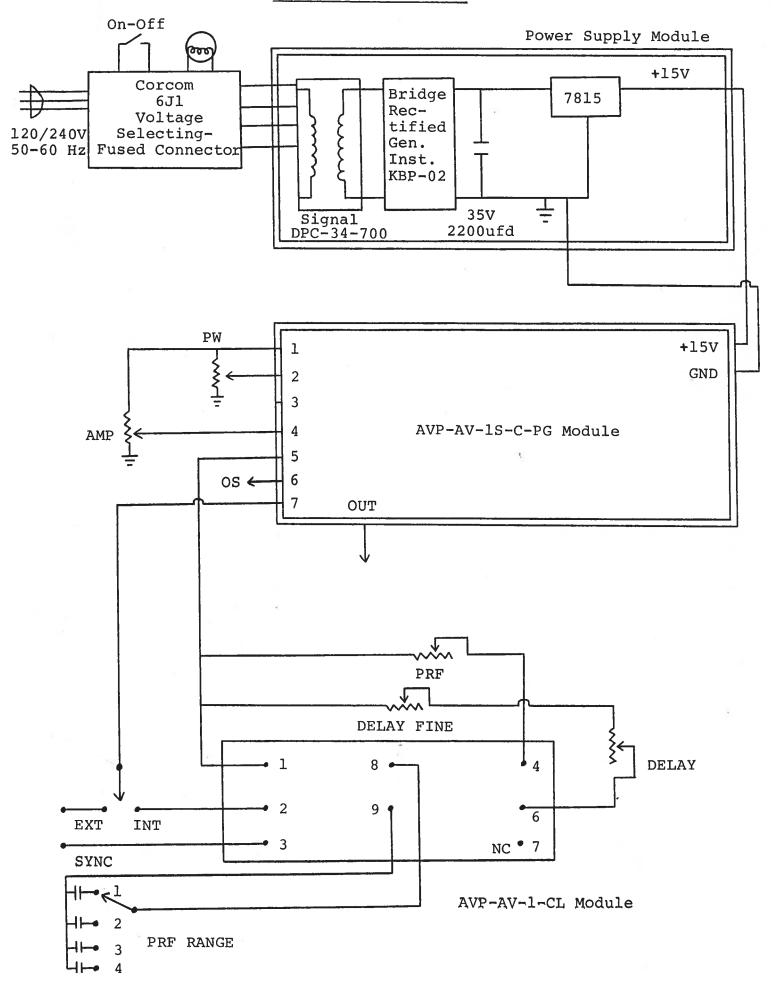

SYSTEM BLOCK DIAGRAM (WITH EA, EW AND PN OPTIONS)

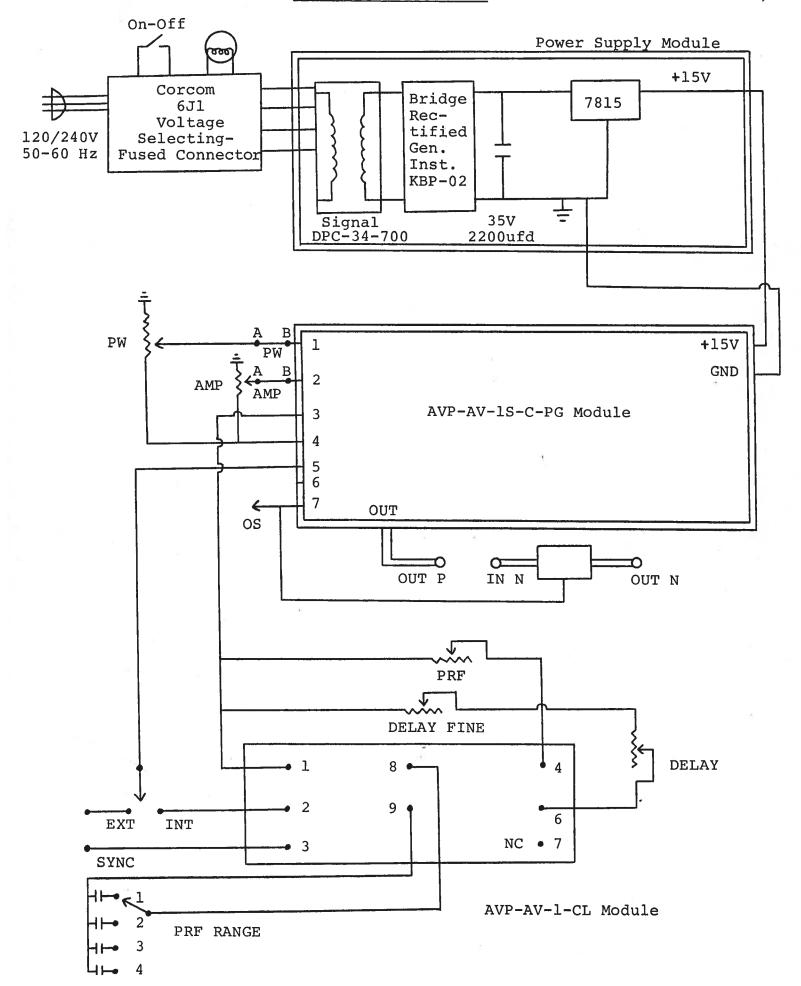

SYSTEM DESCRIPTION AND REPAIR PROCEDURE

The AVP-AV-1S-C consists of a pulse generator module (AVP-AV-1S-C-PG), a clock module (AVP-AV-1-CL) and a power supply board which supplies +15 volts (600 mA max) to the pulse generator module. In the event that the unit malfunctions, remove the instrument cover by removing the four Phillips screws on the back of the unit. The top cover may then be slid off. Measure the voltage at the +15V pin of the PG module. If this voltage is substantially less than +15 volts, unsolder the line connecting the power supply and PG modules and connect 50 ohm 10 W load to the PS output. The voltage across this load should be about +15 V DC. If this voltage is substantially less than 15 volts the PS module is defective and should be repaired or replaced. If the voltage across the resistor is near 15 volts, then the PG module should be replaced or repaired. The sealed PG module must be returned to Avtech for repair (or replacement). The clock module provides a 0.1 usec TTL level trigger pulse at pin 2 to trigger the PG module and a 0.1 usec TTL level sync pulse at pin 3 to trigger the sampling scope display device. The output at pin 3 precedes the output at pin 2 by almost 0 to 100 nsec depending on the DELAY control setting. The clock module is powered by +5.8 V supplied by the PG module (from pin 5 to pin 1). With the INT-EXT switch in the EXT position, the clock module is disconnected from the PG module. The clock module is functioning properly if:

- a) 0.1 usec TTL level outputs are observed at pins 2 and 3.
- b) The PRF of the outputs can be varied over the range of 1 KHz to 1 MHz using the PRF and PRF RANGE controls.
- c) The relative delay between the pin 2 and 3 outputs can be varied by at least 500 nsec by the DELAY controls.

The sealed clock module must be returned to Avtech for repair or replacement if the above conditions are not observed.

Schroff 08.26.85

SHEREBORY REPORT ONE METLATSED RELEVE

- M

Hite AVP-RV-15-C centation of a pulse generator moduly = (AVP-RV-15-C-PS), a clock module (AV-PV-1-CL) and a power supply beard which applies (ES volts (Lov ma maxito the on AB - pulse generator module. In the event that the on MB - dour Phillips screws on the back of the unit. The top cov/MP - V-15 voltage at the the voltage at the voltage is substantianty tees than to voltage is substantially tees than (S volts the PS outputs this voltage is substantially tees than (S volts the PS outputs the voltage at the voltage is substantially tees than (S volts the PS outputs the voltage at the voltage. The second to the voltage

- a) 0.1 dent TTL invel outputs are observed at pins 2 and 3.
- b) The PRF of the outputs can be varied over the range of 1 PR: to 1 PM: vstag the PRF and PRF PANGE controls.
- c) The relative delay between the pin 2 and 3 cutputs can be varied by at least 500 need by the DELAY controls.

The sealed click solute must be retarmed to sylech for repair or replacement if the spoye conditions are not observed.