

#### AVTECH ELECTROSYSTEMS LTD.

NANOSECOND WAVEFORM ELECTRONICS SINCE 1975

P.O. BOX 265 OGDENSBURG, NY U.S.A. 13669-0265 TEL: (315) 472-5270 FAX: (315) 883-1328 TEL: 1-800-265-6681 FAX: 1-800-561-1970

e-mail: info@avtechpulse.com http://www.avtechpulse.com/ BOX 5120, LCD MERIVALE OTTAWA, ONTARIO CANADA K2C 3H4 TEL: (613) 226-5772 FAX: (613) 686-6679

### **INSTRUCTIONS**

MODEL AVG-3
0 to 500V, ≤ 5 ns
IMPULSE GENERATOR

SERIAL NUMBER: \_\_\_\_\_

### WARRANTY

Avtech Electrosystems Ltd. warrants products of its manufacture to be free from defects in material and workmanship under conditions of normal use. If, within one year after delivery to the original owner, and after prepaid return by the original owner, this Avtech product is found to be defective, Avtech shall at its option repair or replace said defective item. This warranty does not apply to units which have been dissembled, modified or subjected to conditions exceeding the applicable specifications or ratings. This warranty is the extent of the obligation assumed by Avtech with respect to this product and no other warranty or guarantee is either expressed or implied.

## TECHNICAL SUPPORT

Phone: 613-226-5772 Fax: 613-686-6679

E-mail: info@avtechpulse.com World Wide Web: http://www.avtechpulse.com

# **TABLE OF CONTENTS**

WARRANTY	
TECHNICAL SUPPORT	
TABLE OF CONTENTS	
INTRODUCTION	4
AVAILABLE OPTIONS	4
SPECIFICATIONS	5
EUROPEAN REGULATORY NOTES	6
EC DECLARATION OF CONFORMITY	6
DIRECTIVE 2002/95/EC (RoHS)	6
DIRECTIVE 2002/96/EC (WEEE)	6
BASIC TEST ARRANGEMENT	8
CONNECTORS	8
GENERAL OPERATING NOTES	9
PERFORMANCE CHECK SHEET	

Manual Reference: /fileserver1/officefiles/instructword/avg/AVG-3,edition1.odt. Last modified February 29, 2024. Copyright © 2024 Avtech Electrosystems Ltd, All Rights Reserved.

#### INTRODUCTION

The AVG-3 is a high performance DC-powered module capable of generating impulses with amplitudes of 150V to 500V into  $50\Omega$  loads at repetition rates up to 20 kHz. The full-width half-power (FWHP) pulse width is fixed at  $\leq 5$  ns.

Instruments with the "-P" model suffix can generate up to +500V, whereas instruments with the "-N" model suffix can generate up to -500V.

The AVG-3 must be triggered by an external TTL pulse (> 50 ns) applied to the "IN" connector.

The output is designed to drive  $50\Omega$  loads. (A  $50\Omega$  load is required for proper operation.) The output is AC-coupled.

This instrument is intended for use in research and development laboratories.

#### AVAILABLE OPTIONS

The AVG-3 is available with several options:

- -EA Option: the output amplitude can be controlled by an externally generated 0 to +10V analog control voltage.
- -M Option: a monitor output is provided.
- -OS Option: an externally generated DC offset can be added to the output.

# **SPECIFICATIONS**

Model:	AVG-3	
Amplitude¹: (50Ω load)	150 to 500 V	
Pulse width: (full-width half-power)	≤ 5 ns	
Rise time:	≤ 2 ns	
Fall time:	≤ 10 ns	
PRF:	0 to 20 kHz	
Polarity <sup>2</sup> :	Positive or negative	
Propagation delay:	≤ 50 ns (Ext trig in to pulse out)	
Jitter:	± 100 ps (Ext trig in to pulse out)	
DC offset:	Optional <sup>3</sup> : Apply required DC offset (± 50 Volts, 250 mA max) to back-panel solder terminals	
Trigger required:	+5 Volts, 50 to 500 ns (TTL)	
Monitor output:	Optional⁴: Provides a 20 dB attenuated coincident replica of main output	
Connectors:	Out: SMA, In: SMA, Power: Solder terminal	
Dimensions: (H x W x D)	43 mm x 76 mm x 152 mm (1.7" x 3.0" x 6.0")	
Power:	+15 Volts, 350 mA	
Chassis material:	Cast aluminum, blue enamel	
Temperature range:	Any, +5°C to +40°C	
Mounting:	It is recommended that the module be bolted to a heatsink, for cooling.	

For electronic control (0 to + 10 V) of amplitude, suffix the model number with -EA. Electronic control units also include standard front-panel one-turn controls.
 Indicate desired polarity by suffixing model number with -P or -N (i.e. positive or negative). AVX-1 transformer may be used to invert polarity.
 For DC offset option suffix model number with -OS.
 For monitor option add suffix -M.

## **EUROPEAN REGULATORY NOTES**

#### **EC DECLARATION OF CONFORMITY**

We Avtech Electrosystems Ltd.

P.O. Box 5120, LCD Merivale

Ottawa, Ontario Canada K2C 3H4

declare that this pulse generator meets the intent of Directive 89/336/EEC for Electromagnetic Compatibility. Compliance pertains to the following specifications as listed in the official Journal of the European Communities:

EN 50081-1 Emission

EN 50082-1 Immunity

and that this pulse generator meets the intent of the Low Voltage Directive 72/23/EEC as amended by 93/68/EEC. Compliance pertains to the following specifications as listed in the official Journal of the European Communities:

EN 61010-1:2001 Safety requirements for electrical equipment for measurement, control, and laboratory use



## DIRECTIVE 2002/95/EC (RoHS)

This instrument is exempt from Directive 2002/95/EC of the European Parliament and of the Council of 27 January 2003 on the Restriction of the use of certain Hazardous Substances (RoHS) in electrical and electronic equipment. Specifically, Avtech instruments are considered "Monitoring and control instruments" (Category 9) as defined in Annex 1A of Directive 2002/96/EC. The Directive 2002/95/EC only applies to Directive 2002/96/EC categories 1-7 and 10, as stated in the "Article 2 - Scope" section of Directive 2002/95/EC.

#### DIRECTIVE 2002/96/EC (WEEE)

European customers who have purchased this equipment directly from Avtech will have completed a "WEEE Responsibility Agreement" form, accepting responsibility for WEEE


compliance (as mandated in Directive 2002/96/EC of the European Union and local laws) on behalf of the customer, as provided for under Article 9 of Directive 2002/96/EC.

Customers who have purchased Avtech equipment through local representatives should consult with the representative to determine who has responsibility for WEEE compliance. Normally, such responsibilities with lie with the representative, unless other arrangements (under Article 9) have been made.

Requirements for WEEE compliance may include registration of products with local governments, reporting of recycling activities to local governments, and financing of recycling activities.




## **BASIC TEST ARRANGEMENT**

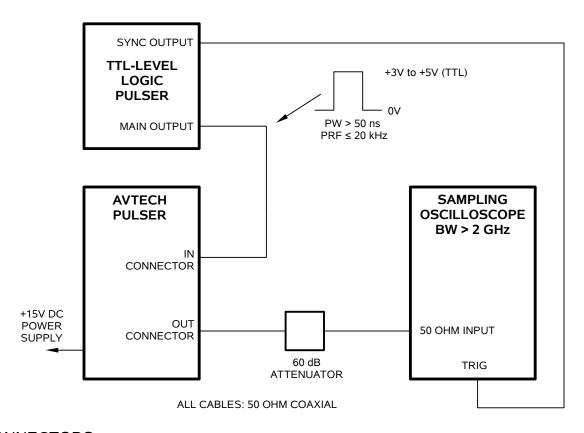

### **CONNECTORS**

The location of the IN and OUT connectors, and the amplitude control, are shown in the photo below. The +15V and GND power terminals are on the opposite end of the module.

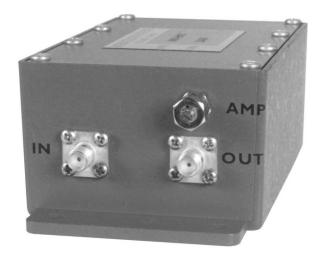

#### GENERAL OPERATING NOTES

- The bandwidth capability of components and instruments used to display the pulse generator output signal (attenuators, cables, connectors, etc.) should exceed 2 GHz.
- 2) The use of 60 dB attenuator on the output will insure a peak enput signal to the sampling scope of less than one volt.
- 3) In general, the source pulse generator trigger delay control should be set in the 0.1 to 1.0 us range, for proper positioning of the output pulse on the sampling oscilloscope display.
- 4) WARNING: The module may fail if triggered at a PRF greater than 20 kHz.
- 5) The output pulse amplitude is controlled by means of the one turn "AMP" potentiometer, over a range of 150V to 500V, approximately.
- 6) To DC offset the output pulse connect a DC power supply set to required DC offset value to the terminals marked "OS". The maximum attainable DC offset voltage is +50 volts. (Option).
- 7) The monitor output port (M) provides a coincident attenuated (÷10) replica of the main output to a 50 ohm load. (Option).
- 8) It is recommended that the module be bolted to a heatsink, for cooling purposes. This will improve the stability of the output, by reducing thermal drift.
- 9) For additional information:

Tel: 613-226-5772 Fax: 613-686-6679

Email: info@avtechpulse.com

# PERFORMANCE CHECK SHEET