# **INSTRUCTIONS**

# MODEL AVP-AV-1-EW-M PULSE GENERATOR

S.N.:

#### **WARRANTY**

Avtech Electrosystems Ltd. warrants products of its manufacture to be free from defects in material and workmanship under conditions of normal use. If, within one year after delivery to the original owner, and after prepaid return by the original owner, this Avtech product is found to be defective, Avtech shall at its option repair or replace said defective item. This warranty does not apply to units which have been dissembled, modified or subjected to conditions exceeding the applicable specifications or ratings. This warranty is the extent of the obligation assumed by Avtech with respect to this product and no other warranty or guarantee is either expressed or implied.

#### TECHNICAL SUPPORT

Phone: 613-226-5772 or 1-800-265-6681 Fax: 613-226-2802 or 1-800-561-1970


E-mail: info@avtechpulse.com World Wide Web: http://www.avtechpulse.com

# **TABLE OF CONTENTS**

WARRANTY
TABLE OF CONTENTS
FIG. 1: PULSE GENERATOR TEST ARRANGEMENT
GENERAL OPERATING INSTRUCTIONS
PERFORMANCE CHECK SHEET

 $\label{lem:manual-reference:manual-ref$ 

### FIG. 1: PULSE GENERATOR TEST ARRANGEMENT

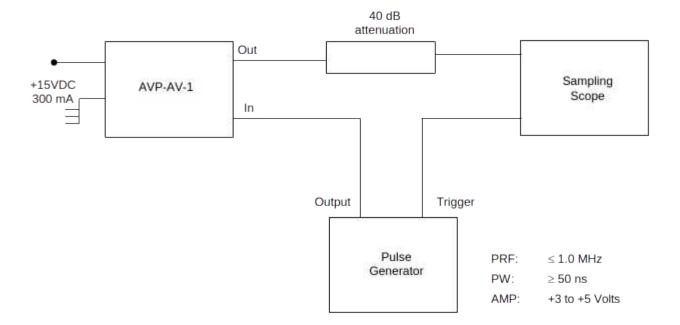

#### **GENERAL OPERATING INSTRUCTIONS**

- The bandwidth capability of components and instruments used to display the pulse generator output signal (attenuators, cables, connectors, etc.) should exceed ten-gigahertz.
- 2) The use of 40 dB attenuator will insure a peak input signal to the sampling scope of less than one Volt.
- 3) In general, the source pulse generator trigger delay control should be set in the 0.1 to 1.0 us range. Other settings should be as shown in the above diagram.
- 4) The Model AVP-AV pulse generator can withstand an infinite VSWR on the output port.
- 5) <u>WARNING</u>: Model AVP-AV may fail if triggered at a PRF greater than 1.0 MHz.
- The output pulse width is controlled by 0 to +10 VDC applied to the front panel PW solder terminal ( $R_{IN} \ge 10k$ ).
- 7) The output pulse amplitude is controlled by means of the one turn potentiometer (AMP). The pulse width may change by several nanoseconds as the output amplitude is reduced from maximum to minimum. Therefore it is convenient to first set the desired amplitude and then set the desired pulse width. Rotation of the PW pot causes the position of the falling edge of the pulse to change.
- 8) Some properties of the output pulse may change as a function of the amplitude pot setting. For some demanding applications, it may be desirable to use a combination of external attenuators and the amplitude pot to achieve the desired output amplitude.
- 9) The monitor output provides a coincident attenuated replica (x10) of the output pulse.
- 10) For additional assistance:

Tel: 613-226-5772 Fax: 613-226-2802

Email: info@avtechpulse.com

### PERFORMANCE CHECK SHEET