



AVTECH ELECTROSYSTEMS LTD.

NANOSECOND WAVEFORM ELECTRONICS
SINCE 1975

P.O. BOX 265
OGDENSBURG, NY
U.S.A. 13669-0265
TEL: (315) 472-5270
FAX: (613) 226-2802

TEL: 1-800-265-6681
FAX: 1-800-561-1970

e-mail: info@avtechpulse.com
<http://www.avtechpulse.com>

P.O. BOX 5120 STN. F
OTTAWA, ONTARIO
CANADA K2C 3H4
TEL: (613) 226-5772
FAX: (613) 226-2802

old.

INSTRUCTIONS

MODEL AVO-8D-C-M-OP1B-OPWRA

**0 TO +50 V, 300 AMP
LASER DIODE DRIVER
WITH IEEE 488.2 AND RS-232 CONTROL**

SERIAL NUMBER: _____

WARRANTY

Avtech Electrosystems Ltd. warrants products of its manufacture to be free from defects in material and workmanship under conditions of normal use. If, within one year after delivery to the original owner, and after prepaid return by the original owner, this Avtech product is found to be defective, Avtech shall at its option repair or replace said defective item. This warranty does not apply to units which have been disassembled, modified or subjected to conditions exceeding the applicable specifications or ratings. This warranty is the extent of the obligation assumed by Avtech with respect to this product and no other warranty or guarantee is either expressed or implied.

TECHNICAL SUPPORT

Phone: 613-226-5772 or 1-800-265-6681

Fax: 613-226-2802 or 1-800-561-1970

E-mail: info@avtechpulse.com

World Wide Web: <http://www.avtechpulse.com>

TABLE OF CONTENTS


WARRANTY	2
TECHNICAL SUPPORT	2
TABLE OF CONTENTS	3
INTRODUCTION	4
SPECIFICATIONS	6
INSTALLATION	7
VISUAL CHECK	7
PLUGGING IN THE INSTRUMENT	7
FRONT PANEL CONTROLS	8
REAR PANEL CONTROLS	10
GENERAL INFORMATION	11
BASIC TEST ARRANGEMENT	11
BASIC PULSE CONTROL	12
MONITOR CIRCUIT	13
TRIGGER MODES	13
PULSE WIDTH MODES	14
GATING MODES	14
PROTECTION AGAINST INCORRECT USAGE	14
WATER COOLING	15
TOP AND BOTTOM COVER REMOVAL	15
RACK MOUNTING	15
START-UP CHECK-LIST FOR LOCAL CONTROL	16
PROGRAMMING YOUR PULSE GENERATOR	18
KEY PROGRAMMING COMMANDS	18
ALL PROGRAMMING COMMANDS	18
PERFORMANCE CHECK SHEET	20
APPENDIX A - LOW-VALUE, LOW-INDUCTANCE, HIGH-POWER RESISTORS	21
SUPPLIERS	21

INTRODUCTION

The Model AVO-8D-C-M-OP1B-OPWRA pulse generator is designed for pulsing laser diode and other low impedance loads ($R_L > 0.16\Omega$) with rectangular pulses as high as 300 Amperes (or 50 Volts), pulse widths from 10 us to 1 ms, and average output power to 4500 Watts.

The Model AVO-8D-C-M-OP1B-OPWRA pulse generator is a voltage pulser. The current amplitude is determined by Ohm's Law. That is, the current is the output voltage divided by the load resistance.

The AVO-8D-C-M-OP1B-OPWRA system consists of an instrument mainframe, an output module (the AVO-8D-OPWRA-PG) which connects to the mainframe via a 4 foot long detachable cable and a user-supplied high-current DC lab power supply. The load is connected to 2 cm x 4 cm copper bus bars. Output pulse amplitude control is achieved by means of the user-supplied high current DC lab power supply which provides the prime power to the output module (see diagram below). The output module acts as a high-efficiency, high-speed switch which connects the lab power supply to the load during the output pulse duration. The output pulse voltage amplitude is approximately equal to the lab power supply voltage less about one Volt. The lab power supply must be capable of supplying the average value (i.e. I_{DC}) of the peak current supplied to the load (I_{OUT}). I_{DC} , I_{OUT} , pulse width (PW) and pulse period (T) are related as shown in the diagram. It is essential that a low-inductance current-limiting resistor (R) be added in series with the diode being tested. See the "Basic Test Arrangement" section for details.

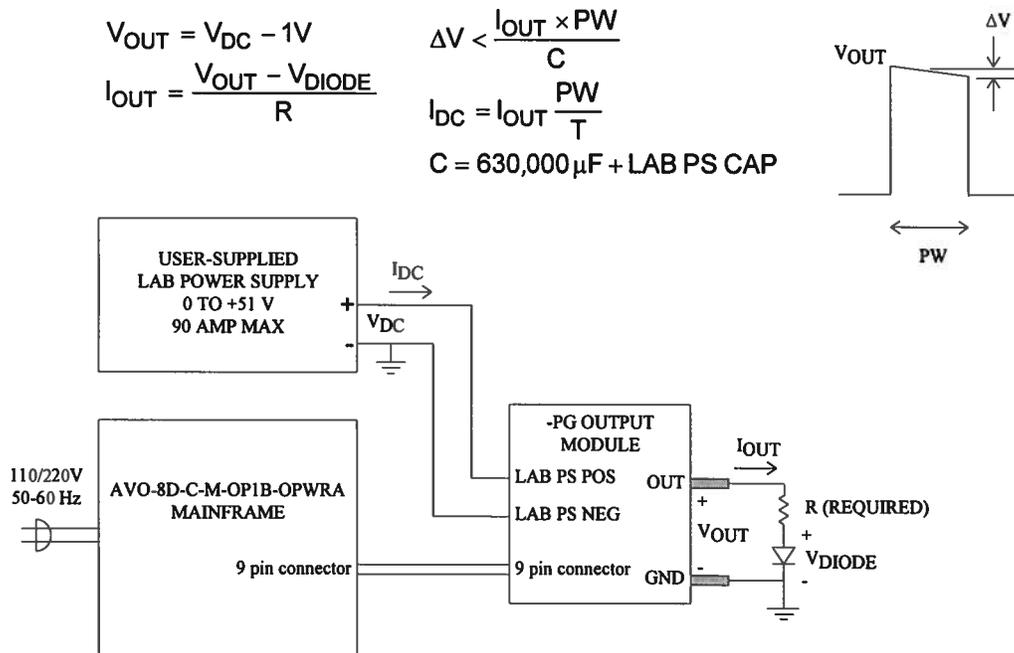

The AVO-8D-C-M-OP1B-OPWRA includes provision for water-cooling, which may be necessary at high duty cycles (i.e., >10%).

Protective circuits monitor the lab power supply voltage level and the output module temperature and will automatically disable the triggering of the output stage if either the applied voltage or temperature exceed rated values.

A monitor output is available which provides an attenuated coincident replica of the main output current pulse. The front-panel display also shows the measured current amplitude. This displayed measurement loses accuracy for pulse widths below $30\mu\text{s}$.

SPECIFICATIONS

Model:	AVO-8D-C-M-OP1B-OPWRA
Amplitude:	0 to +300 Amperes, (0 to +50 Volts to $R_L \geq 0.16$ Ohms)
Pulse width:	10 us to 1 ms
Rise time:	≤ 5 us
Fall time:	≤ 5 us
PRF:	0.1 Hz to 1 kHz
Max. duty cycle:	30%
Output impedance:	≤ 0.01 Ohms
Max. average output current:	90 Amperes
Propagation delay:	≤ 100 ns (Ext trig in to pulse out)
Jitter:	± 500 ps (Ext trig in to pulse out)
Trigger required:	Internal Mode: +5 Volt, 50 ns or wider (TTL) External Mode: +5 Volt, $PW_{IN} = PW_{OUT}$ (TTL)
Monitor output:	Provides an attenuated coincident replica of the main output current pulse
Sync delay:	Sync out to pulse out: Variable 0 to ± 20 ms
Sync output:	+ 5 Volts, 200 ns, will drive 50 Ohm loads
Connectors:	Out: Two 0.15 cm x 2.0 cm x 4.0 cm copper strips (bolt connection) Trig: BNC, Sync (-C only): BNC, Monitor: BNC, DC Power: 100 Amp SUPERCON connectors (included)
Power, DC:	0 to 55 V, 90 Amp max
Power, AC:	120/240 Volts (switchable) 50 - 60 Hz
Dimensions: (H x W x D)	Mainframe: 102 mm x 203 mm x 305 mm (4" x 8" x 12") Output module: 152 mm x 229 mm x 305 mm (6" x 9" x 12")
Chassis material:	anodized aluminum, with blue plastic trim
Mounting:	Any
Temperature range:	+ 10° to + 40° C

INSTALLATION

VISUAL CHECK


After unpacking the instrument mainframe and the output module, examine to ensure that they have not been damaged in shipment. Visually inspect all connectors, knobs, liquid crystal displays (LCDs), and the handles. Confirm that a power cord and two instrumentation manuals (this manual and the "OP1B Interface Programming Manual") are with the instrument. If the instrument has been damaged, file a claim immediately with the company that transported the instrument.

PLUGGING IN THE INSTRUMENT

Examine the rear of the instrument. There will be a male power receptacle, a fuse holder and the edge of the power selector card visible. Confirm that the power selector is in the correct orientation - it should be marked either 120 or 240, indicating whether it expects 120V AC or 240V AC. If it is not set for the proper voltage, remove the fuse and then grasp the card with a pair of pliers and remove it. Rotate horizontally through 180 degrees. Reinstall the card and the correct fuse. In the 120V setting, a 1.0A slow blow fuse is required. In the 240V setting, a 1/2A slow blow fuse is required.

Note: For first-time operation, rotate the "Contrast" knob on the front-panel fully clockwise.

FRONT PANEL CONTROLS

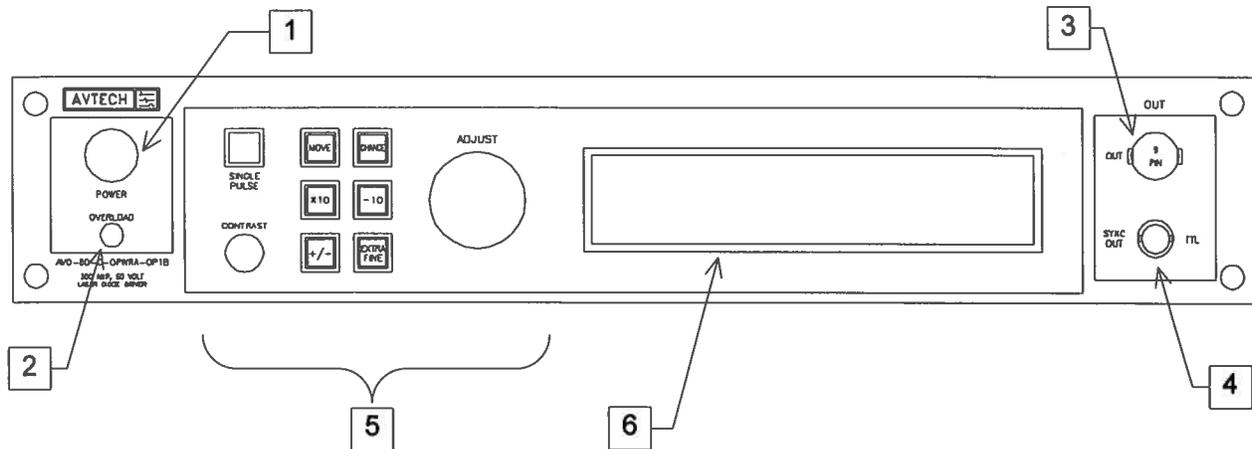

1. **POWER Switch.** The POWER push button switch applies AC prime power to the primaries of the transformer, turning the instrument on. The push button lamp (#382 type) is connected to the +15V DC supply.
2. **OVERLOAD.** An protective circuit controls the front panel overload light. This indicator will light if:
 - The instrument becomes excessively hot
 - The applied DC voltage exceeds 55V
 - The applied DC voltage is negative


The overload light may illuminate briefly when the AC power is first applied. If this indicator lights at any other time, the instrument should be turned off until the cause of the overload has been identified and corrected.
3. **OUT CONNECTOR.** This is a multi-pin connector which attaches the 4-foot-long, 9-pin cable from the pulse generator module to the mainframe.
4. **SYNC OUT.** This connector supplies a SYNC output that can be used to trigger other equipment, particularly oscilloscopes. This signal leads, or lags, the main output by a duration set by the "DELAY" controls and has an approximate amplitude of +3 Volts to $R_L > 1K$ with a pulse width of approximately 200 ns.

5. KEYPAD.

Control Name	Function
MOVE	This moves the arrow pointer on the display.
CHANGE	This is used to enter the submenu, or to select the operating mode, pointed to by the arrow pointer.
×10	If one of the adjustable numeric parameters is displayed, this increases the setting by a factor of ten.
÷10	If one of the adjustable numeric parameters is displayed, this decreases the setting by a factor of ten.
+/-	If one of the adjustable numeric parameters is displayed, and this parameter can be both positive or negative, this changes the sign of the parameter.
EXTRA FINE	This changes the step size of the ADJUST knob. In the extra-fine mode, the step size is twenty times finer than in the normal mode. This button switches between the two step sizes.
ADJUST	This large knob adjusts the value of any displayed numeric adjustable values, such as frequency, pulse width, etc. The adjust step size is set by the "EXTRA FINE" button. When the main menu is displayed, this knob can be used to move the arrow pointer.
CONTRAST	This adjusts the contrast of the display. Maximum contrast occurs when the knob is rotated fully clockwise.

6. LIQUID CRYSTAL DISPLAY (LCD). This LCD is used in conjunction with the keypad to change the instrument settings. Normally, the main menu is displayed, which lists the key adjustable parameters and their current values. The "OP1B Interface Programming Manual" describes the menus and submenus in detail.


REAR PANEL CONTROLS

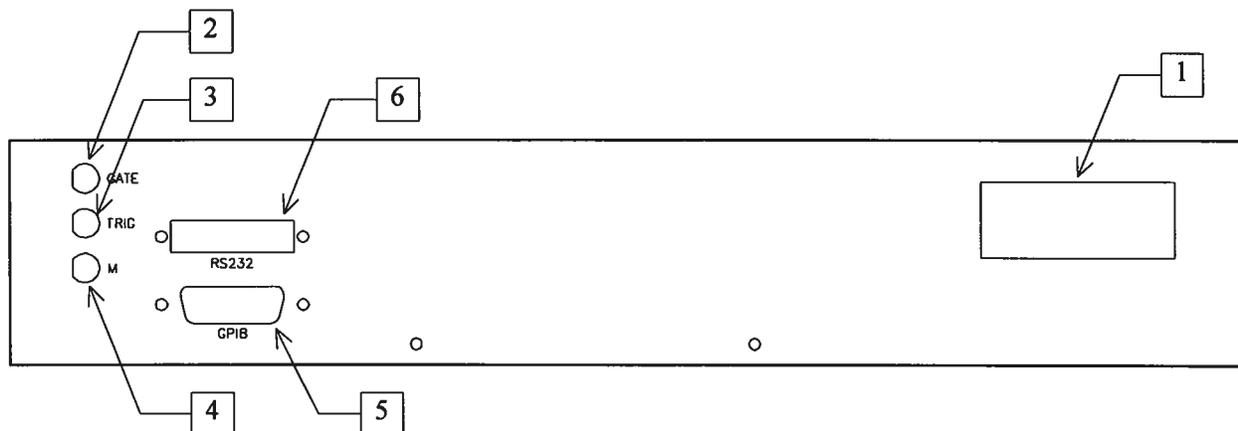

1. **AC POWER INPUT.** A three-pronged recessed male connector is provided on the back panel for AC power connection to the instrument. Also contained in this assembly is a 1.0A slow blow fuse and a removable card that can be removed and repositioned to switch between 120V AC in and 240V AC in.
2. **GATE.** This TTL-level (0 and +5V) logic input can be used to gate the triggering of the instrument. This input can be either active high or active low, depending on the front panel settings or programming commands. (The instrument triggers normally when this input is unconnected).
3. **TRIG.** This TTL-level (0 and +5V) logic input can be used to trigger the instrument, if the instrument is set to triggering externally. The instrument triggers on the rising edge of this input.
4. **M.** This is the current monitor output. This output provides a voltage waveform that is proportional to the current waveform on the main output. The monitor relationship is: $V_{MON} = 0.01\Omega \times I_{OUT}$, for a load of $> 1 \text{ k}\Omega$. (The monitor output can also drive a 50Ω load, but the output voltage will be reduced by a factor of two. This output is short-circuit protected.) The rising and falling edges of the monitor waveform may show substantial voltage spikes caused by the inductance of the current sensing element. These spikes are artefacts of the measurement process and are not present in the actual current output waveform.
5. **GPIB Connector.** A standard GPIB cable can be attached to this connector to allow the instrument to be computer-controlled. See the "OP1B Interface Programming Manual" for more details on GPIB control.
6. **RS-232 Connector.** A standard serial cable with a 25-pin male connector can be attached to this connector to allow the instrument to be computer-controlled. See the "OP1B Interface Programming Manual" for more details on RS-232 control.

GENERAL INFORMATION

BASIC TEST ARRANGEMENT

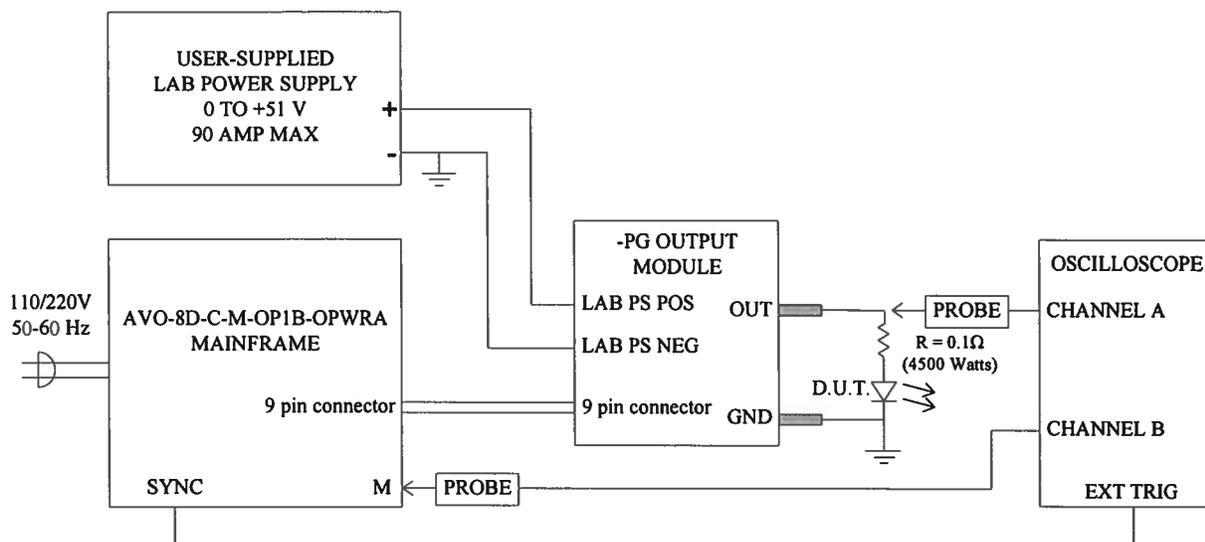

The equipment should be connected in the general fashion shown above.

The output module should always be connected to the mainframe BEFORE power is applied. The current monitor will not work properly otherwise.

The user supplied lab power supply attaches to the -PG output module via the red and black SUPERCON connectors which are supplied. The positive terminal of the power supply is to be connected to the RED SUPERCON connector on the -PG module. The negative terminal on the lab power supply is to be connected to ground and to the BLACK SUPERCON connector on the -PG module.

The output terminals of the pulse generator module consists of the 1.5 x 4.0 cm copper bus bars protruding from the end of the -PG modules. The load may be bolted to the output bus bars using 10-32 bolts.

It is essential that a low-inductance current limiting resistor (see Appendix A for possible suppliers) be placed in series with the laser diode load, particularly if the diode has a low series resistance and "on" voltage ($< 2.5V$). This is necessary because the driver is a pulsed voltage source and with a highly nonlinear load such as a laser diode it will be extremely difficult to control and limit the load current without a fixed series resistance. The series load resistor can be as large as 0.1Ω but with that the power dissipated by the resistor may be as high as 4.5 kW (depending on the voltage and duty cycle). It may be necessary to water-cool the resistor. The power dissipated in the resistor is given by

$$P = I^2 \times R \times \frac{PW}{T},$$

where "I" is the current, "R" is the resistance, "PW" is the pulse width, and "T" is the pulse period (1/frequency).

The output module should be water-cooled for duty cycles greater than 10%.

BASIC PULSE CONTROL

This instrument can be triggered by its own internal clock or by an external TTL trigger signal. In either case, three output channels respond to the trigger: OUT, SYNC, and M. The OUT channel is the signal that is applied to the device under test. Its amplitude and pulse width are variable. The SYNC pulse is a fixed-width TTL-level reference pulse used to trigger oscilloscopes or other measurement systems. When the delay is set to a positive value the SYNC pulse precedes the OUT pulse. The M (Monitor) output is a voltage waveform that is proportional to the current waveform on OUT.

$V_{MON} = 0.01\Omega \times I_{OUT}$, for a monitor load of $> 1 \text{ k}\Omega$. (The rising and falling edges of the monitor waveform may show substantial voltage spikes caused by the inductance of the current sensing element. These spikes are artefacts of the measurement process and are not present in the actual current output waveform.)

These pulses are illustrated below:

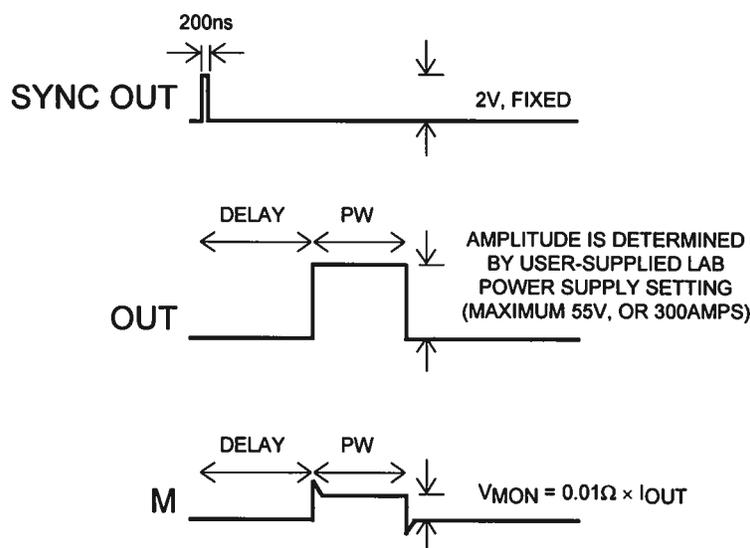


Figure 4 - Basic Output Pulses

The delay, pulse width, and frequency (when in the internal mode), of the OUT pulse can be varied with front panel controls or via the GPIB or RS-232 computer interfaces.

The amplitude of the OUT pulse is controlled by the amplitude of the DC potential supplied to the SUPERCON connectors on the PG module. **CAUTION!! DO NOT EXCEED 55 VDC.**

MONITOR CIRCUIT

As noted in the previous section, a current monitor output is available. The current monitor output also measures amplitude of the most recent pulse, in amperes, and displays it on the front panel LCD. The value can also be read via the computer interface. The accuracy of the measurement decreases for pulse widths below 30 μs . (The measurement on the LCD is marked with an asterisk when its accuracy is degraded due to the narrow pulse width). The rising and falling edges of the monitor waveform may show substantial voltage spikes caused by the inductance of the current sensing element. These spikes are artefacts of the measurement process and are not present in the actual current output waveform.

The output module should always be connected to the mainframe BEFORE power is applied. The current monitor will not work properly otherwise.

TRIGGER MODES

This instrument has four trigger modes:

- **Internal Trigger:** the instrument controls the trigger frequency, and generates the clock internally.
- **External Trigger:** the instrument is triggered by an external TTL-level clock on the back-panel TRIG connector.
- **Manual Trigger:** the instrument is triggered by the front-panel "SINGLE PULSE" pushbutton.
- **Hold Trigger:** the instrument is set to not trigger at all.

These modes can be selected using the front panel trigger menu, or by using the appropriate programming commands. (See the "OP1B Interface Programming Manual" for more details.)

PULSE WIDTH MODES

This instrument has two pulse width modes:

- Normal: the instrument controls the output pulse width.
- $PW_{IN}=PW_{OUT}$: the output pulse width equals the pulse width of the trigger signal on the "TRIG" connector. The instrument must be in the external trigger mode.

These modes can be selected using the front panel pulse width menu, or by using the appropriate programming commands. (See the "OP1B Interface Programming Manual" for more details.)

GATING MODES

Triggering can be suppressed by a TTL-level signal on the rear-panel GATE connector. The instrument can be set to stop triggering when this input high or low, using the front-panel gate menu or the appropriate programming commands. This input can also be set to act synchronously or asynchronously. When set to asynchronous mode, the GATE will disable the output immediately. Output pulses may be truncated. When set to synchronous mode, the output will complete the full pulse width if the output is high, and then stop triggering. No pulses are truncated in this mode.

PROTECTION AGAINST INCORRECT USAGE

To avoid damaging the instrument, observe these rules:

- Never let the lab power supply voltage exceed 55V
- Never let the duty cycle exceed 30%
- Never let the peak output current exceed 300A
- Never let the average output current exceed 90A
- At high duty cycles (>10%), use water-cooling

This pulse generator incorporates several features to protect against improper use. An protective circuit controls the front panel overload light and an internal buzzer. This indicator will light and the buzzer will sound if:

- The instrument becomes excessively hot
- The applied DC voltage exceeds 55V
- The applied DC voltage is negative

In these situations, triggering will be disabled.

The overload light may illuminate briefly when the AC power is first applied. If this indicator lights at any other time, the instrument should be turned off until the cause of the overload has been identified and corrected.

WATER COOLING

The output module has provision for water cooling. This cooling is necessary at high duty cycles (i.e. >10%). The water requirement is approximately 5 litres/minute. If water cooling is not used, or if the water supply fails, the instrument will heat up until the automatic temperature-protection circuitry trips and disables the output until it has cooled.

TOP AND BOTTOM COVER REMOVAL

The top cover of the instrument may be removed by removing the four Phillips screws on the top panel. With these four screws removed, the top panel may be slid off by pulling it towards the rear. The bottom panel may be similarly removed.

RACK MOUNTING

A rack mounting kit is available. The -R5 rack mount kit may be installed after first removing the one Phillips screw on the side panel adjacent to the front handle.

START-UP CHECK-LIST FOR LOCAL CONTROL

- 1) The instruction manual has been studied thoroughly.
- 2) The "Local Control" section of the "OP1B Interface Programming Manual" has been studied thoroughly.
- 3) The -PG module is connected to the mainframe as shown in the "Basic Test Arrangement" section. (The output module should always be connected to the mainframe BEFORE power is applied. The current monitor will not work properly otherwise.)
- 4) If the duty cycle is to exceed 10%, the water-cooling provisions of the output module should be used. A flow rate of 5 litres/minutes should be sufficient to cool the module.
- 5) The load is connected to the output module. If the load is a diode, the anode of the load is connected to the OUT terminal. Note that with a diode load, a low-inductance current limiting high power resistor must be placed in series with the diode to help limit the peak current. For initial testing, it is recommended that a resistive load be used. Factory tests are conducted using a 0.1 Ohm 4000 Watt resistive load.
- 6) The user-supplied lab power supply is connected with the positive terminal connected to the red SUPERCON on the PG module and the negative terminal connected to the black SUPERCON. The negative terminal is grounded. The power supply potential is set to zero.
- 7) Turn on the prime power to the mainframe. The LCD will briefly display the message, "Nulling Current Monitor", and the main menu will appear. (If nothing appears, rotate the CONTRAST knob fully clockwise.)
- 8) The arrow pointer should be pointing at the frequency menu item. If it is not, press the MOVE button until it is.
- 9) Press the CHANGE button. The frequency submenu will appear. Rotate the ADJUST knob until the frequency is set at the desired setting. The arrow pointer should be pointing at the "Internal" choice. If it is not, press MOVE until it is.
- 10) Press CHANGE to return to the main menu.
- 11) Press the MOVE button to move the arrow pointer to the pulse width menu item. Press CHANGE to bring up the pulse width submenu, and rotate the ADJUST knob until the pulse width is set at the desired setting. The arrow pointer should be pointing at the "Normal" choice. If it is not, press MOVE until it is. Press

CHANGE to return to the main menu.

- 12) Press the MOVE button to move the arrow pointer to the pulse width menu item. Press CHANGE to bring up the pulse width submenu, and rotate the ADJUST knob until the pulse width is set at the desired setting. The arrow pointer should be pointing at the "Normal" choice. If it is not, press MOVE until it is. Press CHANGE to return to the main menu.
- 13) Connect the rear panel M output to the scope (1 VOLT/DIV) and connect the TRIG out to the scope time base. The scope time base should be triggering.
- 14) Press the MOVE button to move the arrow pointer is pointing at the output item. Press CHANGE to bring up the output submenu. The arrow pointer should be initially be pointing at the "Output Off" choice. Press MOVE so that the arrow pointer is pointing at the "Output On" choice. (The mainframe is now supplying a trigger to the output module.) Press CHANGE to return to the main menu.
- 15) Connect a scope probe across the resistive test load and apply prime power to the lab power supply (after first ensuring that the output amplitude is set to zero).
- 16) Gradually increase the output amplitude on the lab power supply and observe the waveforms on the scope and the DC current level on the DC power supply. A rectangular pulse should appear on the scope (for both the load voltage and monitor channels) and the amplitude should increase as the amplitude control on the mainframe is rotated clockwise. At the same time, the average current supplied by the DC supply will increase. (The rising and falling edges of the monitor waveform may show substantial voltages spikes caused by the inductance of the current sensing element. These spikes are artefacts of the measurement process and are not present in the actual current output waveform.)
- 17) Observe the pulse width and pulse period on the scope and confirm that the duty cycle does not exceed 30% and that the peak current does not exceed 300 Amps (i.e. 3 Volts out from the monitor output).
- 18) Observe the DC current supplied by the DC supply and ensure that the average current does not exceed 90 Amperes.
- 19) Adjust pulse width, pulse period (i.e. PRF) and amplitude to obtain the desired settings.
- 20) If additional assistance is required:

Tel: (613) 226-5772, Fax: (613) 226-2802

Email: info@avtechpulse.com

PROGRAMMING YOUR PULSE GENERATOR

KEY PROGRAMMING COMMANDS

The “OP1B Interface Programming Manual” describes in detail how connect the pulse generator to your computer, and the programming commands themselves. A large number of commands are available; however, normally you will only need a few of these. Here is a basic sample sequence of commands that might be sent to the instrument after power-up:

```
trigger:source internal      (selects internal triggering)
frequency 100 Hz           (sets the frequency to 100 Hz)
pulse:width 100 us        (sets the pulse width to 100 us)
delay 30 us                (sets the delay to 30 us)
output on                  (turns on the output)
measure:amplitude?        (this returns the current amplitude, in amperes,
                           as measured by the monitor circuit)
```

These commands will satisfy 90% of your programming needs.

ALL PROGRAMMING COMMANDS

For more advanced programmers, a complete list of the available commands is given below. These commands are described in detail in the “OP1B Interface Programming Manual”. (Note: this manual also includes some commands that are not implemented in this instrument. They can be ignored.)

<u>Keyword</u>	<u>Parameter</u>	<u>Notes</u>
LOCAL		
MEASure:		
:AMPLitude?		[query only]
OUTPut:		
:[STATe]	<boolean value>	
:PROTection		
:TRIPped?		[query only]
REMOTE		
[SOURce]:		
:FREQuency		
[:CW FIXed]	<numeric value>	
[SOURce]:		
:PULSe		
:PERiod	<numeric value>	
:WIDTh	<numeric value>	
:DCYClE	<numeric value>	
:HOLD	WIDTh DCYClE	
:DELay	<numeric value>	

:GATE		
:TYPE	ASync SYNC	
:LEVel	High Low	
STATUS:		
:OPERation		
:[EVENt]?		[query only, always returns "0"]
:CONDition?		[query only, always returns "0"]
:ENABle	<numeric value>	[implemented but not useful]
:QUEStionable		
:[EVENt]?		[query only, always returns "0"]
:CONDition?		[query only, always returns "0"]
:ENABle	<numeric value>	[implemented but not useful]
SYSTEM:		
:COMMunicate		
:GPIB		
:ADDReSS	<numeric value>	
:SERial		
:CONTRol		
:RTS	ON IBFull RFR	
:[RECeive]		
:BAUD	1200 2400 4800 9600	
:BITS	7 8	
:ECHO	<boolean value>	
:PARity		
:[TYPE]	EVEN ODD NONE	
:SBITS	1 2	
:ERRor		
:[NEXT]?		[query only]
:COUNT?		[query only]
:VERSion?		[query only]
TRIGger:		
:SOURce	INTernal EXTernal MANual HOLD IMMEDIATE	
*CLS		[no query form]
*ESE	<numeric value>	
*ESR?		[query only]
*IDN?		[query only]
*OPC		
*SAV	0 1 2 3	[no query form]
*RCL	0 1 2 3	[no query form]
*RST		[no query form]
*SRE	<numeric value>	
*STB?		[query only]
*TST?		[query only]
*WAI		[no query form]

PERFORMANCE CHECK SHEET

APPENDIX A - LOW-VALUE, LOW-INDUCTANCE, HIGH-POWER RESISTORS

SUPPLIERS

- Isotek Corp.
435 Wilbur Ave., Swansea, MA 02777 USA
Phone: 508-673-2900
Fax: 508-676-0885
Internet: <http://www.isotekcorp.com>

An Isotek RTO-B-R001-2.0 resistor is used as the current monitor sensor in this instrument.

- Vishay Electronic Components (Various subsidiaries)
<http://www.vishay.com/>
See attached information



ISA-PLAN® Current Sensing Resistors

P.C.B. Mount  To download information for a specific product, click on its image.

	Model	Description	Resistance	Tolerance	TCR	Rated Power @ 70°C
			Ω	[%]	ppm/K	[W]
	A-N	(Kelvin) 4-terminal resistor	0.001-100	0.1/0.5/1	<10	1
C-N	2 terminal resistor	0.010-100	1	<50	1	

P.C.B. w/ Integral Heatsink  To download information for a specific product, click on its image.

	Model	Description	Resistance	Tolerance	TCR	Rated Power @ 70°C
			Ω	[%]	ppm/K	[W]
	A-H	(Kelvin) 4-terminal resistor	0.001-100	0.1/0.5/1	<10	10
	PBH	2-terminal resistor TO-247	0.002-100	1/5	<50	3/10*
	PBV	4-terminal resistor	0.0005-1	0.5/1/5	<30	3/10*
	PSB	2-terminal resistor TO-220	0.005-1	1/5	<50	10

*mounted on heat sink

Heat Sink Mountable  To download information for a specific product, click on its image.

	Model	Description	Resistance	Tolerance	TCR	Rated Power @ 70°C
			Ω	[%]	ppm/K	[W]
	R-Z	high power precision resistor	0.0005-0.010	0.1	3/5/10	500
	RUG-Z	precision resistor	0.001-100	0.1/1	1-10	250
	RTO-A	TO-238/SOT-227B (ISOTOP)	0.500-100	1/5	<50	50
	RTO-B	TO-238/SOT-227B (ISOTOP)	0.0002-0.470	1/5	<20	30

Bus Bar Assembly  To download information for a specific product, click on its image.


	Model	Description	Resistance	Tolerance	TCR	Rated Power @ 70°C
			Ω	[%]	ppm/K	[W]
	PVG	current sensing up to 100A	0.0002-0.010	0.5/1	<50	5/20 on bus bar assembly

Wire Bondable & Surface Mount		▶▶ To download information for a specific product, click on its image.				
	Model	Description	Resistance	Tolerance	TCR	Rated Power @ 70° C
			Ω	[%]	ppm/K	[W]
	BVS	BVS resistors	0.0003/.0005/.001/.002/.003	1/5	<30	3
	PMA	4-terminal/surface mounting	0.002-1	1/5	<30	3
	PMD	2-terminal/surface mounting	0.002-.500	1/5	<50	2
	SMR	2-terminal resistor	0.005-4.7	0.5/1/5	<15	3
	SMV	4-terminal resistor	0.001-1	0.5/1/5	<15	3
	SMT	2-terminal resistor NEW!!	0.001-1	1/2/5	<50	2
	SMS	NEW!! 2512 Package 2 Terminal Resistor	0.005-1	1/2/5	<50	1
	SMH	NEW!! wire bondable on DCB or IMS substrate.	.005-.500	1/2/5	<50ppm/°C (20° - 60°)	3
	PMB	wire bondable on DCB substrate-4 terminal	0.001-20	1/5	<30	20
	PMU	wire bondable on DCB substrate-4 terminal	0.002-1	1/5	<30	3

*mounted on heat sink



Isotek Voltmeter Shunts and Milliohmmeters

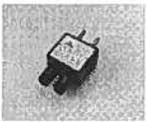Voltmeter Shunts and Milliohmmeters		▶▶ To download information for a specific product, click on its image.				
	Model	Description	Input Range	Sensitivity	Resistance	Price
				[%]	Ω	
	CS-10	Voltmeter Current Shunt	0 to 10A	10mV/A	0.01 ± 0.1%	\$49.00
	CS-20	Voltmeter Current Shunt	5A to 20A	5mV/A	0.005 ± 0.1%	\$56.00
	CS-30	Voltmeter Current Shunt	10A to 30A	1mV/A	0.001 ± 0.1%	\$64.00
	Model	Description	Accuracy	Display	Test Current	Price
	M210	Milliohmmeter	± 0.1% of range	3½ digit lcd	5mA max.	\$429.00
	M210/9B	M210/9B, Kelvin Probe & Clip Leads				\$68.00


To Inquire about a specific product, or if you would just like more information, please fill out the form provided. Thank you

If you have any questions, please email us at tekinfo@isotekcorp.com or call (508) 673-2900.



A COMPREHENSIVE GUIDE TO RESISTIVE SHUNTS AND CURRENT SENSORS

J. Bull

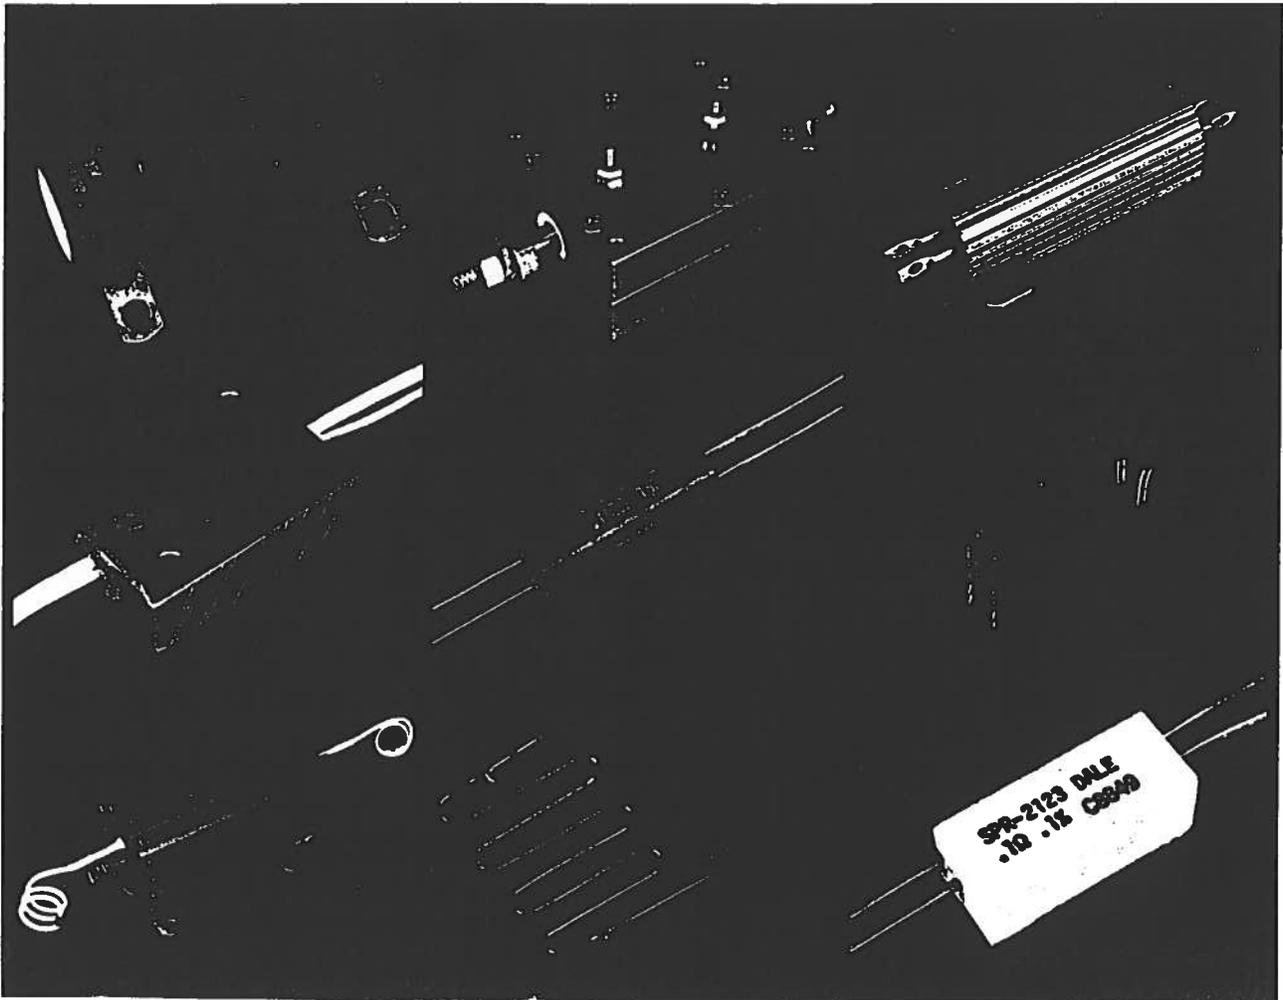

Design Factors

Shunts

- 1.0 **Power rating required**—How much power will be dissipated?
- 2.0 **Disposal of heat generated**—What services are available to remove heat? Forced air?
- 3.0 **Mounting surface and hardware**—What shock and vibration conditions dictate standard or special mounting?
- 4.0 **Resistance value and tolerance**—The tolerance must be consistent with the ability to measure. With specific electrical gauge points identified, two-terminal devices can be toleranced to discriminate 0.001 ohms. Four-terminal devices can be toleranced to discriminate down to 0.0001 ohms. Thus, a two-terminal resistor of 0.1 ohms can be given a tolerance no tighter than $\pm 1.0\%$ (1.0% of 0.1 ohms = 0.001 ohms) while a four-terminal resistor can be given a tolerance as tight as $\pm 0.1\%$ (0.1% of 0.1 ohms = 0.0001 ohms).

Sensors

- 1.0 **Current Rating**—How much current is the sensor expected to handle? Continuously? Pulsed? Distortion restricted?
- 2.0 **Sensitivity**—How much output signal is required per unit of current? (How much μV or mV per ampere?) This sets the resistance value and the power rating.
- 3.0 **Resistance Value**—The required sensor resistance is equal to the current rating times the sensitivity divided by the current rating or numerical equivalence to the sensitivity, but in ohms.


Example: A 2A sensor with 100 mV/A sensitivity will have a full scale output of 0.2 volts $\therefore R = E + I = 0.2 + 2 = 0.1$ ohms
- 4.0 **Power Rating**—The required power rating may be greater than the product $E_{\text{max}} I_{\text{max}}$ if the sensitivity must be the same following self-heating. A positive TCR will cause the resistance value to increase along with the sensitivity. This effect can be minimized by overspecifying the power rating or moving to a lower TCR element.

Product Selection

Making use of the major headings, brief descriptions, and product photos on Pages 9 to 16, locate the device that satisfies your present requirement. Refer to Page 17 for sales information; obtain detailed specifications from the identified source.

Shunts, Low Ohms, High Power (100-1000W)


These high power devices are examples of the range of capability available. More details are available from the Applications Engineering Departments specified on Page 17. Your local representative will be happy to assist with any inquiries. ✓

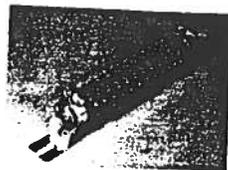


Sternice
5 Sizes
Part No: RSO
Length: 5.4-14.7"
Features: 160-1000W
R068 min
180 ppm/C
-55 to +450°C




Sternice
10 Sizes
Part No: RSSD
Length: 1.3-14.8"
Features: 14-600W R10
min, 75 ppm/C
-55 to +450°C

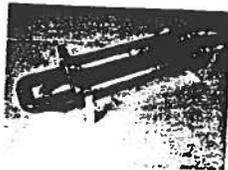


Alma
6 Sizes
Part No: AHPX2
Length: 8.3" (211mm)
Features: 200-600W
R0025 min
-20 ppm/C
Gangable to 6

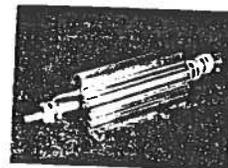

Dale
1 Size
Part No: SPR1002
Length: 4.5" (114mm)
Features: 450W
R05 min, ±1%
Liquid Cooled

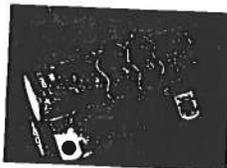

Dale
4 Sizes
Part No: HLZ
Length: 2-8.5"
Features: 35-300W R05
min, 375°C rise
Over-load Protection

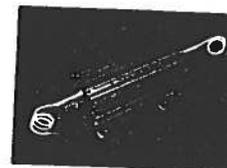


Dale
1 Size
Part No: RH250-17
Length: 4.5" (114mm)
Features: 250W
R05 min, 50 ppm/C
Air Cooled



Alma
1 Size
Part No: AHP
Length: 8.3" (211mm)
Features: 100W
R005 min, -20 ppm/C
Water Cooled



Alma
1 Size
Part No: AHPZ
Length: 8.3" (211mm)
Features:
Same as AHP except
TCR ±5 ppm/C
20°C to 75°C

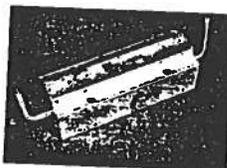


Dale
1 Size
Part No: SPR761A
Length: 3.5" (89mm)
Features: 100W
R005 min ±1%



Alma
3 Sizes
Part No: PCS
Length: 5.1-7.6"
Features: 25-100W R005
min, 5ppm/C, 20-70°C,
0.6°C/watt Temp rise

Shunts, Low Ohms, Mid Power (10-100W)

These mid power devices are examples of the range of capability available. (See comments under Shunts, Low Ohms, High Power.) Some of these shunts are suitable for precise current sensing and should be considered when a power requirement exists in addition to the precision and stability of a current sensor. ✓

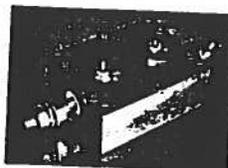

Dale
1 Size
Part No: SPR390
Length: 2.5" (64mm)
Features: 50W
R001 min ±2%



Sternice
4 Sizes
Part No: RH
Length: .64-1.97"
Features: 10-50W R006
min
-55 to +275°C



Vishay-Mann
1 Size
Part No: S9459
Length: 2" (51mm)
Features: 25W
R04 min ±0.1%




**Vishay Bulk
Metal® Resistors**
4 Sizes
Part No: V3PR
Length: 1.7" (43mm)
Features: 25W
Low TCR, Tight Tolerance
to ±.005%



**Vishay Bulk
Metal® Resistors**
4 Sizes
Part No: 301366
Length: 1.7" (43 min)
Features: 25W
Same as V3PR with cur-
rent and V leads



**Vishay Bulk
Metal® Resistors**
1 Size
Part No: 301021
Length: 2.5" (64mm)
Features: 25W
R05 ±1%, 10 ppm/C

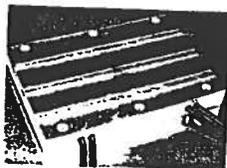

Alma
1 Size
Part No: FP
Length: 3.94" (100mm)
Features: 25W
R001 min, 5 ppm/C
Long-term Stability



Dale
1 Size
Part No: SPR439
Length: 1.5" (38mm)
Features: 25W
Flexible Leads

Vishay Shunts and Current Sensors Supply Locations

1. ALMA COMPONENTS

Wound Wire, Trimmed Bars, Sheets
Wymondham, Norfolk
England NR 18 ORA
Phone (44) 953 602525
FAX (44) 953 604099
TLX 851-975105

2. DALE ELECTRONICS

*Wound Wire, Cut Bars and Sheets**
2064 12th Avenue
Columbus, NE 68601
Phone (402) 563-6283

3. ELLIOTT/ JORDAN

Wound Wire, Cut Rod
P.O. Box 1090
Grand Junction, CO 81502
Phone (303) 242-0810
FAX (303) 242-5917

4. VISHAY - GEKA

*Wound Wire, Thick Film**
Route de Tertre
44150 Ancenis, France
Phone (33) (1) 4655-9800

5. VISHAY-MANN

Wound Wire, Trimmed Sheets
Wymondham, Norfolk
England NR 18 ORA
Phone (44) 953 602525
FAX (44) 953 604099
TLX 851-975105

6. OHMTEK

Thin Film, Thick Film, Bulk Metal® Foil
2160 Liberty Drive
Niagara Falls, NY 14304
Phone (716) 283-4025
FAX (716) 283-5932

7. SFERNICE

Wound Wire, Foil, Thin Film
199 Blvd. de la Madeleine
B.P. 17
06021 Nice Cedex, France
Phone (33) 93 446262
FAX (33) 93 829752

8. TECHNO

Thick Film
7803 Lemona Avenue
Van Nuys, CA 91405
Phone (818) 781-1642
FAX (818) 781-8647

9. ULTRONIX

Wound Wire, Cut Rod, Foil
P.O. Box 1090
Grand Junction, CO 81502
Phone (303) 242-0810
FAX (303) 242-5917

10. VISHAY BULK METAL® RESISTORS

Bulk Metal® Foil
63 Lincoln Highway
Malvern, PA 19355
Phone (215) 644-1300
Sales FAX (215) 640-9081
FAX (215) 296-0657
TWX 510-668-5812

*Also available through:
DRALORIC ELECTRONIC GmbH
Benzstrasse 28
8039 Puchheim, Germany
Phone (49) 89-80960

The products identified in this catalogue are keyed to the supply locations listed on this page. For ease of ordering, contact your local Vishay representative or one of the specific locations noted above.

November 14/97

Michael did these in word