

AVTECH ELECTROSYSTEMS LTD.

NANOSECOND WAVEFORM ELECTRONICS
ENGINEERING . MANUFACTURING

□ P.O. BOX 265
OGDENSBURG
NEW YORK
13669
(315) 472-5270

✕
BOX 5120 STN. "F"
OTTAWA, ONTARIO
CANADA K2C 3H4
(613) 226-5772
TELEX 053.4591

INSTRUCTIONS

MODEL AV-108A-C-M PULSE GENERATOR


S.N.:

WARRANTY

Avtech Electrosystems Ltd. warrants products of its manufacture to be free from defects in material and workmanship under conditions of normal use. If, within one year after delivery to the original owner, and after prepaid return by the original owner, this Avtech product is found to be defective, Avtech shall at its option repair or replace said defective item. This warranty does not apply to units which have been disassembled, modified or subjected to conditions exceeding the applicable specifications or ratings. This warranty is the extent of the obligation or liability assumed by Avtech with respect to this product and no other warranty or guarantee is either expressed or implied.


Fig. 1

PULSE GENERATOR TEST ARRANGEMENT

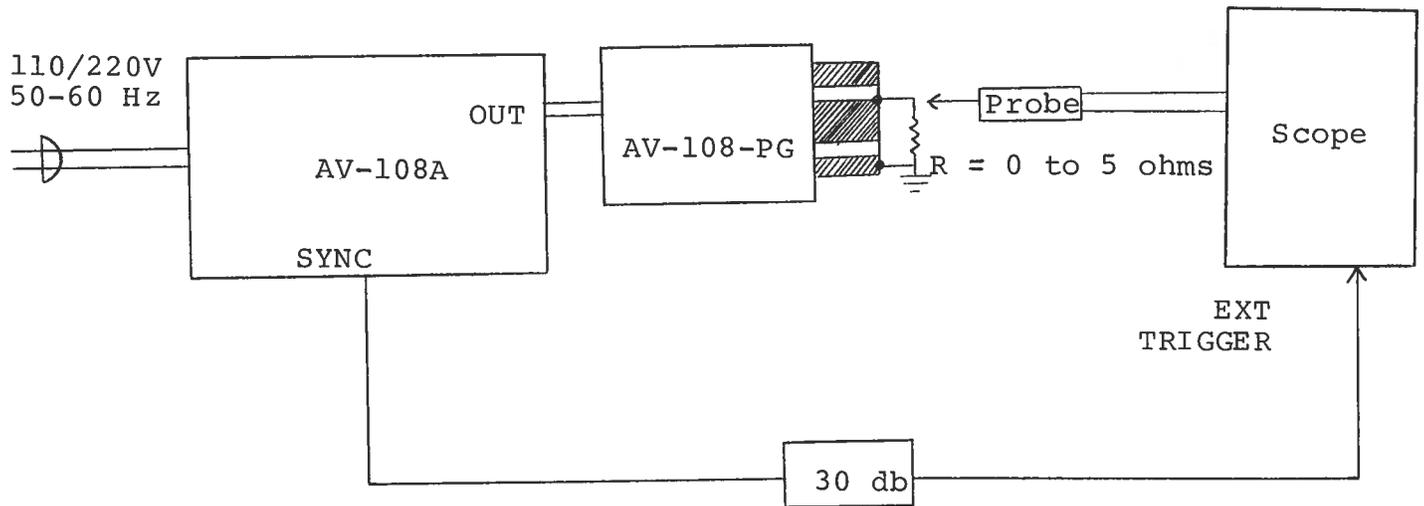


GENERAL OPERATING INSTRUCTIONS

- 1) The equipment should be connected in the general fashion shown above. Since the unit provides an output pulse rise time as low as 10 nsec a fast oscilloscope (at least 50 MHz and preferably 200 MHz) should be used to display the waveform. Alternatively, the output current may be monitored using a current probe such as the TEKTRONIX Model CT-2.
- 2) The sync output channel provides TTL level signals. To avoid overdriving the TRIG input channel of some sampling scopes, a 30 db attenuator should be placed at the input to the sampling scope trigger channel.
- 3) To obtain a stable output display the PRF and PRF FINE controls on the front panel should be set mid-range. The front panel TRIG toggle switch should be in the INT position. The front panel DELAY control and the scope triggering controls are then adjusted to obtain a stable output. The scope may then be used to set the desired PRF by rotating the PRF and PRF FINE controls. The main output is delayed with respect to the SYNC output by about 0 to 1 usec depending on the DELAY control setting.
- 4) The output terminals of the pulse generator module consists of a short length of microstrip transmission line protruding from the module chassis. The OUT terminal is the center conductor which is bounded on both sides by the ground plane (see below):

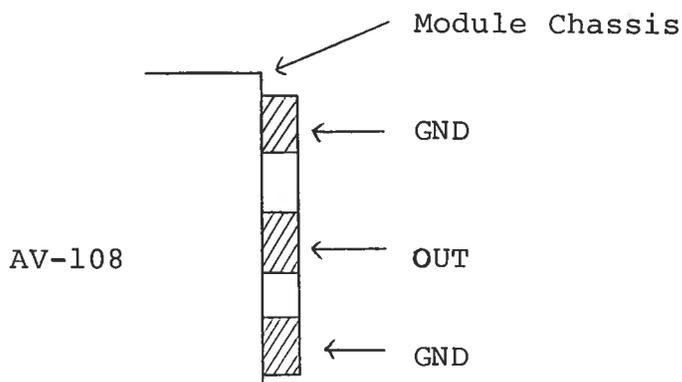

The load should be connected between the OUT and GND terminals using very short leads (≤ 0.5 cm). The voltage across the load may be monitored by connecting a length of 80 mil semi-rigid 50 ohm cable as shown below (or by means of a high impedance scope probe). The current may be monitored using a current probe such as the TEKTRONIX Model CT-2.

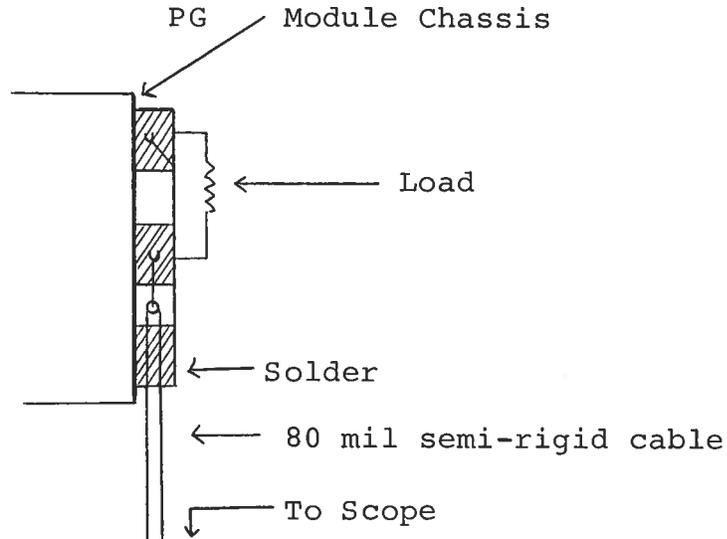

Take care to insure that during soldering the OUT conductor is not shorted to the chassis. Also, use minimal heat when soldering.


- 5) M Option. The SMA output port (M) on the AV-108-PG module provides a replica of the output pulse (when connected to a fifty ohm load). The output pulse load current and the M output voltage are related as follows:

$$I_{LOAD} = 20 V_M$$

- 6) CAUTION: The AV-108-C unit is designed to provide 0 to +10 ampere pulses to a load voltage in the range of 0 to +50 volts. If possible, the load voltage should be monitored as near as possible to 50 volts (eg. by adding series resistance) since this reduces the heating of the output switching elements and thus reduces the likelihood of failure of the SL121 switching elements (see Repair Section).

Fig. 2


FRONT PANEL CONTROLS

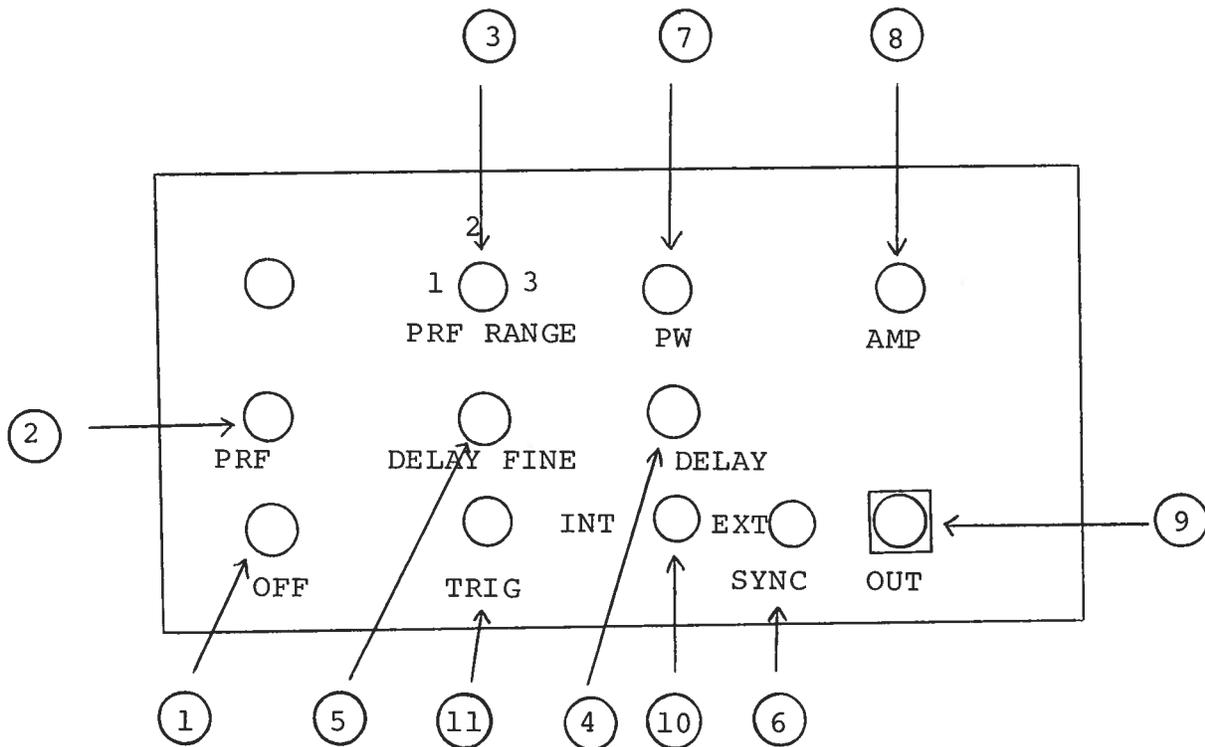


- (1) ON-OFF Switch. Applies basic prime power to all stages.
- (2) PRF Control. Varies PRF from about 20 Hz to about 300 Hz (RANGE 1), 20 Hz to 2 KHz (RANGE 2) and 20 Hz to 20 KHz (RANGE 3). The PRF should be set using an oscilloscope.
- (4) DELAY Control. Controls the relative delay between the reference output pulse provided at the SYNC output (6) and the main output (9). This delay is variable over the range of about 0 to about 1 usec.
- (5) SYNC Output. This output precedes the main output (9) and is used to trigger the sampling scope time base. The output is a TTL level 100 nsec (approx.) pulse capable of driving a fifty ohm load.
- (6) PW Control. A one turn control which varies the output pulse width from 30 nsec to 200 nsec.
- (7) AMP Control. The output pulse amplitude is controlled by means of the one turn potentiometer (AMP).
- (8) OUT Connector. A multi pin connector which attaches the 2 foot cable from the pulse generator module to the main frame.
- (9) EXT-INT Control. With this toggle switch in the INT position, the PRF of the unit is controlled via an internal clock which in turn is controlled by the PRF controls. With the toggle switch in the EXT position, the unit requires a 0.2 usec TTL level pulse applied at the TRIG input in order to trigger the output stages. In addition, in this mode, the scope time base must be triggered by the external trigger source.
- (10) TRIG Input. The external trigger signal is applied at this input when the EXT toggle switch is in the EXT position. The output pulse appears about 60 nsec after the application of the TRIG pulse.

Fig. 3

BACK PANEL CONTROLS

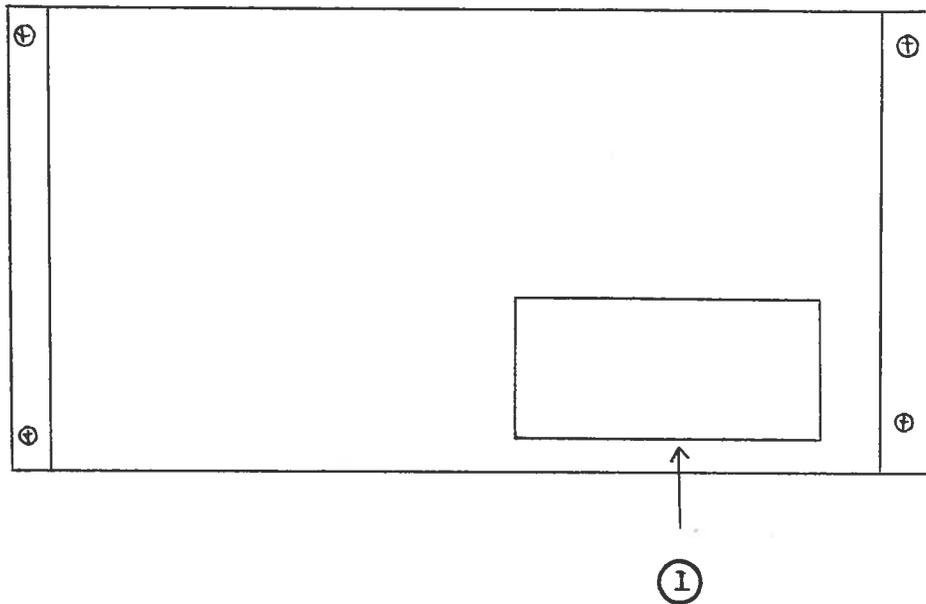

- (1) FUSED CONNECTOR, VOLTAGE SELECTOR. The detachable power cord is connected at this point. In addition, the removable cord is adjusted to select the desired input operating voltage. The unit also contains the main power fuse.

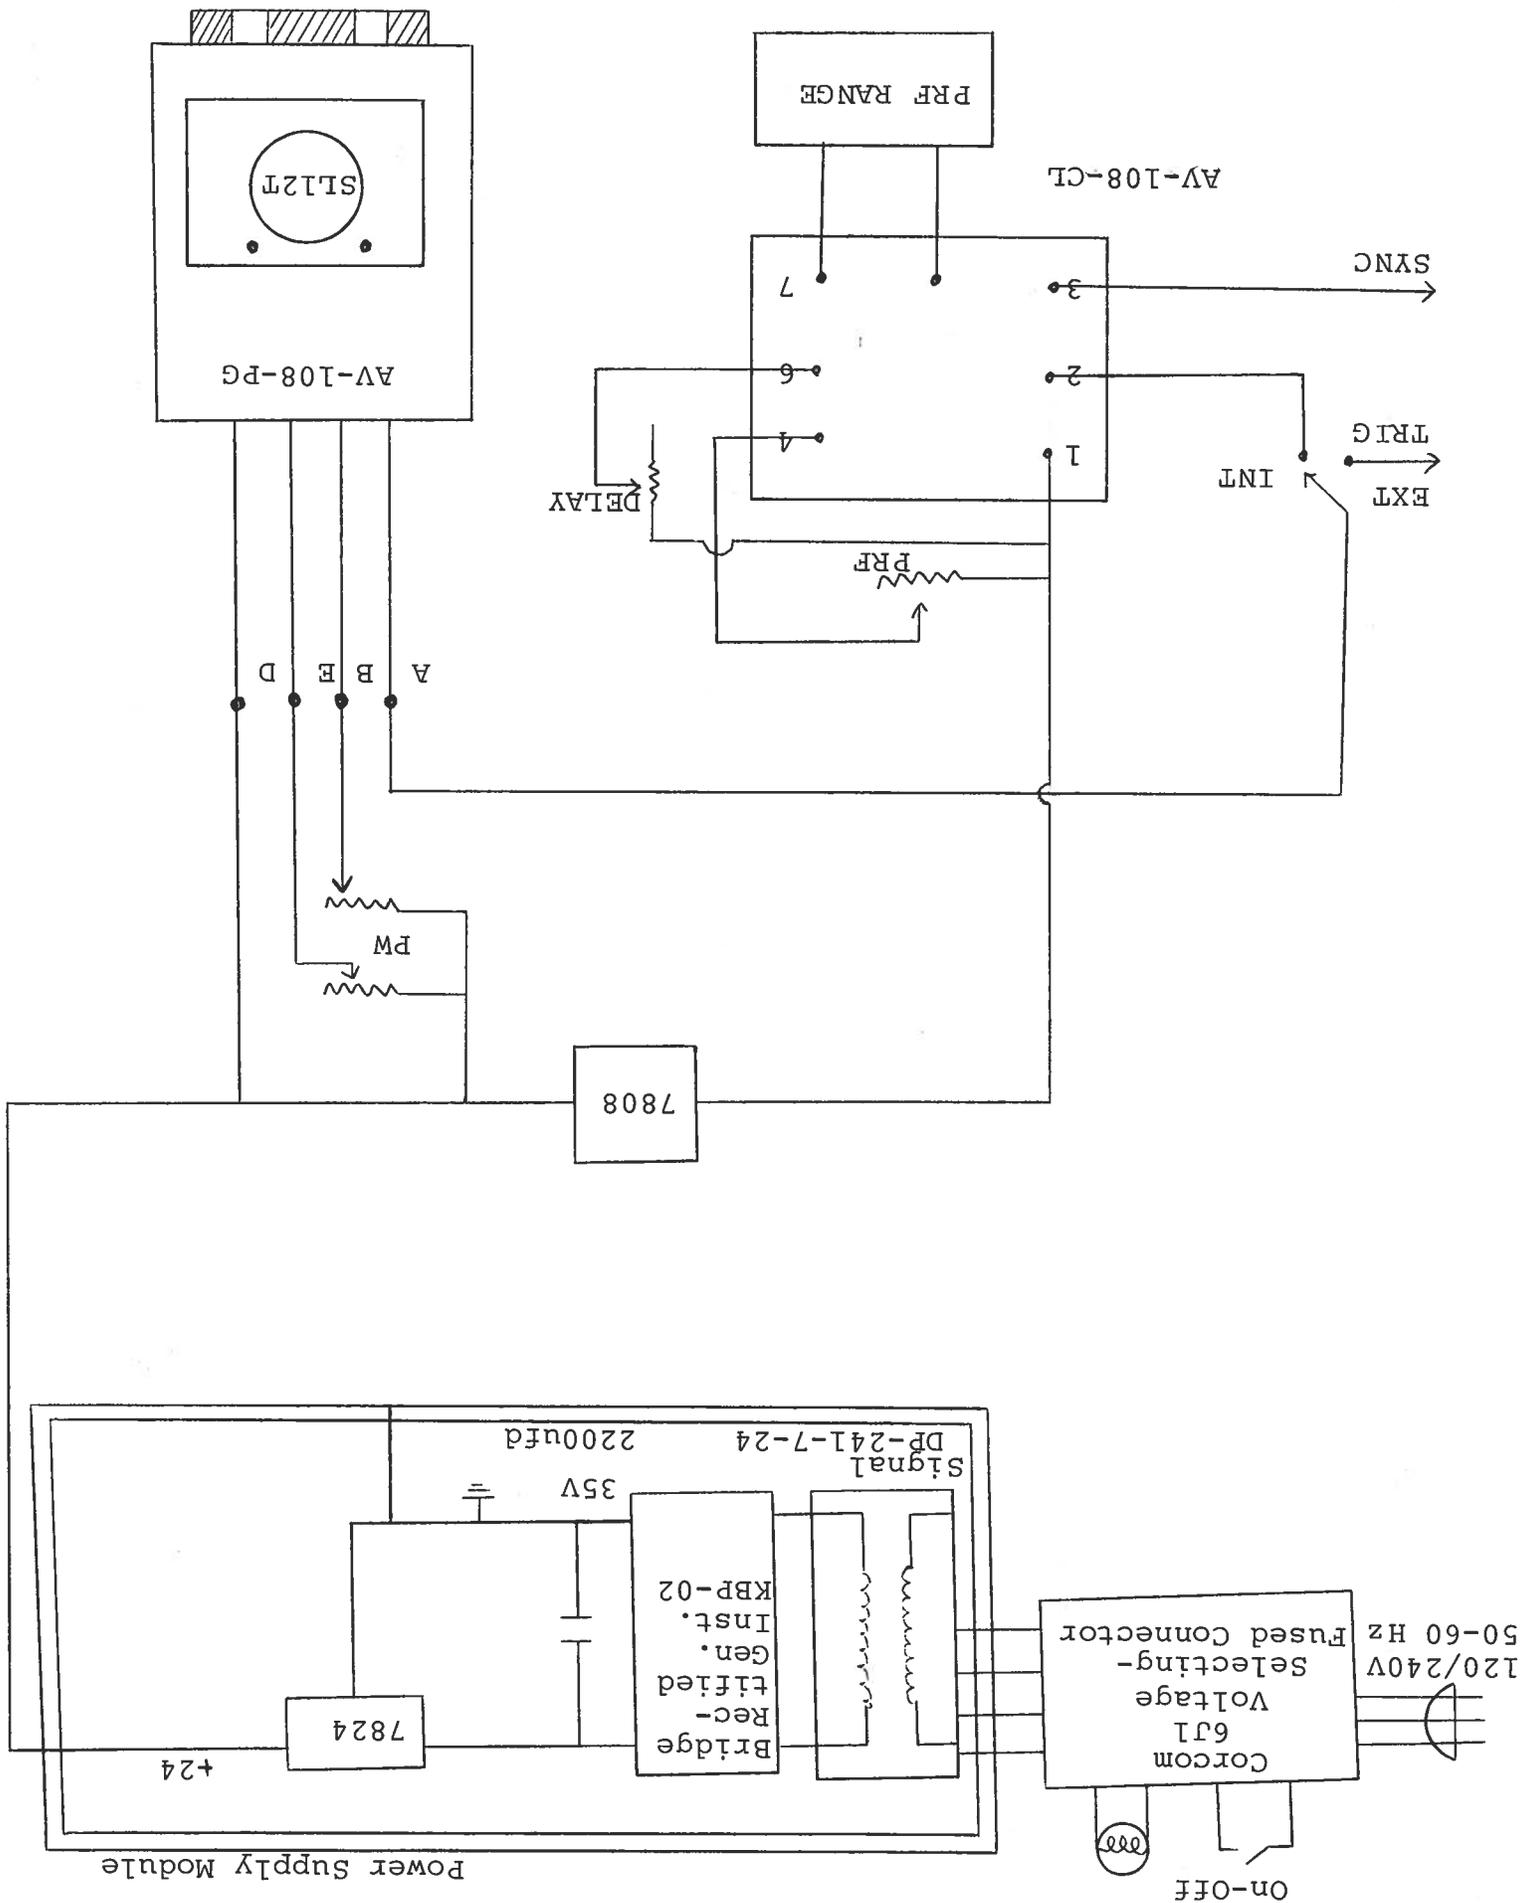

SYSTEM DESCRIPTION AND REPAIR PROCEDURE

The AV-108-C unit consists of the following basic modules:

- 1) AV-108-PG pulse generator module
- 2) AV-108-CL clock module
- 3) +24V power supply board

The modules are interconnected as shown in Fig. 4.

The clock module controls the output PRF and the relative delay between the main output and the SYNC outputs. The PG pulse generator module generates the output pulse. In the event of an instrument malfunction, it is most likely that some of the output switching elements (SL12T) may have failed due to an output short circuit condition or to a high duty cycle condition. The switching elements may be accessed by removing the cover plate on the bottom side of the AV-108-PG module. The cover plate is removed by removing the four counter sunk 6-32 Phillips screws. NOTE: First turn off the prime power. The elements may be removed from their sockets by means of a needle nosed pliers after removing the four counter sunk 2-56 Phillips screws which attach the small aluminum heat sinks to the body of the AV-108-PG module. The SL12T is a selected VMOS power transistor in a TO 220 package and may be checked on a curve tracer. If defective, replacement units should be ordered directly from Avtech. When replacing the SL12T switching elements, take care to insure that the short lead (of the three leads) is adjacent to the black dot on the chassis. The SL12T elements are electrically isolated from the small aluminum heat sinks but are bonded to the heat sinks using WAKEFIELD TYPE 155 HEAT SINK ADHESIVE. If the switching elements are not defective, then the four Phillips screws on the back panel should be removed. The top cover may then be slid off and the operation of the clock and power supply modules checked. The clock module is functioning properly if:

- a) 0.1 usec TTL level outputs are observed at pins 2 and 3.
- b) The PRF of the outputs can be varied over the range of 20 Hz to 20 KHz using the PRF controls.
- c) The relative delay between the pin 2 and 3 outputs can be varied by at least 1 usec by the DELAY control.

The sealed clock module must be returned to Avtech for repair or replacement if the above conditions are not observed. The power supply board generates +24V DC to power the other modules. If the voltage is less than +24V, turn off the prime power and unsolder the lead from the 7824 regulator chip on the power supply board. Solder a 100 ohm 5 watt resistor to the 7824 output to ground and turn on the prime power. A voltage of +24 volts should be read. If the voltage is less then the power supply board is defective and should be repaired or replaced.

Schroff 09.20.85 (Edition A)

Saved in word as of oct 8/97

File: C:\INSTRUCT\AV-1\08ACMA.DOC

Note: File not adjusted

The modules are interconnected as shown in fig. 4.

The clock module controls the output rate and the relative delay between the main output and the 10MHz output. The 10MHz generator module generates the output pulse. In the event of an interrupt, the 10MHz generator may have fallen out of phase with the output. This may be corrected by means of an output short circuit condition or a high duty cycle condition. The switching sequence may be accessed by removing the cover plate on the bottom side of the AV-108-01 module. The cover plate is removed by removing the four screws and the 10MHz generator module is removed from the main power. The elements may be removed from their sockets by means of a needle nose pliers after removing the four screws and 2-5/16 Phillips screws which attach the main aluminum heat sink to the body of the AV-108-01 module. The 10MHz generator is a selected VCO power generator to a 10 MHz package and may be replaced or a spare taken from AV-108-01. When replacing the 10MHz generator, take care to ensure that the short lead for the 10MHz generator is adjacent to the black dot on the connector. The 10MHz generator is electrically connected from the main aluminum heat sink but is isolated from the heat sink using WAFER-LED TYPE 155 HEAT SINK ADHESIVE. The switching sequence is not defective. The four Phillips screws on the back panel should be removed. The top cover may then be lifted off and the location of the clock and power supply modules checked. The clock module is functioning properly if:

- a) 0.1 μ s level jitter is observed at pins 2 and 3.
- b) The PPS of the output can be varied over the range of 10 to 1000 using the 10MHz generator.
- c) The relative delay between the PPS and 10MHz outputs can be varied by at least 1 μ s by the 10MHz generator.

The clock module and the 10MHz generator are not observed. The replacement of the 10MHz generator is not observed. The power supply board generator 10MHz is to power the other modules. If the voltage is less than 1.5V, turn off the main power and monitor the load from the 10MHz generator. The power supply board should be replaced. The 10MHz generator is to power the 10MHz output. The 10MHz generator is to power the 10MHz output. A voltage of 1.5V or less should be read. If the voltage is less than the power supply board is defective and should be replaced.