

AVTECH ELECTROSYSTEMS LTD.

NANOSECOND WAVEFORM ELECTRONICS
ENGINEERING - MANUFACTURING

□ P.O. BOX 265
OGDENSBURG
NEW YORK
13669
(315) 472-5270

✕
□ BOX 5120, STN. "F"
OTTAWA, ONTARIO
CANADA K2C 3H4
TEL: (613) 226-5772
FAX: (613) 226-2802
TELEX: 053-4591

INSTRUCTIONS

MODEL AVR-3-PW-PS-P-TE1 PULSE GENERATOR


S.N. :

WARRANTY

Avtech Electrosystems Ltd. warrants products of its manufacture to be free from defects in material and workmanship under conditions of normal use. If, within one year after delivery to the original owner, and after prepaid return by the original owner, this Avtech product is found to be defective, Avtech shall at its option repair or replace said defective item. This warranty does not apply to units which have been disassembled, modified or subjected to conditions exceeding the applicable specifications or ratings. This warranty is the extent of the obligation or liability assumed by Avtech with respect to this product and no other warranty or guarantee is either expressed or implied.

A.

TEST ARRANGEMENT

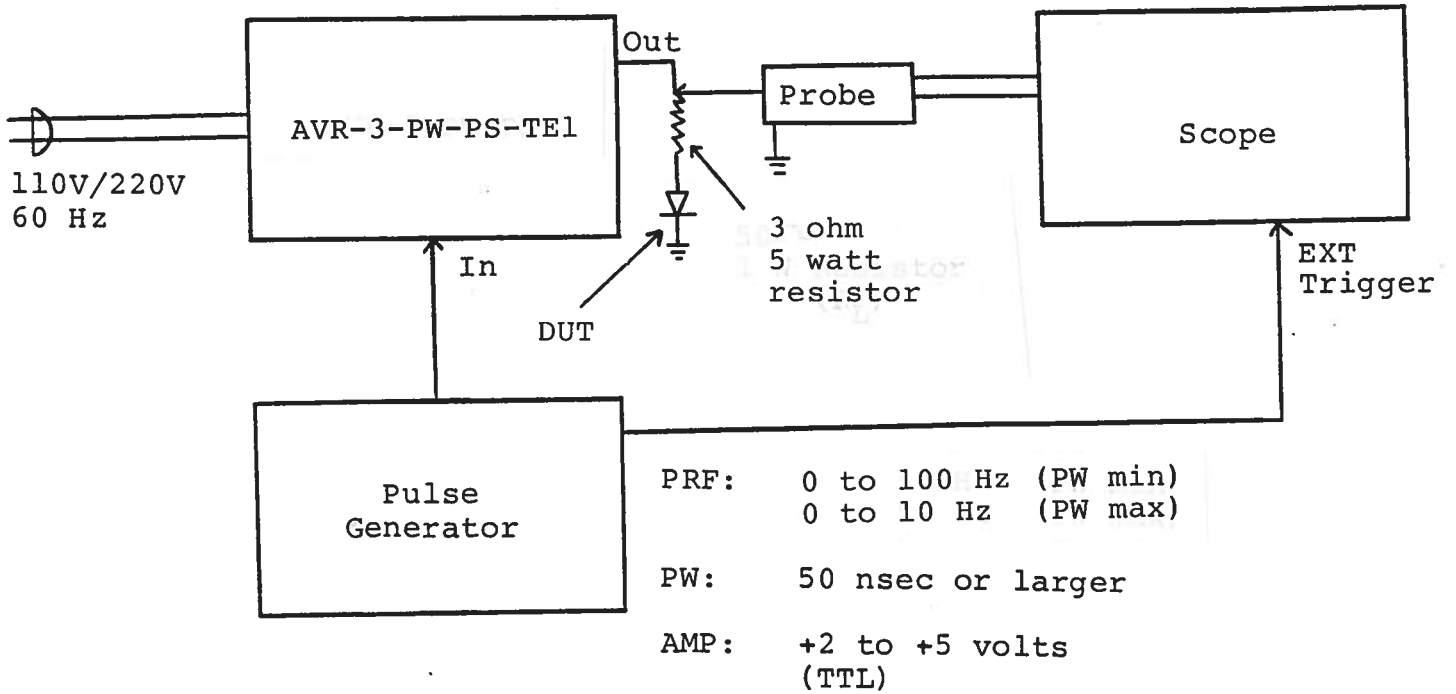


GENERAL OPERATING INSTRUCTIONS


- 1) The equipment should be connected in the general fashion shown above. Since the AVR unit provides an output pulse rise time as low as 30 nsec a fast oscilloscope (at least 50 MHz) should be used to display the waveform. A resistance of about 3 ohm should be placed in series with the diode load. The resistance is required to limit the current since the pulse generator source impedance is extremely low (< 1.0 ohm).
- 2) The output PRF is equal to the input trigger pulse PRF.
- 3) The output pulse width is controlled by the one turn PW control. The max allowable PRF is as follows (10% max duty cycle):

PW MAX:	PRF max 10 Hz
PW MIN:	PRF max 100 Hz
- 4) The output amplitude is controlled by the one turn AMP control.
- 5) CAUTION: The maximum PRF, PW or duty cycle conditions must not be exceeded. Under simultaneous conditions of wide pulse width, high PRF and high load current, the bias voltage applied to the output power stage decreases and as a result the attainable output peak voltage decreases to less than 20 volts. Under conditions of severe loading the output stage may be damaged. The output switching elements can be replaced following the procedure given in the following section.
- 6) The unit may be operated in a manual one-shot mode by placing the front panel switch in the MAN position and pressing the single pulse button.
- 7) The AVR unit can be converted from 110 to 220V 50-60 Hz operation by adjusting the voltage selector card in the rear panel fused voltage selector-cable connector assembly.

C.

SYSTEM BLOCK DIAGRAM

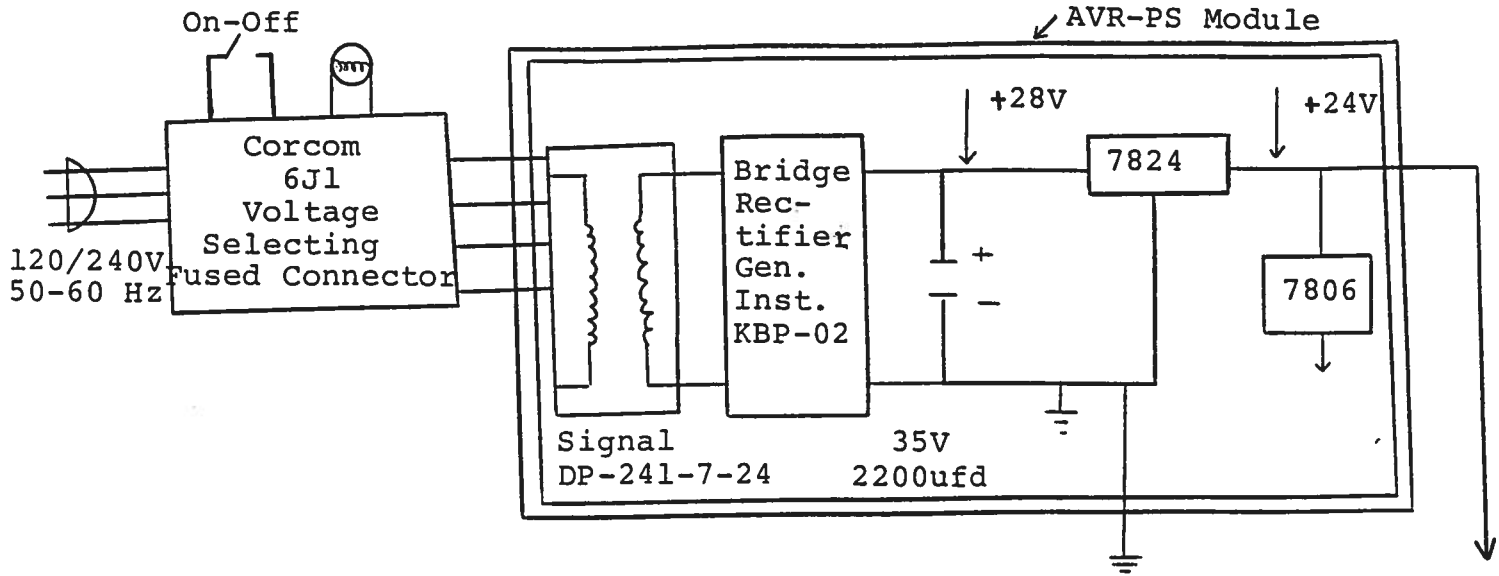

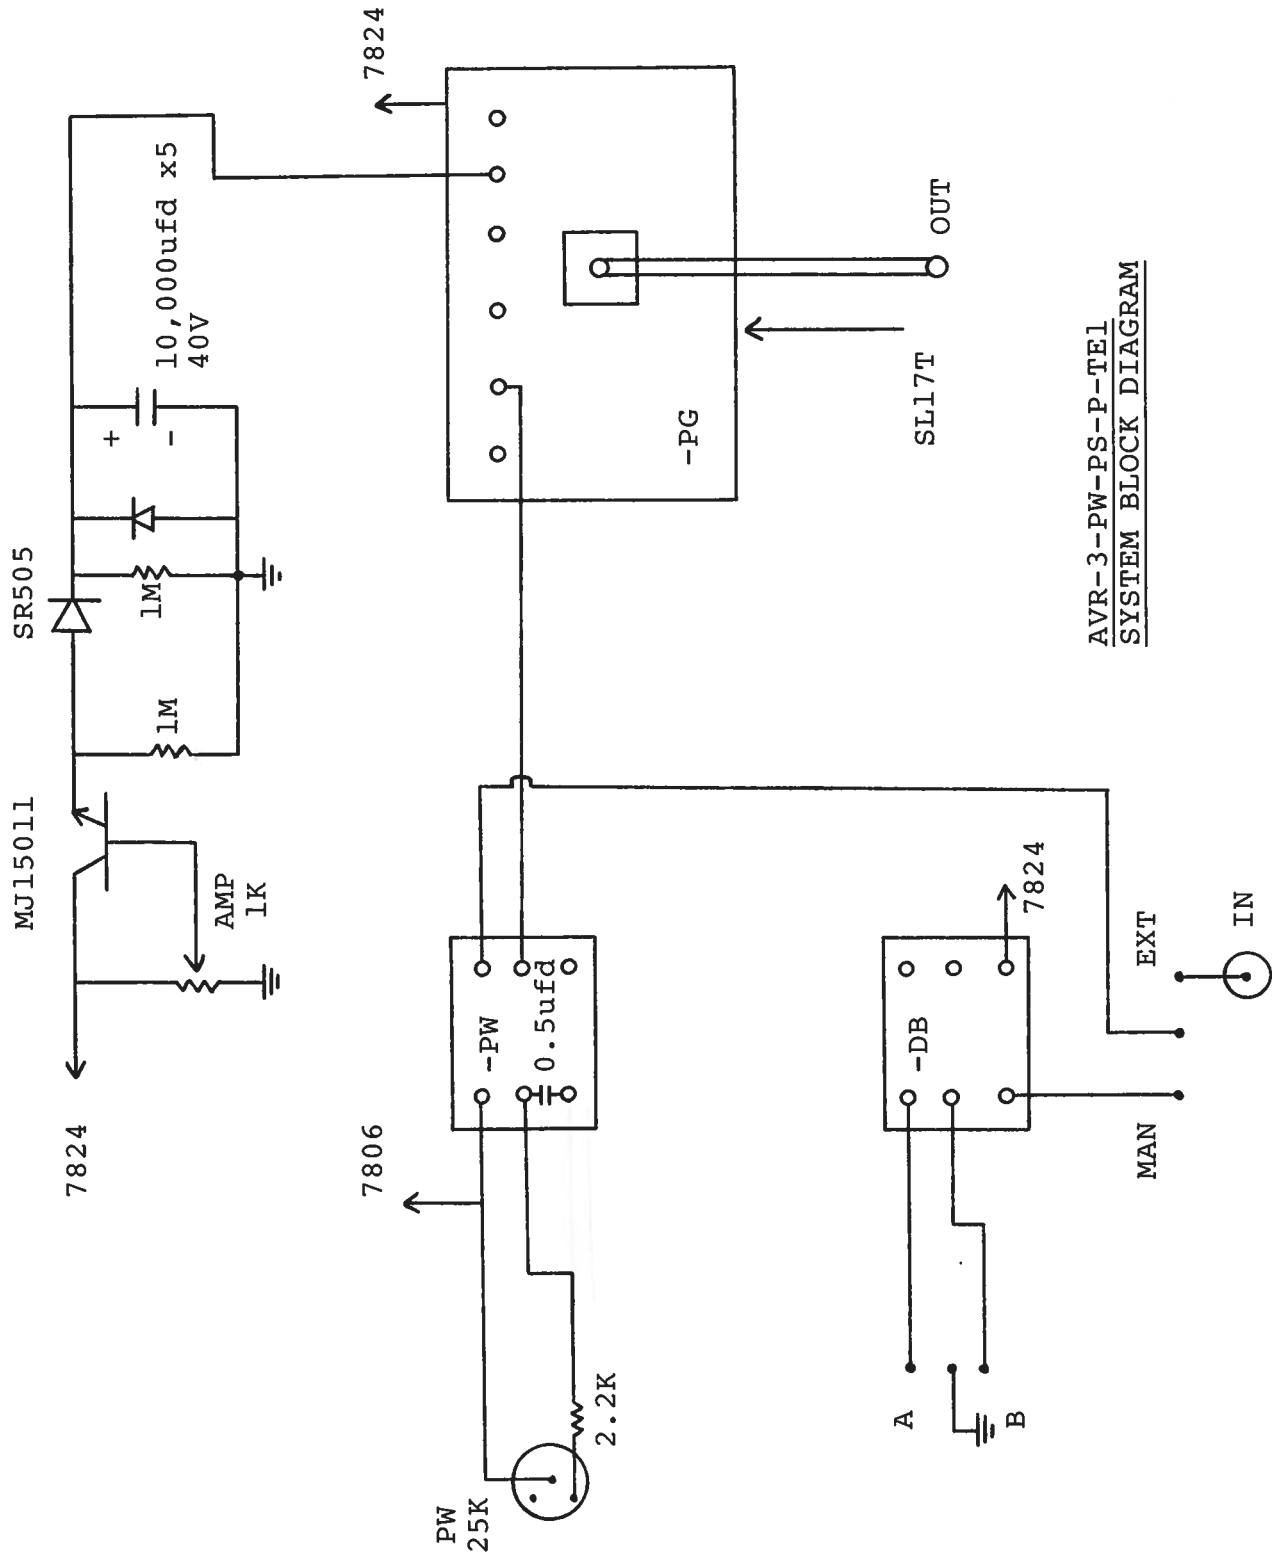

AVR-3-PW-PS-P-TEL
SYSTEM BLOCK DIAGRAM

SYSTEM DESCRIPTION AND REPAIR PROCEDURE

The AVR-3-PW-PS-TE1 consists of the following basic modules:

- 1) AVR-3-PG-TE1 pulse generator module
- 2) -PW pulse width module
- 3) -DB one shot module
- 4) +24V power supply board

The modules are interconnected as shown in Fig. 4. In the event of an instrument malfunction, it is most likely that the rear panel 0.5A SB fuse or some of the output switching elements (SL17T) may have failed due to an output short circuit condition or to a high duty cycle condition. The switching elements may be accessed by removing the cover plate on the bottom side of the instrument. NOTE: First turn off the prime power. The elements may be removed from their sockets by means of a needle nosed pliers. The SL17T is a selected VMOS power transistor in a TO 220 packages and may be checked on a curve tracer. If defective, replacement units should be ordered directly from Avtech. When replacing the SL17T switching elements, take care to insure that the short lead (of the three leads) is adjacent to the black dot on the chassis. If the switching elements are not defective, then the four Phillips screws on the back panel should be removed. The top cover may then be slid off and operation of the power supply modules should be checked. The power supply board generates +24V DC to power the other modules. If the voltage is less than +24V, turn off the prime power and unsolder the lead from the 7824 regulator chip on the power supply board. Solder a 100 ohm 5 watt resistor to the 7824 output to ground and turn on the prime power. A voltage of +24 volts should be read. If the voltage is less then the power supply board is defective and should be repaired or replaced.

Schroff

12.03.90

11

[Faint, illegible text, likely bleed-through from the reverse side of the page]