

AVTECH ELECTROSYSTEMS LTD.

NANOSECOND WAVEFORM ELECTRONICS
ENGINEERING - MANUFACTURING

P.O. BOX 265
OGDENSBURG
NEW YORK
13669
(315) 472-5270

BOX 5120, STN. "F"
OTTAWA, ONTARIO
CANADA K2C 3H4
TEL: (613) 226-5772
FAX: (613) 226-2802
TELEX: 053-4591

INSTRUCTIONS

MODEL AVR-3-PW-PS-RIA PULSE GENERATOR


S.N. :

WARRANTY

Avtech Electrosystems Ltd. warrants products of its manufacture to be free from defects in material and workmanship under conditions of normal use. If, within one year after delivery to the original owner, and after prepaid return by the original owner, this Avtech product is found to be defective, Avtech shall at its option repair or replace said defective item. This warranty does not apply to units which have been disassembled, modified or subjected to conditions exceeding the applicable specifications or ratings. This warranty is the extent of the obligation or liability assumed by Avtech with respect to this product and no other warranty or guarantee is either expressed or implied.

A.

TEST ARRANGEMENT

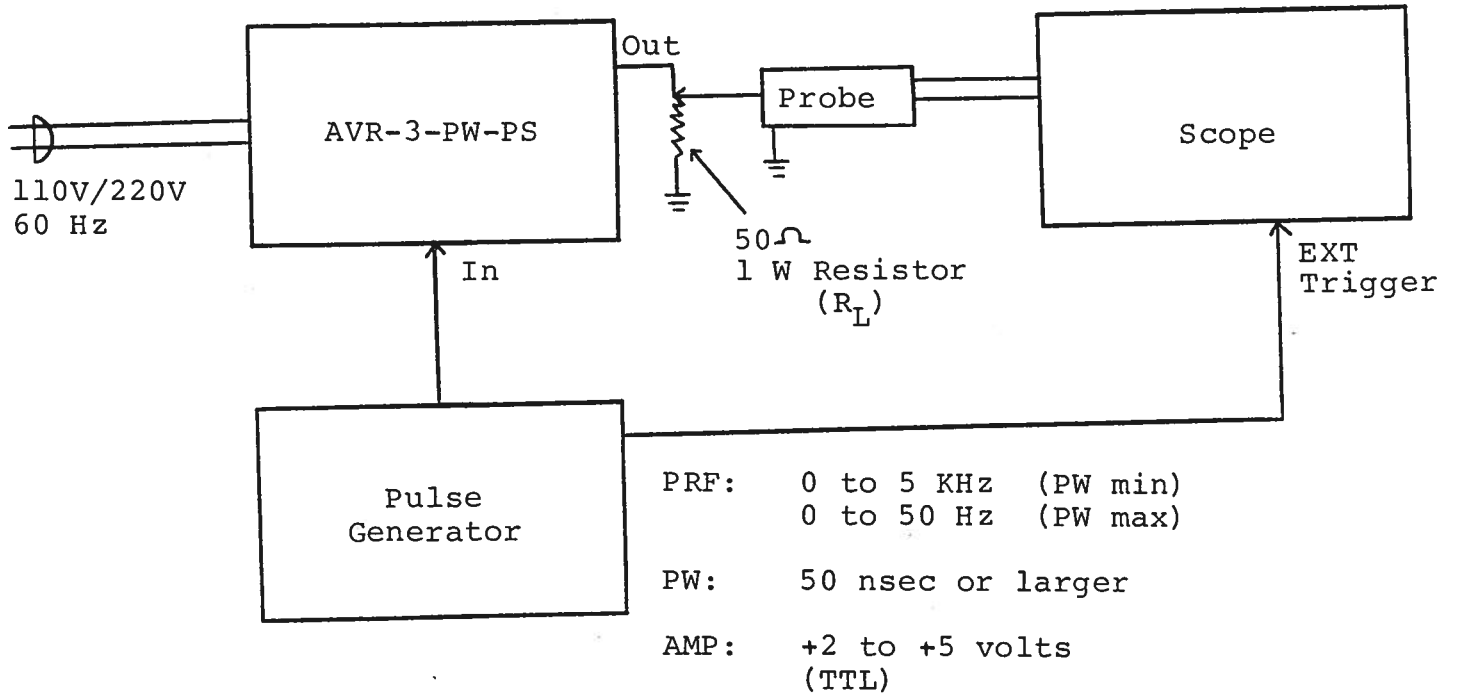

GENERAL OPERATING INSTRUCTIONS

- 1) The equipment should be connected in the general fashion shown above. Since the AVR unit provides an output pulse rise time as low as 10 nsec a fast oscilloscope (at least 50 MHz and preferably 200 MHz) should be used to display the waveform. Also, if a load of other than 50 ohm is employed, the length of coaxial cable between the AVR unit and the load should not exceed about 5 feet or the output waveform may be degraded by the resulting reflections.
- 2) The output PRF is equal to the input trigger pulse PRF.
- 3) With the mode switch in the A position, the output pulse width is controlled by the one turn PW control and the 3 position range switch as follows. The max allowable PRF for each range is also shown:


	PW	PRF
RANGE 1	0.1 usec to 1.0 usec	5 KHz
RANGE 2	1.0 usec to 10 usec	5 KHz to 500 Hz
RANGE 3	10 usec to 100 usec	500 Hz to 50 Hz

- 4) To voltage control the output pulse width within each range, remove the jumper wire between banana plugs A and B on the back panel and apply 0 to +10V to connector B ($R_{IN} \geq 10K$). (option).
- 5) With the AB mode switch in the B position, the output pulse width is equal to the input trigger pulse width.
- 6) The output amplitude is controlled by the one turn AMP control.
- 7) To voltage control the output amplitude, remove the jumper wire between banana plugs A and B on the back panel and apply 0 to +10V to connector B ($R_{IN} \geq 10K$). (option).
- 8) **CAUTION:** The maximum PRF, PW or duty cycle conditions must not be exceeded. Under simultaneous conditions of wide pulse width, high PRF and high load current, the bias voltage applied to the output power stage decreases and as a result the attainable output peak voltage decreases to less than 200 volts. Under conditions of severe loading the output stage may be damaged. The output switching elements can be replaced following the procedure given below.
- 9) The AVR unit can be converted from 110 to 220V 50-60 Hz operation by adjusting the voltage selector card in the rear panel fused voltage selector-cable connector assembly.

C.

SYSTEM BLOCK DIAGRAM AND REPAIR PROCEDURE


(NON EA & EW UNITS)

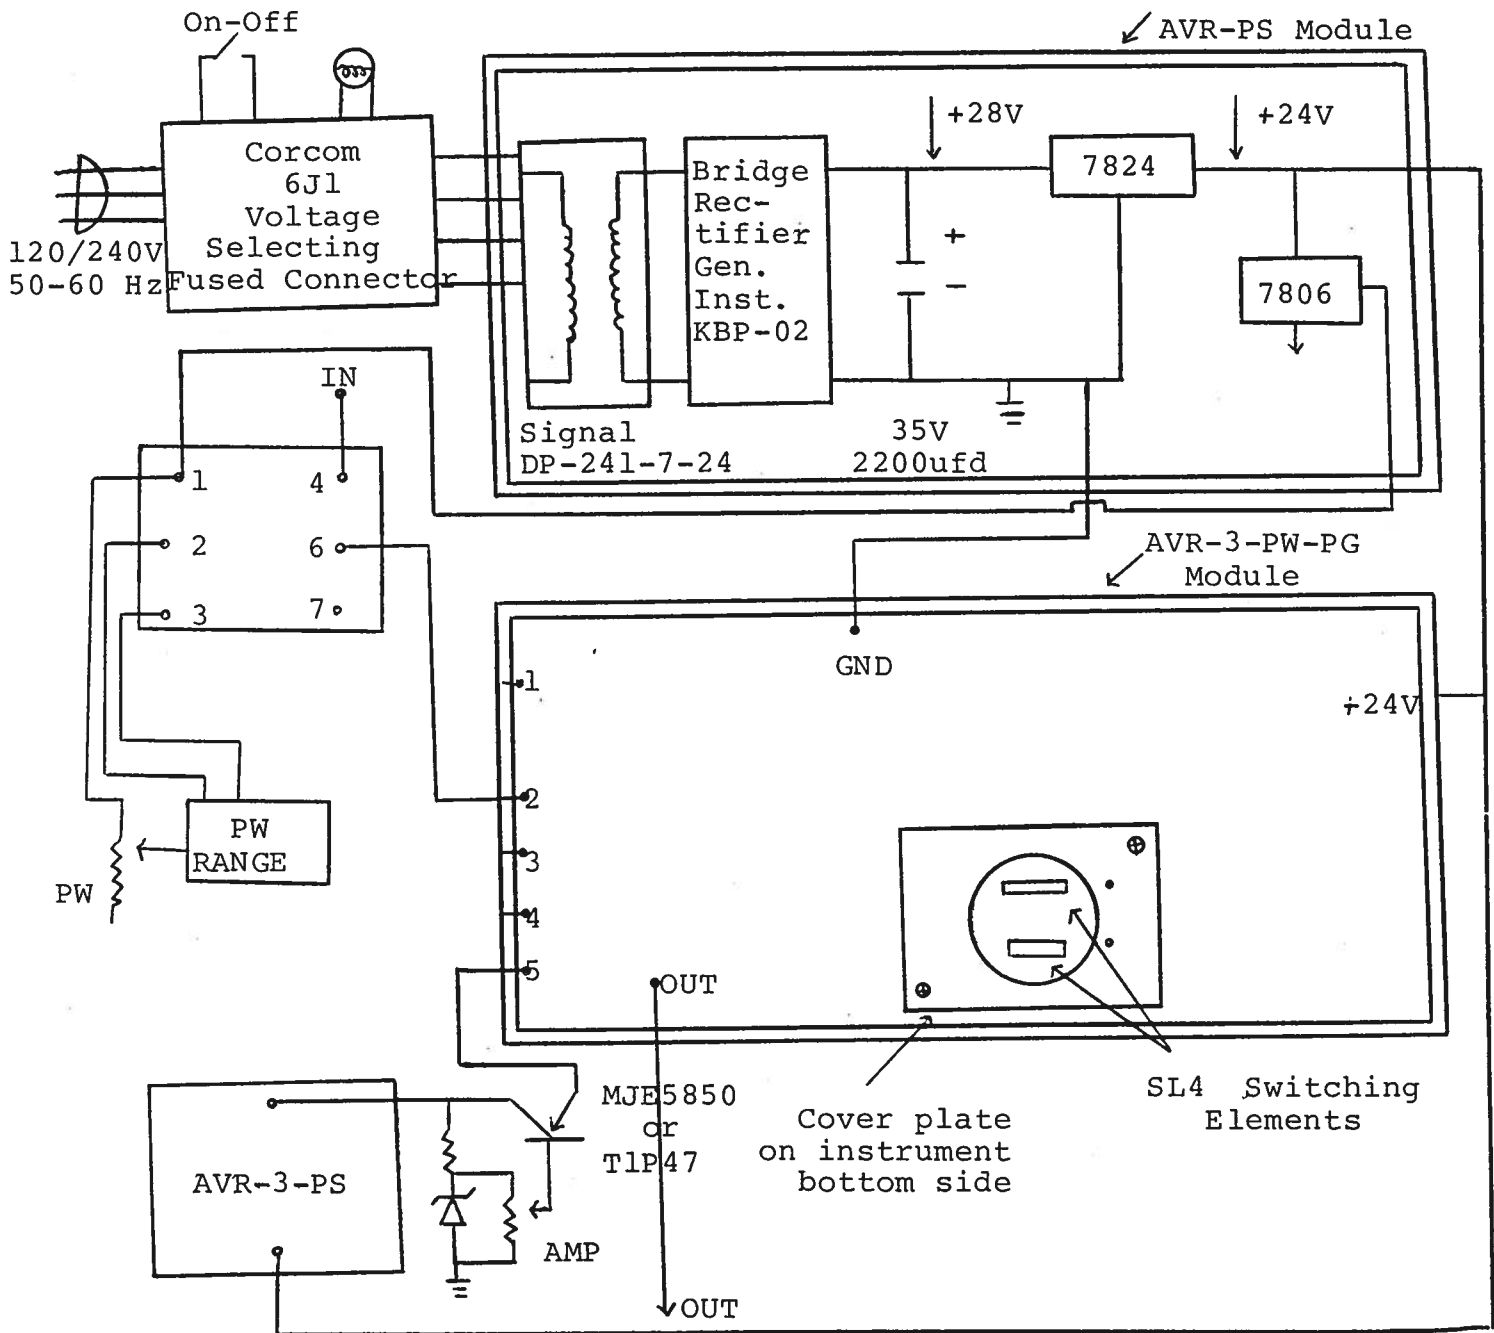

C.

SYSTEM BLOCK DIAGRAM

(EA, EW OPTION UNITS)

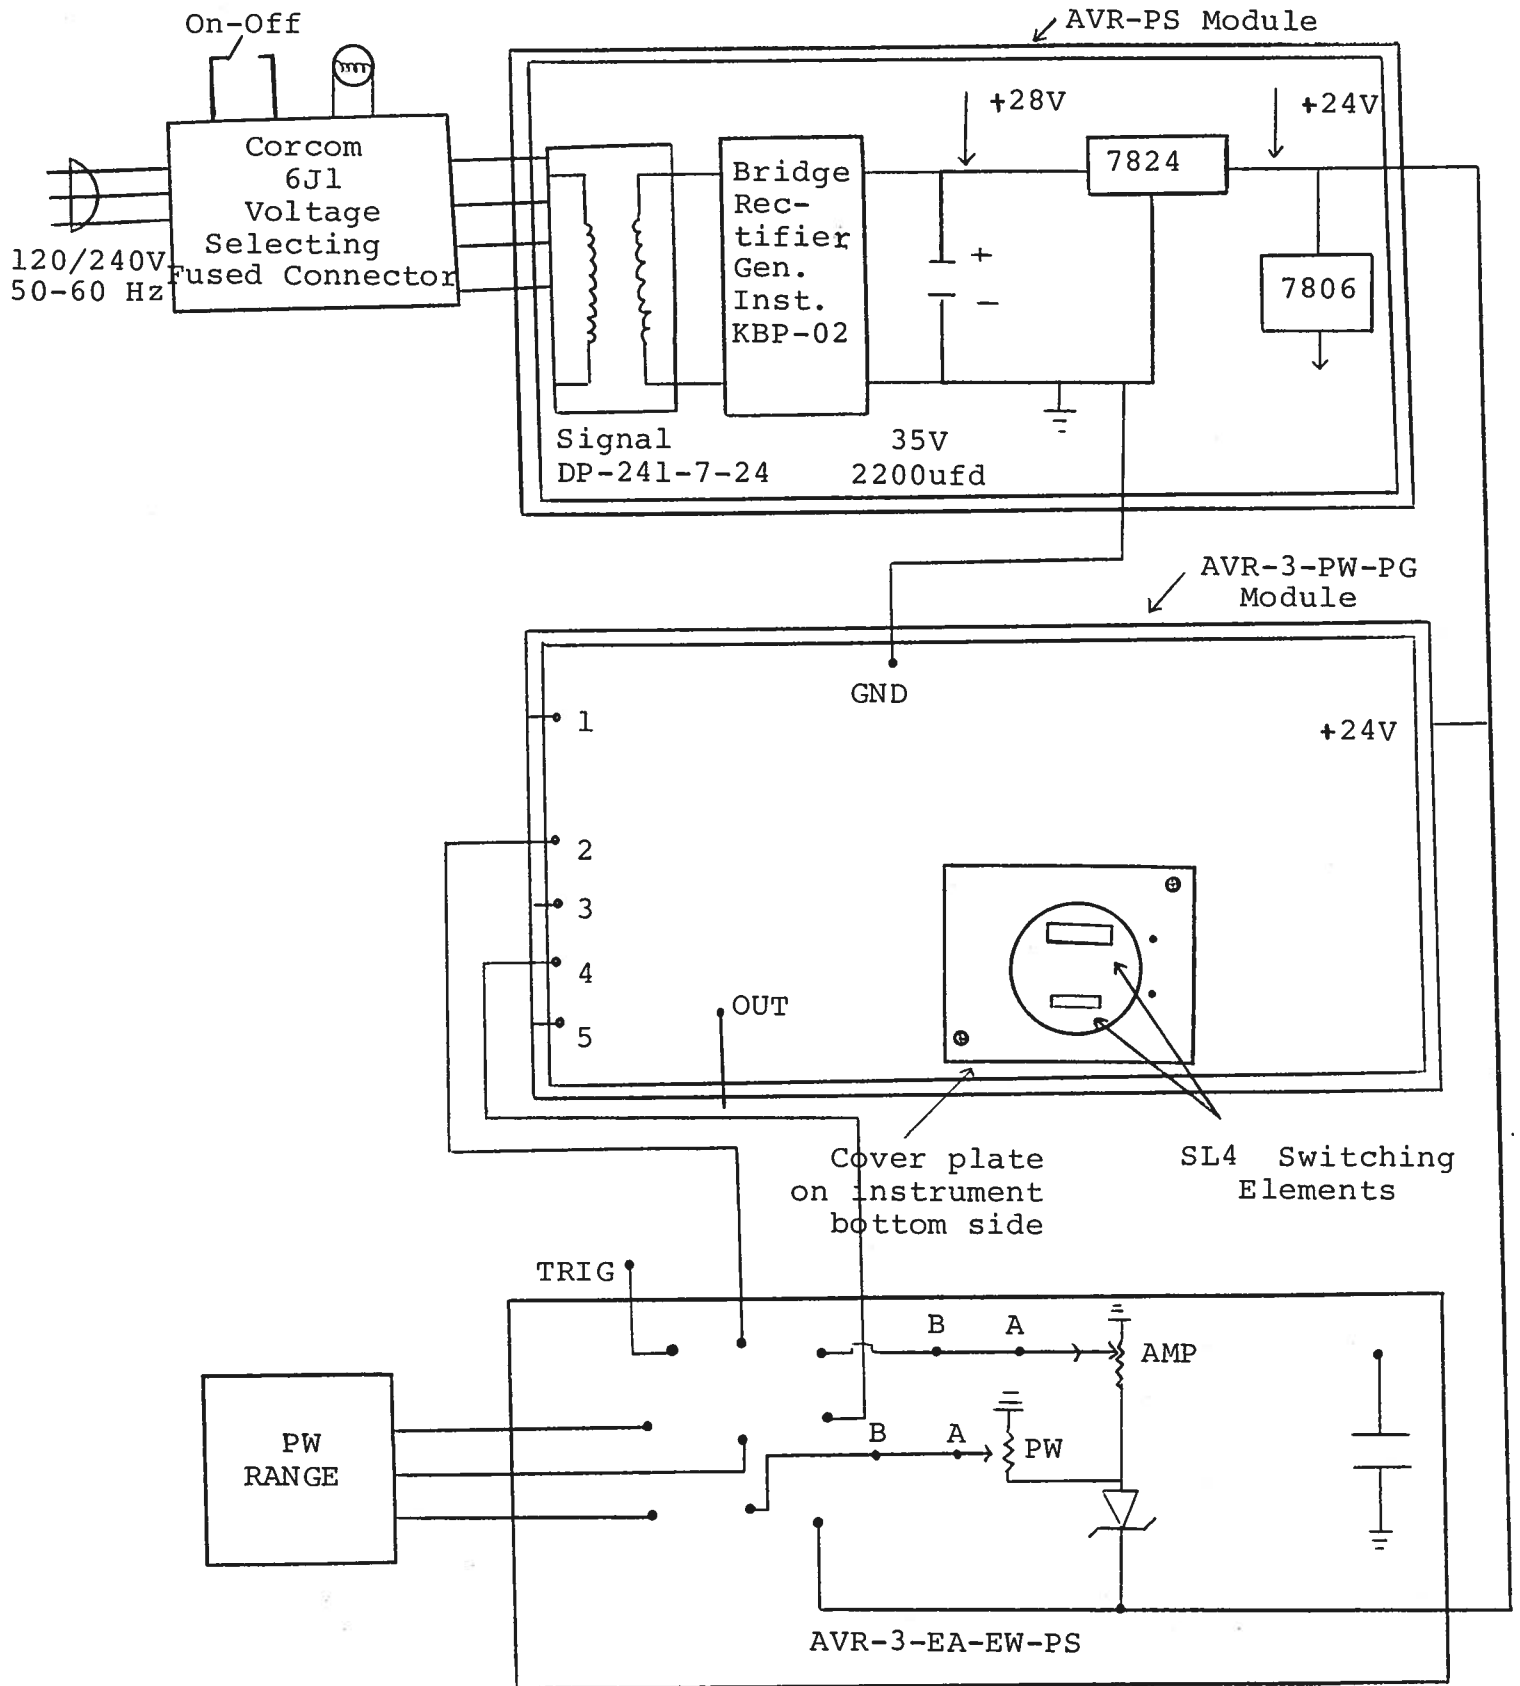

SYSTEM DESCRIPTION AND REPAIR PROCEDURE

The AVR-3-PW-PS consists of the following basic modules:

- 1) AVR-3-PW-PG pulse generator module
- 2) +24V power supply board
- 3) AVR-3-PS power supply module
- 4) AVR-3-PW pulse width module

The modules are interconnected as shown in Fig. 4. In the event of an instrument malfunction, it is most likely that the rear panel 1.0A SB fuse or some of the output switching elements (SL4) may have failed due to an output short circuit condition or to a high duty cycle condition. The switching elements may be accessed by removing the cover plate on the bottom side of the instrument. NOTE: First turn off the prime power. The elements may be removed from their sockets by means of a needle nosed pliers. The SL4 is a selected VMOS power transistor in a TO 220 packages and may be checked on a curve tracer. If defective, replacement units should be ordered directly from Avtech. When replacing the SL4 switching elements, take care to insure that the short lead (of the three leads) is adjacent to the black dot on the chassis. If the switching elements are not defective, then the four Phillips screws on the back panel should be removed. The top cover may then be slid off and operation of the power supply modules should be checked.

The power supply board generates +24V DC to power the other modules. If the voltage is less than +24V, turn off the prime power and unsolder the lead from the 7824 regulator chip on the power supply board. Solder a 100 ohm 5 watt resistor to the 7824 output to ground and turn on the prime power. A voltage of +24 volts should be read. If the voltage is less then the power supply board is defective and should be repaired or replaced.

SYSTEM DESCRIPTION AND INITIAL PROBLEMS

The AVR-2-4-8 consists of the following main modules:

- 1) AVR-2-8-1: main control module
- 2) AVR-2-8-2: power supply board
- 3) AVR-2-8-3: power supply board
- 4) AVR-2-8-4: main control module

The modules are interconnected as shown in Fig. 4. In the event of an equipment malfunction, it is most likely that the main control (AVR-2-8-1) has failed due to an internal short circuit. The AVR-2-8-1 has a built-in cycle counter. The switching condition is a high duty cycle condition. The switching element can be accessed by means of the cover plate on the front side of the instrument. After first turning off the main power, the element may be removed from their sockets in a series of a needle-nose pliers. The AVR-2-8-1 is a selected AVR-2-8-1 function in a 10.24 channel and may be checked on a spare program. If defective replacement units should be ordered directly from Avnet when returning the AVR-2-8-1. The AVR-2-8-1 should be checked to insure that the short lead (of the three leads) is attached to the black dot on the board. If the switching element is not defective, then the four switching screws on the back panel should be removed. The four screws are to be slid out and operation of the power supply module restored.

The power supply board generates 125V DC to power the three modules. If the voltage is less than 125V, the AVR-2-8-1 will also power and monitor the load from the AVR-2-8-1 resistor. The AVR-2-8-1 power supply board is a 10.24 channel and will power the AVR-2-8-1 output for timing and for the power board. A voltage of 125V should be applied to the AVR-2-8-1. The AVR-2-8-1 power supply board is a 10.24 channel and will power the AVR-2-8-1.